

TOYOTA

ELECTRICAL WIRING DIAGRAM

Passenger Car 1980



TOYOTA MOTOR SALES CO., LTD.

Pub. No. 98944

TOYOTA

ELECTRICAL WIRING DIAGRAM

Passenger Car 1980

 TOYOTA MOTOR SALES CO., LTD.

Pub.No. 98944

FOREWORD

This booklet contains electrical wiring diagrams for all passenger cars of Toyota vehicles except U.S.A. and Canada.

Each wiring diagram is shown by simple fuse circuit, short line, and rough sketch so as to make it easy to see. Please use this booklet together with body repair manuals for repair or inspection of electrical problems.

All information contained in this booklet is based on the latest information available at the time of publication. Toyota reserves the right to make changes without notice.

TOYOTA MOTOR SALES CO., LTD.

Le présent livret contient des schémas de câblage électrique pour tous les véhicules Toyota sauf pour E.U.A. et Canada.

Afin de faciliter la compréhension, chaque schéma de câblage est représenté par un circuit simple de fusibles, une ligne courte et un croquis sommaire. Veuillez utiliser ce livret en conjonction avec les manuels d'entretien du corps pour la réparation ou l'inspection des problèmes électriques.

Tous les renseignements sont basés sur les dernières informations disponibles au moment de la publication. Toyota se réserve le droit de faire des modifications sans préavis.

CONTENTS:

TOYOTA 1000
STARLET
TERCEL
COROLLA SERIES
CARINA

CELICA
CORONA
CRESSIDA
CROWN SERIES

NOTE:

When reading the wiring diagram, following should be noted.

1. Wire colors are indicated by an alphabetical code.
The 1st letter indicates the basic wire color and the 2nd indicates the stripe color.

B = Black	L = Light Blue	W = White
Br = Brown	Lg = Light Green	Y = Yellow
G = Green	O = Orange	
Gr = Grey	R = Red	

Example: RG indicates a Red wire with a Green line.

2. Legend in the bracket [] of the wiring diagram shows the grid location of mating connection.
3. Broken lines in the wiring diagram are for varied models or optional equipment.
4. The following abbreviations are used in this wiring diagram.

A/C = Air Conditioner	N.S.W. = New South Wales in
ADR = Australia	Australia
A/P = Air Purifier	OPT = Option
A/T = Automatic Transmission	P.K.B. = Parking Brake
CHG = Charge	PTO = Power Take Off
E.C.E = Economic Commission	RH = Right-hand
For Europe	RHD = Right-hand Drive Vehicles
EDIC = Electrical Diesel Injection	SC = Spark Control
Control	S/W = Switch
EGR = Exhaust Gas Recirculation	TEMP. = Temperature
IG = Ignition	TP = Throttle Positioner
LH = Left-hand	V.P.S. = Variable Power Steering
LHD = Left-hand Drive Vehicles	V.S.V. = Vacuum Switching Valve

CONTENUE:

REMARQUE:

Pour la lecture du schéma

1. Le repérage par code
La première lettre

B =
Br =
G =
Gr =

Exemple: RG fig

2. Les indications
- se trouvent les co
3. Les lignes en poin
4. Aus fins de comm

A/C = Cond
ADR = Austr
A/P = Purge
A/T = Engre
CHG = Charg
E.C.E. = Comm
l'Euro
EDIC = Contr
de Di
EGR = Recir
Gaz
IG = Igniti
LH = Côté
LHD = Comm

When repairing the wire, following should be noted;

1. ALLOWABLE CURRENT – CARRYING CAPACITIES OF WIRES

Finished Outside Diameter mm (in.)	Allowable Current (A) (Maximum Load at 12V)	Number of Wires/Individual Wire Diameter mm (in.)	Sectional Area mm ² (in. ²)
2.2 (0.0866)	9 (110W)	7/0.32 (0.0126)	0.5629 (0.0008724)
2.4 (0.0945)	12 (140W)	11/0.32 (0.0126)	0.8846 (0.0013711)
2.7 (0.1063)	15 (180W)	16/0.32 (0.0126)	1.287 (0.0019948)
3.1 (0.1220)	20 (240W)	26/0.32 (0.0126)	2.091 (0.003241)
3.8 (0.1496)	27 (320W)	41/0.32 (0.0126)	3.297 (0.00511)

2. HANDLING AND INSPECTION PROCEDURES

(1) Pulling apart connectors

Hold the housings and pull apart. If provided with lock, release the lock first.

Caution

1. Do not pull the wiring harness.
2. Pull apart straight and do not twist sideways.

(2) Joining together connectors

- 1) Make sure that the connectors are positioned in correct direction and insert in all the way without twisting or prying.
- 2) For connectors provided with locks, insert until the locks actuate and then check to see if properly locked.

(3) Circuit inspection

When checking with circuit tester, the tester probe should always be inserted from the wiring harness side.

Caution

Never insert the tester probe from the terminal side of the connector.

(4) Others

Never attempt to insert an individual terminal (not set in housing) into a connector. This could distort the terminal and result in defective contact.

Pour la réparation du fil du schéma

1. COURANT ELECTRIQUE T

Diamètre Extérieur Déterminé mm (in.)	Co To (C su
2,2 (0,0866)	
2,4 (0,0945)	
2,7 (0,1063)	
3,1 (0,1220)	
3,8 (0,1496)	

2. PROCEDURES DE L'OPER

- (1) Débrancher le connecteur
En supportant le corps, serrure.

Remarque

1. Ne pas tirez le faisceau
2. Débranchez en direc

(2) Reposer le connecteur

- 1) Vérifiez si le con absolument sans bal
- 2) Le connecteur étan parfaitement. Ne p

(3) Inspection du circuit

En cas d'inspecter le cir faisceau de câbles.

Remarque

Ne jamais insérez le tester

(4) Les autres

Ne jamais tentez d'insérez s'agit d'éviter de courber

TOYOTA 1000

INDEX


TOYOTA 1000 ELECTRICAL WIRING DIAGRAM - 1980 PRODUCTION VEHICLE


NUMBER	GRID LOCATION	COMPONENTS	NUMBER	GRID LOCATION	COMPONENTS
1	D-2	ALTERNATOR	35	D-5	TURN SIGNAL, REAR, LH
2	B-8	ANTENNA	36	D-5	TURN SIGNAL, REAR, RH
3	C-2	BATTERY 12V	37	D-5	TURN SIGNAL, SIDE, LH
4	C-6	CIGARETTE LIGHTER	38	D-5	TURN SIGNAL, SIDE, RH
5	B-2	CONDENSER	39	C-4	MOTORS:
6	B-1	DISTRIBUTOR	40	C-1	HEATER BLOWER
7	B-2	FUEL CUT SOLENOID	41	B-7	STARTER
8	C-3	FUEL GAUGE	42	C-7	WASHER
9	C-3	FUEL LEVEL SENDER	43	C-3	WINDSHIELD WIPER
10	A-2	FUSE BOX	44	B-8	OIL PRESSURE GAUGE
11	B-2	FUSIBLE LINK	45	C-2	RADIO
12	B-4	HORN	46	B-5	REGULATOR
13	B-1	IGNITION COIL	47	C-8	RELAYS:
14	D-3	LIGHTS:	48	B-3	FLASHER
15	D-3	BACK-UP, LH	49	B-3	SPEAKER
16	B-3	BACK-UP, RH	50	B-6	SWITCHES:
17	B-3	BRAKE WARNING	51	B-7	BACK-UP LIGHT
18	C-6	CHARGE WARNING	52	B-5	DIFFERENTIAL
19	C-6	HEAD, LH	53	B-4	DIMMER
20	B-6	HEAD, RH	54	C-4	DOOR
21	B-6	HIGH BEAM INDICATOR	55	A-1	HAZARD WARNING LIGHT
22	D-5	INTERIOR	56	B-6	HEATER BLOWER
23	D-5	LICENSE PLATE, LH	57	B-6	HORN
24	D-5	LICENSE PLATE, RH	58	C-3	IGNITION
25	D-6	METER	59	B-3	INTERIOR LIGHT
26	D-6	PARKING, FRONT, LH	60	C-4	LIGHT CONTROL
27	D-4	PARKING, FRONT, RH	61	B-5	OIL PRESSURE
28	D-4	STOP, LH	62	B-7	P.K.B. LIGHT
29	D-6	STOP, RH	63	B-7	STOP LIGHT
30	D-6	TAIL, LH	64	C-3	TURN SIGNAL LIGHT
31	D-5	TAIL, RH	65	C-3	WINDSHIELD WASHER
32	D-5	TURN SIGNAL, FRONT, LH			WINDSHIELD WIPER
33	D-5	TURN SIGNAL, FRONT, RH			
34	D-5	TURN SIGNAL, INDICATOR, LH			
		TURN SIGNAL, INDICATOR, RH			

DIAGRAMME DE CABLAGE ELECTRIQUE

Nombre	Référence sur le plan	COMPONENTS
4	C-6	Allume-cigare
1	D-2	Alternateur (A)
2	B-8	Antenne
3	C-2	Batterie 12V
13	B-1	Bobine allumage
5	B-2	Condenseur
11	B-2	Connecteur fusible
6	B-1	Distributeur
65	C-3	Emetteur témoin
47	C-8	Haut-parleur
57	B-6	Interrupteurs:
55	A-1	Commande
52	B-5	Dallumage
49	B-3	Détresse
51	B-7	Différentiel
56	B-6	Eclairage intérieur
63	B-7	Eclairage extérieur
50	B-6	Essuie-glace
54	C-4	Gradateur
61	B-5	Klaxon
62	B-7	Lampe clignotant
60	C-4	Lave-glace
53	B-4	Lumière d'arrêt
58	C-3	Moteur ventilateur
48	B-3	Pression huile
59	B-3	Projecteur
		Voyant arrêt
8	C-3	Jauge d'essence
64	C-3	Jauge température
12	B-4	Klaxon
16	B-3	Lampes:
35	D-5	Avertisseur
36	D-5	Clignotant
		Clignotant

TOYOTA 1000 ELECTRICAL WIRING DIAGRAM—1980 PR

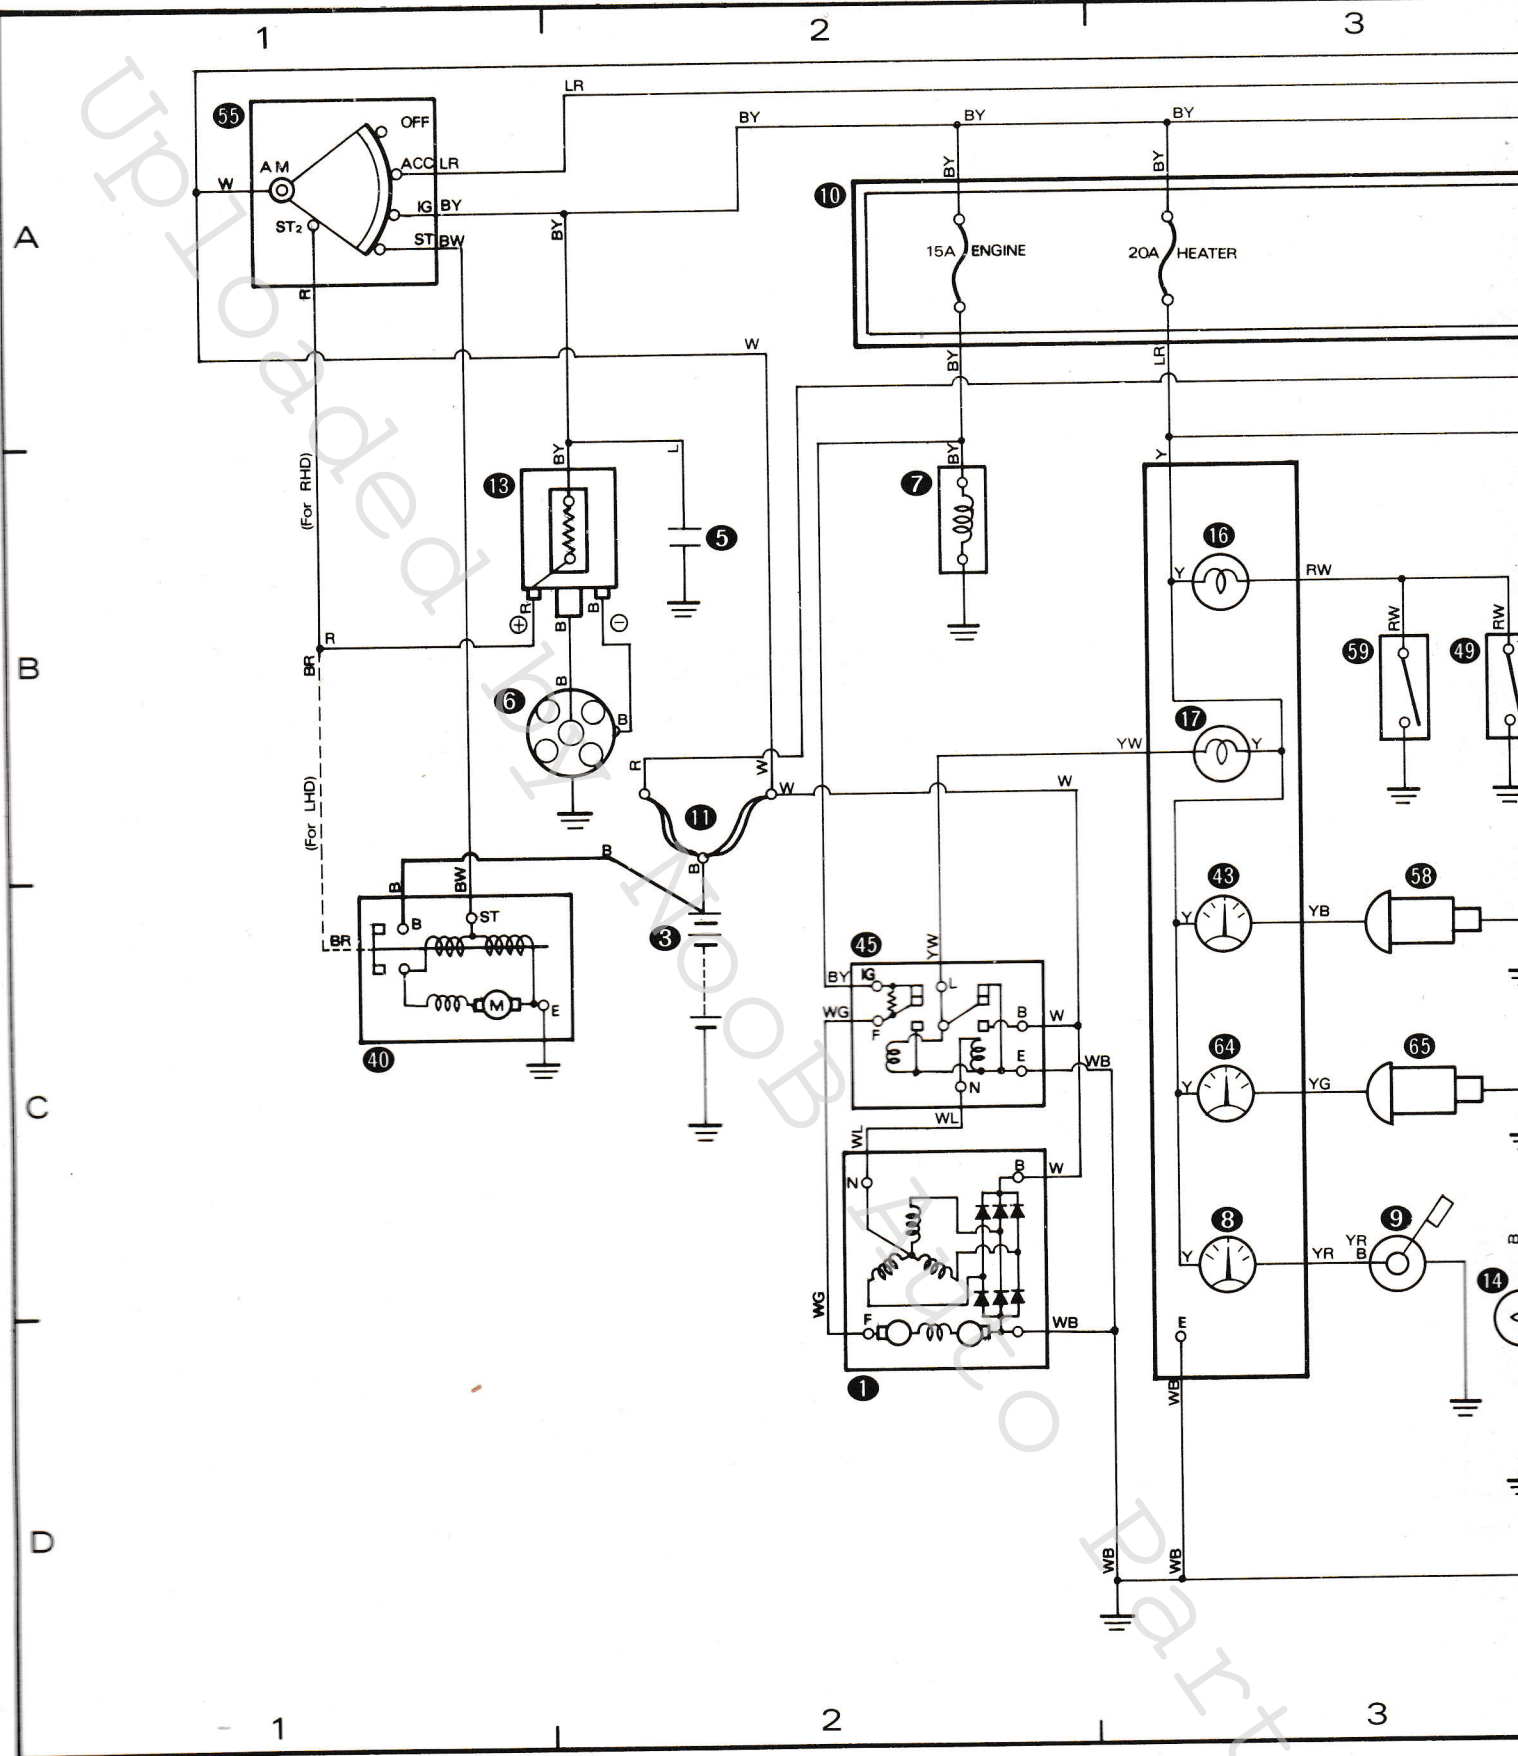

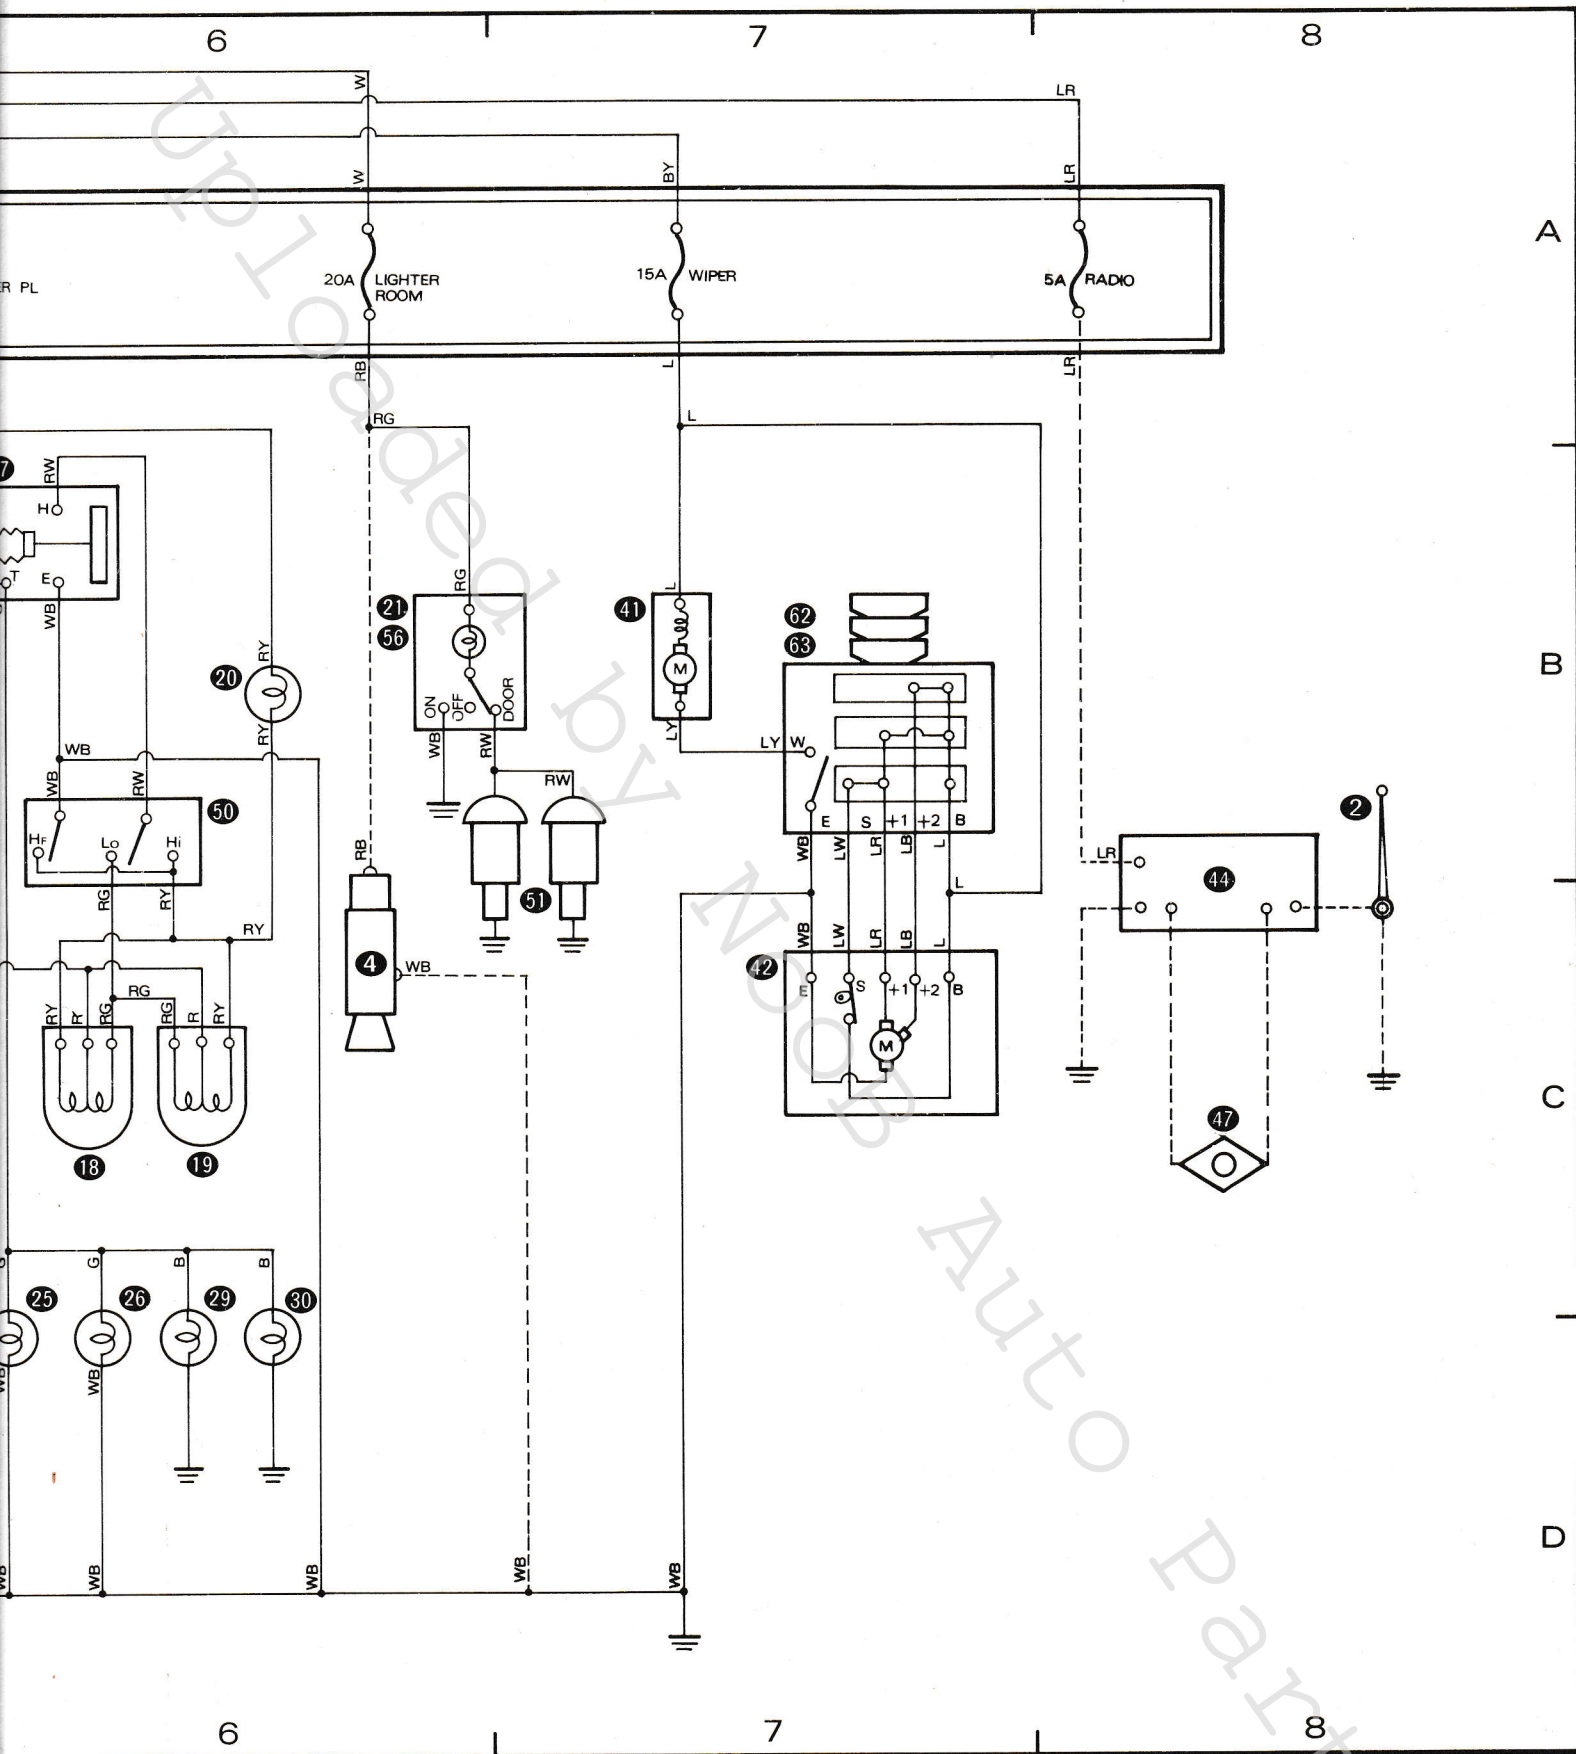

STARLET

INDEX


STARLET ELECTRICAL WIRING DIAGRAM - 1980 PRODUCTION VEHICLE


NUMBER	GRID LOCATION			COMPONENTS
	Fig. 1	Fig. 2	Fig. 3	
1	C-3	A-4	D-6	A/C AMPLIFIER
2	D-1	C-2	C-2 D-2	ALTERNATOR
3	C-2	B-2	B-2	BATTERY 12V
4	C-8	C-7	C-8	CIGARETTE LIGHTER
5	C-8	C-6	C-7	CLOCK (OPT)
6	B-1	C-2	B-3	CONDENSER
7	B-1	B-3	C-3	DISTRIBUTOR
8	C-2	D-2	C-2	FUEL CUT SOLENOID
9	C-3	C-7	B-8	FUEL GAUGE
10	C-3	B-8	B-8	FUEL SENDER
11	B-2	C-4	B-4	FUSE BOX
12	C-1	D-1	C-2	FUSE, CHARGE 5A
13	B-8	D-4	C-4	FUSE, LIGHTER 10A (Ex. W. Germany)
14	C-8	C-5	—	FUSE, TAIL-LH 5A (For W. Germany)
15	C-8	C-5	—	FUSE, TAIL-RH 5A (For W. Germany)
16	B-2	B-2	B-2	FUSIBLE LINK
17	B-4	B-1	B-1	HORN
18	B-1	B-3 C-2	B-3	IGNITION COIL
19	C-4	D-8	D-8	LIGHTS: BACK-UP, LH
20	C-4	A-8	A-8	BACK-UP, RH
21	C-3	C-7	B-8	CHARGE WARNING
22	B-6	C-1	B-1	CLEARANCE, LH (Ex. W. Germany)
23	C-7	C-1	—	CLEARANCE, RH (For W. Germany)
24	B-6	B-1	C-1	CLEARANCE, RH (Ex. W. Germany)
25	C-7	B-1	—	CLEARANCE, LH (For W. Germany)
26	D-6	C-6	C-7	CLOCK (Ex. W. Germany OPT)
27	B-7	C-6	—	CLOCK (For W. Germany OPT)
28	C-8	B-7	B-8	DOOR INDICATOR
29	B-6	—	B-8	FOG, REAR (For England)
30	C-4	B-7	—	HAZARD INDICATOR (For W. Germany & France)
31	C-7	D-1	D-1	HEAD, LH
32	D-7	A-1	A-1	HEAD, RH
33	D-6	C-7	C-8	HEATER CONTROL (Ex. W. Germany)
34	B-7	C-7	—	HEATER CONTROL (For W. Germany)
35	D-7	C-7	B-7	HIGH BEAM INDICATOR
36	C-8	B-4	D-7	INTERIOR
37	C-6	C-8	B-8	LICENSE PLATE (Ex. W. Germany)
38	D-7	C-8	—	LICENSE PLATE (For W. Germany)
39	C-6	B-7	B-8	METER (Ex. W. Germany)
40	B-7	B-7	—	METER (For W. Germany)
41	B-3	B-7	B-7	P.K.B. WARNING
42	C-4	D-8	D-8	STOP, LH
43	C-4	A-8	A-8	STOP, RH
44	C-6	D-8	D-8	TAIL, LH (Ex. W. Germany)
45	C-7	D-8	—	TAIL, LH (For W. Germany)
46	C-6	A-8	A-8	TAIL, RH (Ex. W. Germany)
47	C-7	A-8	—	TAIL, RH (For W. Germany)
48	C-4	C-1	C-1	TURN SIGNAL, FRONT, LH
49	C-5	B-1	B-1	TURN SIGNAL, FRONT, RH
50	D-4	C-7	B-7	TURN SIGNAL, INDICATOR, LH
51	C-5	B-7	B-7	TURN SIGNAL, INDICATOR, RH
52	D-4	D-8	D-8	TURN SIGNAL, REAR, LH
53	D-5	A-8	A-8	TURN SIGNAL, REAR, RH
54	C-4	D-1	D-1	TURN SIGNAL, SIDE, LH
55	C-5	A-1	A-1	TURN SIGNAL, SIDE, RH
56	C-3	A-1	A-2	MAGNET CLUTCH
57	—	C-7	B-7	METER (+B)
58	—	B-8	B-8	METER (-)
59	B-4	A-1	A-2	MOTORS: COOLING FAN
60	D-2	C-1	C-1	ELECTRIC FAN
61	B-6	C-1	—	HEADLIGHT CLEANER (For Sweden)
62	C-3	A-3	D-5	HEATER BLOWER
63	C-1	C-2	B-2	STARTER
64	B-5	A-1	A-1	WASHER, FRONT
65	B-5	C-8	C-8	WASHER, REAR (OPT)
66	D-6	A-2	B-2	WIPER, FRONT
67	C-5	B-7	B-6	WIPER, REAR (OPT)
68	C-3	C-7	B-8	OIL PRESSURE GAUGE
69	C-3	B-3	D-3	OIL PRESSURE SENDER
70	B-8	D-6	C-7	RADIO
71	C-2	A-7	B-6	REAR WINDOW DEFOGGER
72	C-1	D-1	B-2	REGULATOR
73	B-4	A-4	D-6	RELAYS: COOLER
74	B-2	C-3	—	DEFOGGER (For Sweden & Frigid Zone of Europe)
75	C-2	C-3	B-4	ELECTRIC FAN
76	B-5	C-3	A-4	FLASHER
77	C-6	—	B-4	FOG LIGHT, REAR (For England)
78	B-4	C-3	—	HAZARD (For W. Germany & France)
79	C-7	B-3	B-4	HEADLIGHT
80	B-6	C-3	—	HEADLIGHT CLEANER (For Sweden)
81	B-3	D-4	C-3	MAIN
82	B-6	B-3	B-4	TAIL LIGHT (Ex. W. Germany)
83	B-7	B-3	—	TAIL LIGHT (For W. Germany)
84	C-5	B-3	B-4	WINDSHIELD WIPER (Intermittent) (OPT)
85	B-8	—	—	SPEAKER
86	C-4	C-3	A-3	SWITCHES: BACK-UP LIGHT
87	C-3	D-2	A-2	BRAKE WARNING LIGHT
88	B-2	B-7	C-7	DEFOGGER
89	C-7	D-7	D-5	DIMMER
90	D-8	D-3	D-7	DOOR COURTESY, FRONT, LH
91	D-8	A-6	A-5	DOOR COURTESY, FRONT, RH
92	D-8	A-6	A-6	DOOR COURTESY, REAR, LH
93	D-8	A-6	A-6	DOOR COURTESY, REAR, RH
94	C-6	—	C-5	FOG LIGHT, REAR (For England)
95	B-5	D-7	D-4	HAZARD WARNING
96	B-3	D-6	C-7	HEATER BLOWER MOTOR
97	B-4	D-7	D-5	HORN
98	A-1	D-6	C-4	IGNITION
99	C-8	B-4	D-7	INTERIOR LIGHT
100	B-6	D-7	D-4	LIGHT CONTROL (Ex. W. Germany)
101	B-7	D-7	—	LIGHT CONTROL (For W. Germany)
102	B-3	A-6	A-5	P.K.B. WARNING
103	C-4	D-6	B-4	STOP LIGHT
104	B-5	D-7	D-4	TURN SIGNAL
105	C-4	A-3	D-5	VOLUME
106	D-2	A-3	D-3	WATER TEMPERATURE
107	C-5	D-7	D-5	WINDSHIELD WASHER
108	C-5	D-7	D-5	WINDSHIELD WIPER
109	B-5	B-6	C-7	WASHER, REAR (OPT)
110	B-5	B-6	C-7	WIPER, REAR (OPT)
111	C-3	C-7	B-8	WATER TEMP GAUGE
112	C-3	A-3	D-3	WATER TEMP SENDER

DIAGRAMME DE CABLAGE EL


Nombre	Répérage sur le plan			
	Fig. 1	Fig. 2	Fig. 3	
4	C-8	C-7	C-8	Allume-
2	D-1	C-2	C-2 D-2	Alternat
1	C-3	A-4	D-6	Amplifi
3	C-2	B-2	B-2	Batterie
18	B-1	B-3 C-2	B-3	Bobin
57	—	C-7	B-7	Compte
58	—	B-8	B-8	Compte
6	B-1	C-2	B-3	Condens
16	B-2	A-2 B-2	A-2 B-2	Connect
71	C-2	A-7	B-6	Dégivre
7	B-1	B-3	C-3	Distribut
56	C-3	A-1	A-2	Embray
69	C-3	B-3	D-3	Emetteu
112	C-3	A-3	D-3	Emetteu
12	C-1	D-1	C-2	Fusible,
13	B-8	D-4	C-4	Fusible,
14	C-8	C-5	—	Fusible,
15	C-8	C-5	—	Fusible,
85	B-8	—	—	Haut-par
94	C-6	—	C-5	Interm
100	B-6	D-7	D-4	Interm
101	B-7	D-7	—	Interm
98	A-1	D-6	C-4	Défil
88	B-2	B-7	C-7	Défil
95	B-5	D-7	D-4	Défil
99	C-8	B-4	D-7	Eclair
92	D-8	A-6	A-6	Eclair
93	D-8	A-6	A-6	Eclair
90	D-8	D-3	D-7	Eclair
91	D-8	A-6	A-5	Eclair
110	B-5	B-6	C-7	Eclair
108	C-5	D-7	D-5	Eclair
89	C-7	D-7	D-5	Eclair
97	B-4	D-7	D-5	Eclair
87	C-3	D-2	A-2	Eclair
104	B-5	D-7	D-4	Eclair
109	B-5	B-6	C-7	Eclair
107	C-5	D-7	D-5	Eclair
103	C-4	D-6	B-4	Eclair
96	B-3	D-6	C-7	Eclair
86	C-4	C-3	A-3	Eclair
106	D-2	A-3	D-3	Eclair
105	C-4	A-3	D-5	Eclair
102	B-3	A-6	A-5	Eclair
9	C-3	C-7	B-8	Jauge d'e
111	C-3	C-7	B-8	Jauge ter
17	B-4	B-1	B-1	Klaxon
29	B-6	—	B-8	Lampes:
52	D-4	D-8	D-8	Anti-
53	D-5	A-8	A-8	Cigno
48	C-4	C-1	C-1	Cigno
49	C-5	B-1	B-1	Cigno
54	C-4	D-1	D-1	Cigno
55	C-5	A-1	A-1	Cigno
50	D-4	C-7	B-7	Cigno
51	C-5	B-7	B-7	Cigno
39	C-6	B-7	B-8	Comb
40	B-7	B-7	—	Comb

DUCTION VEHICLE

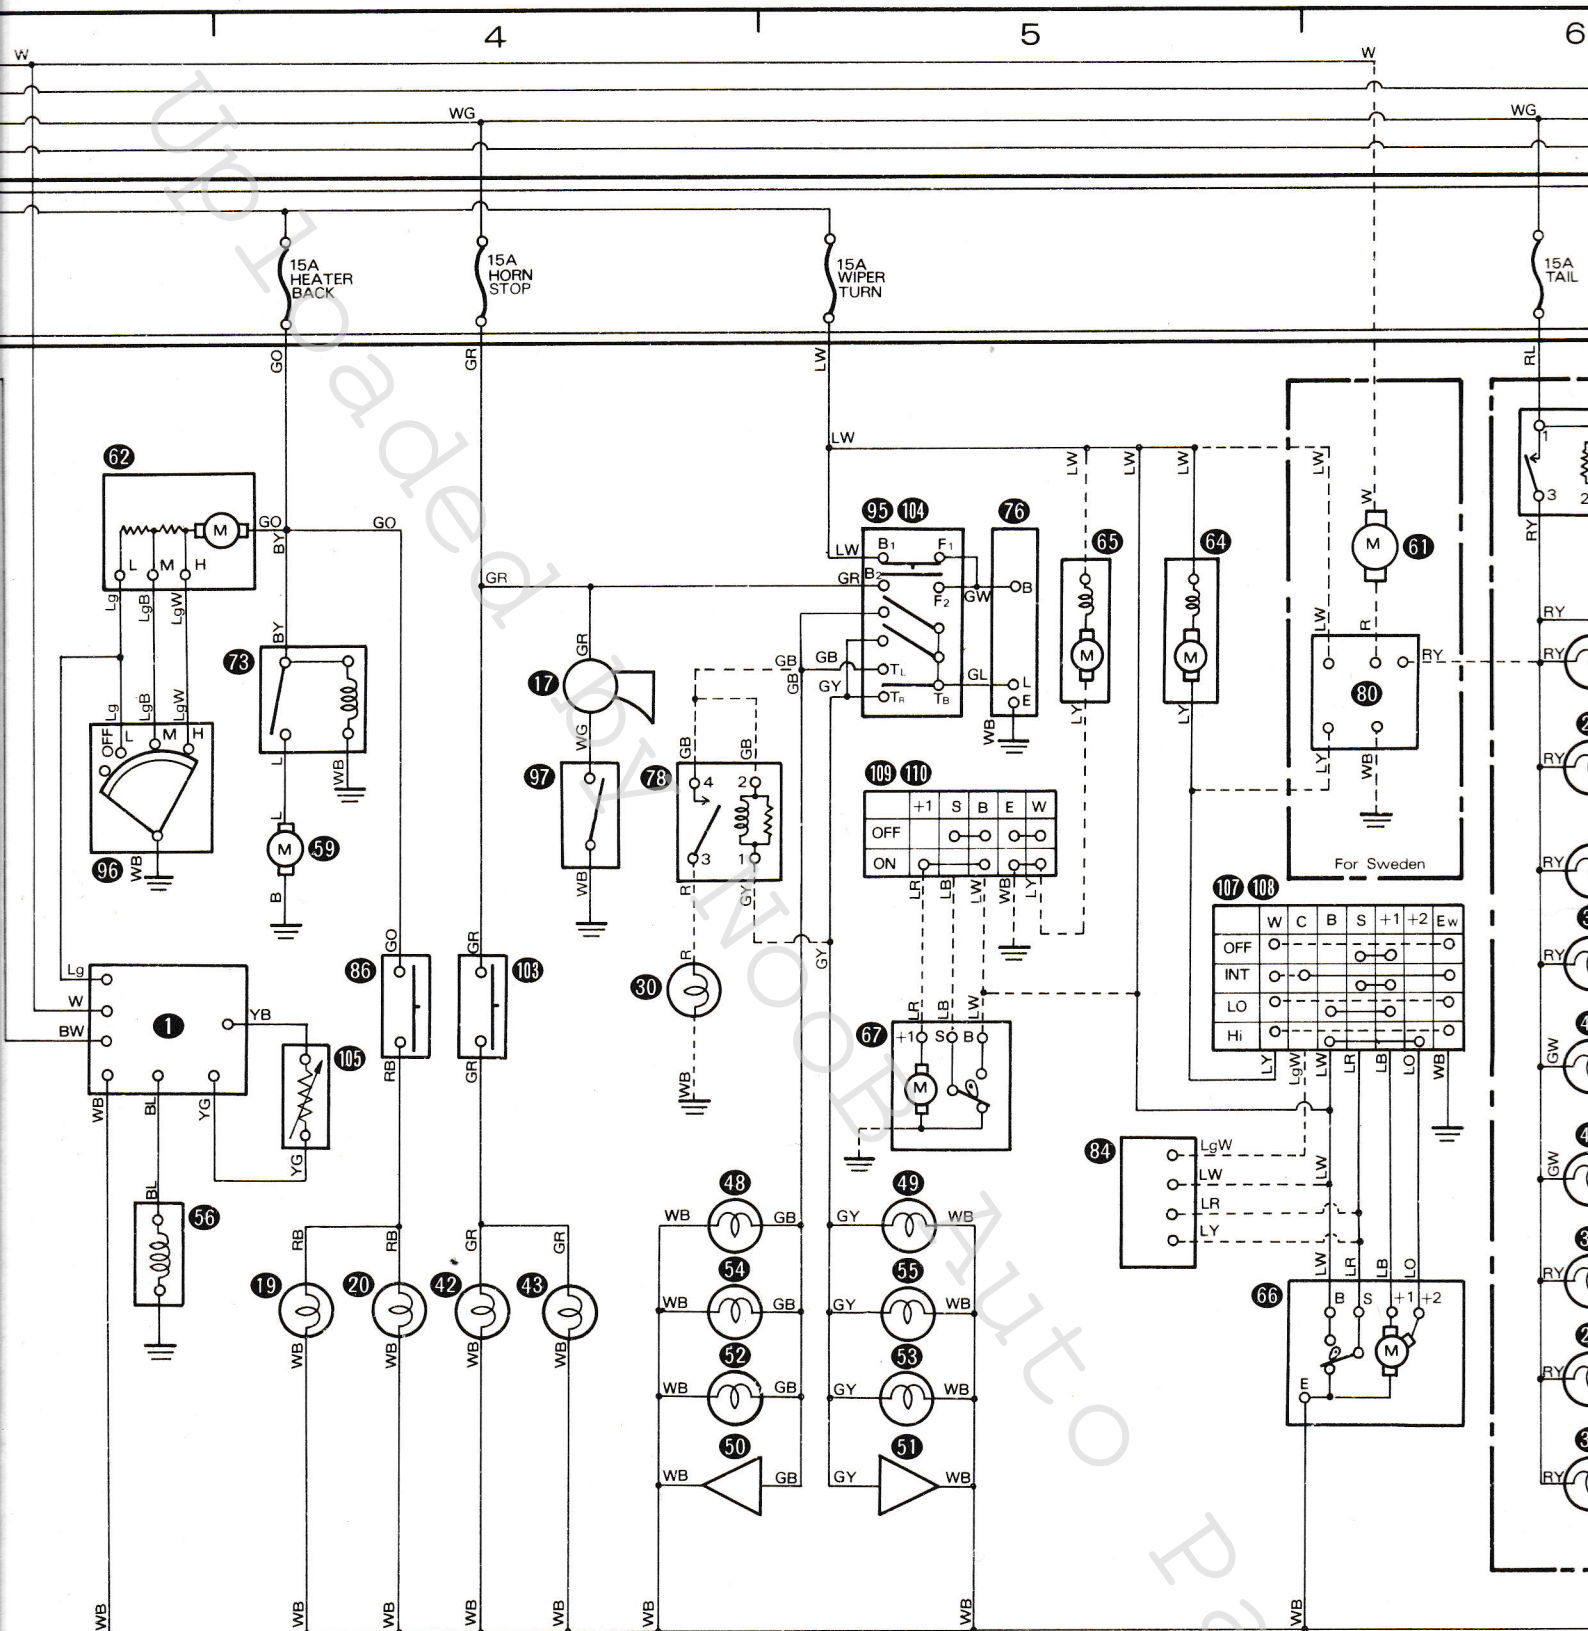


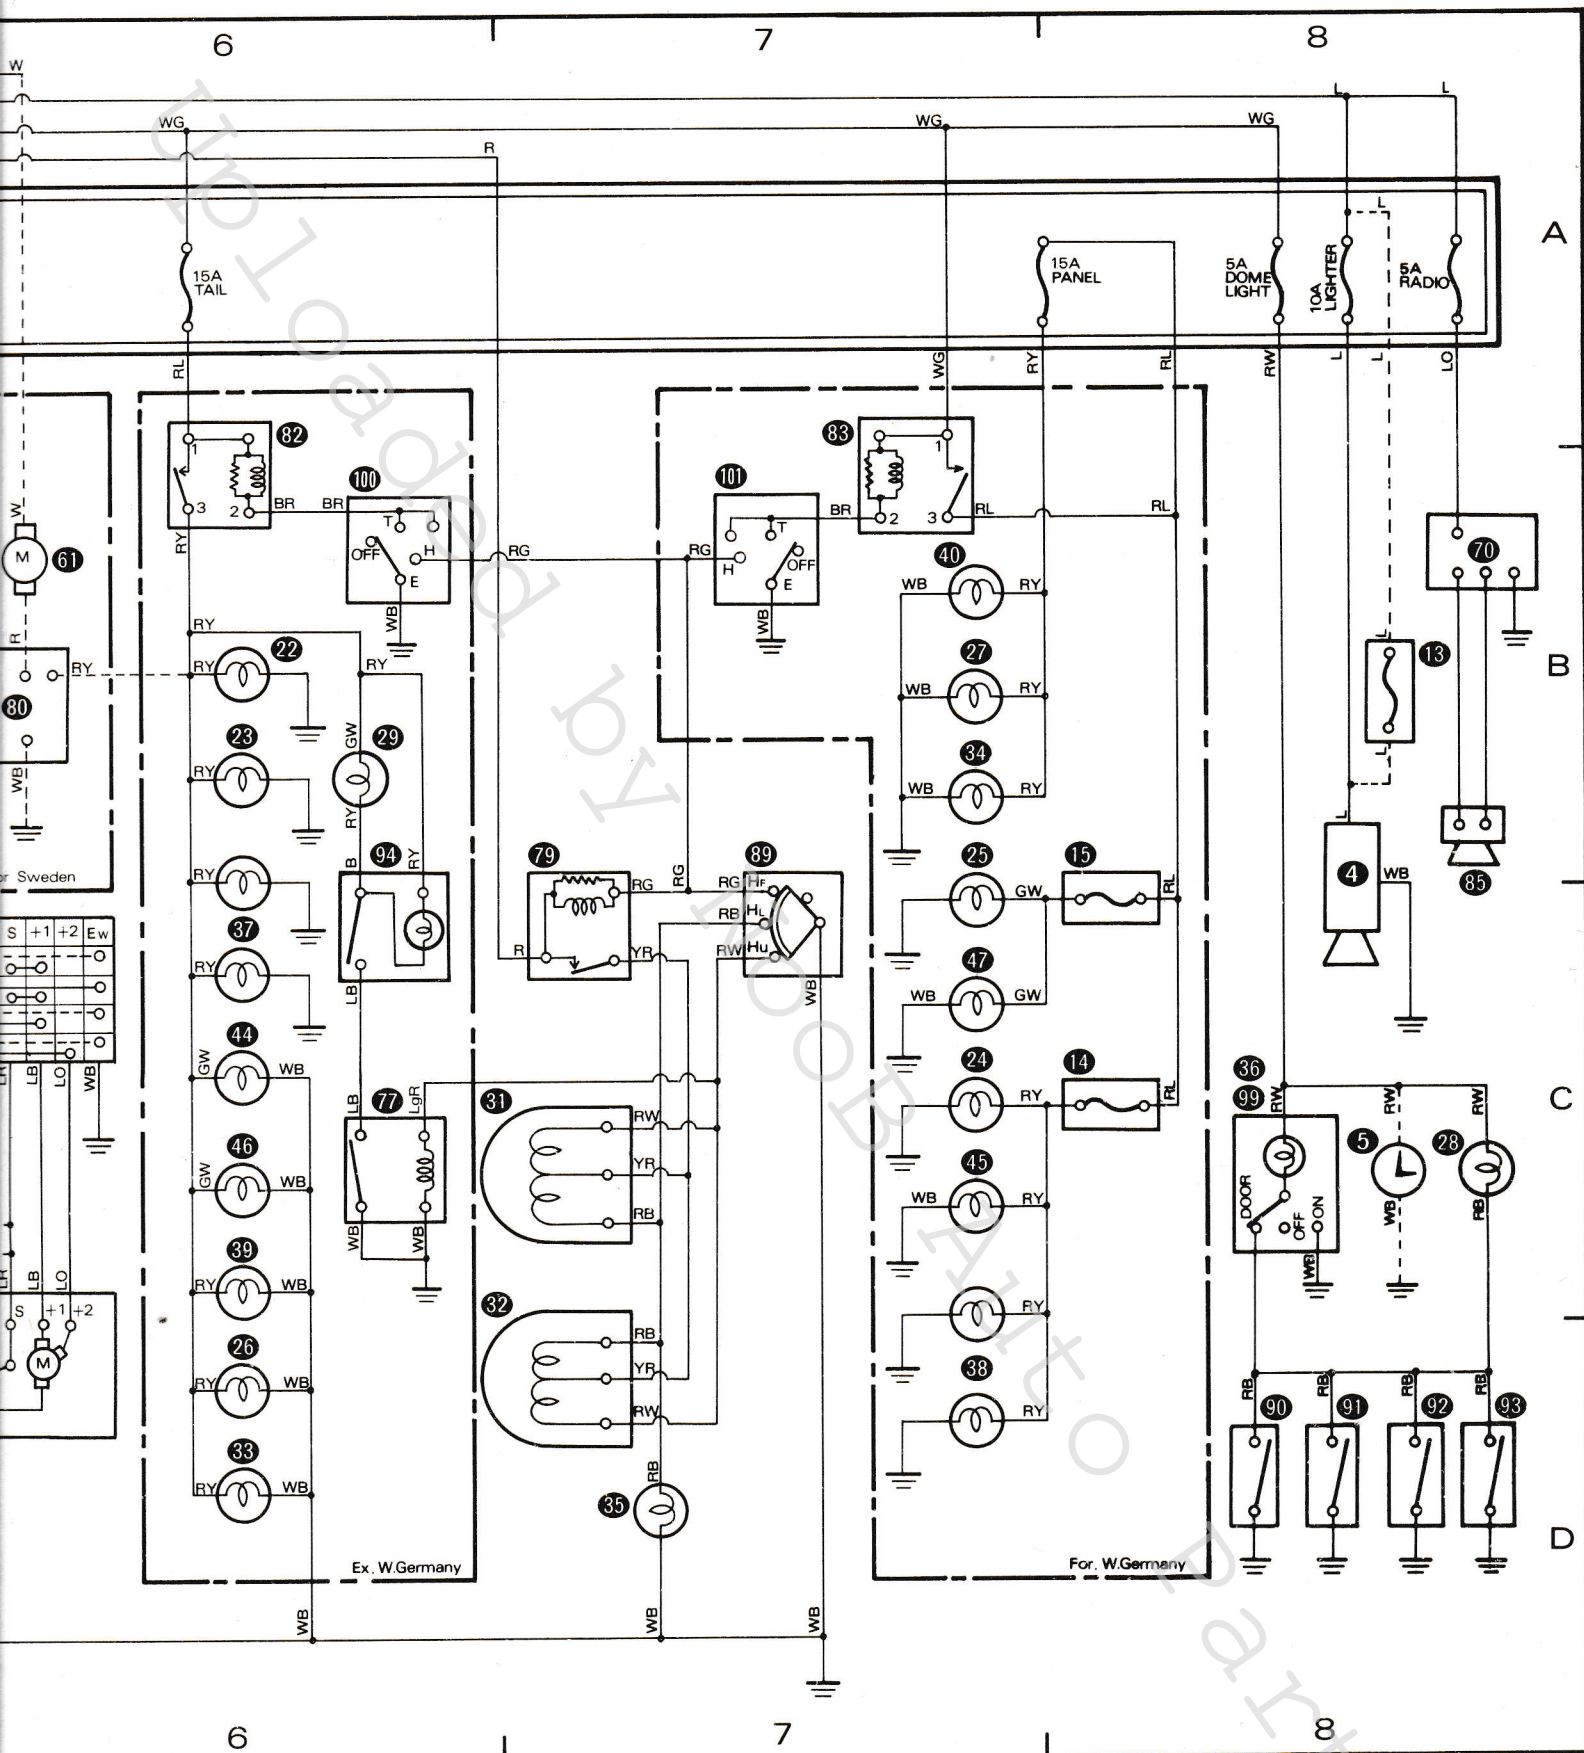


LHD, STARLET ELECTRICAL WIRING HARNESS — 1980 PRO

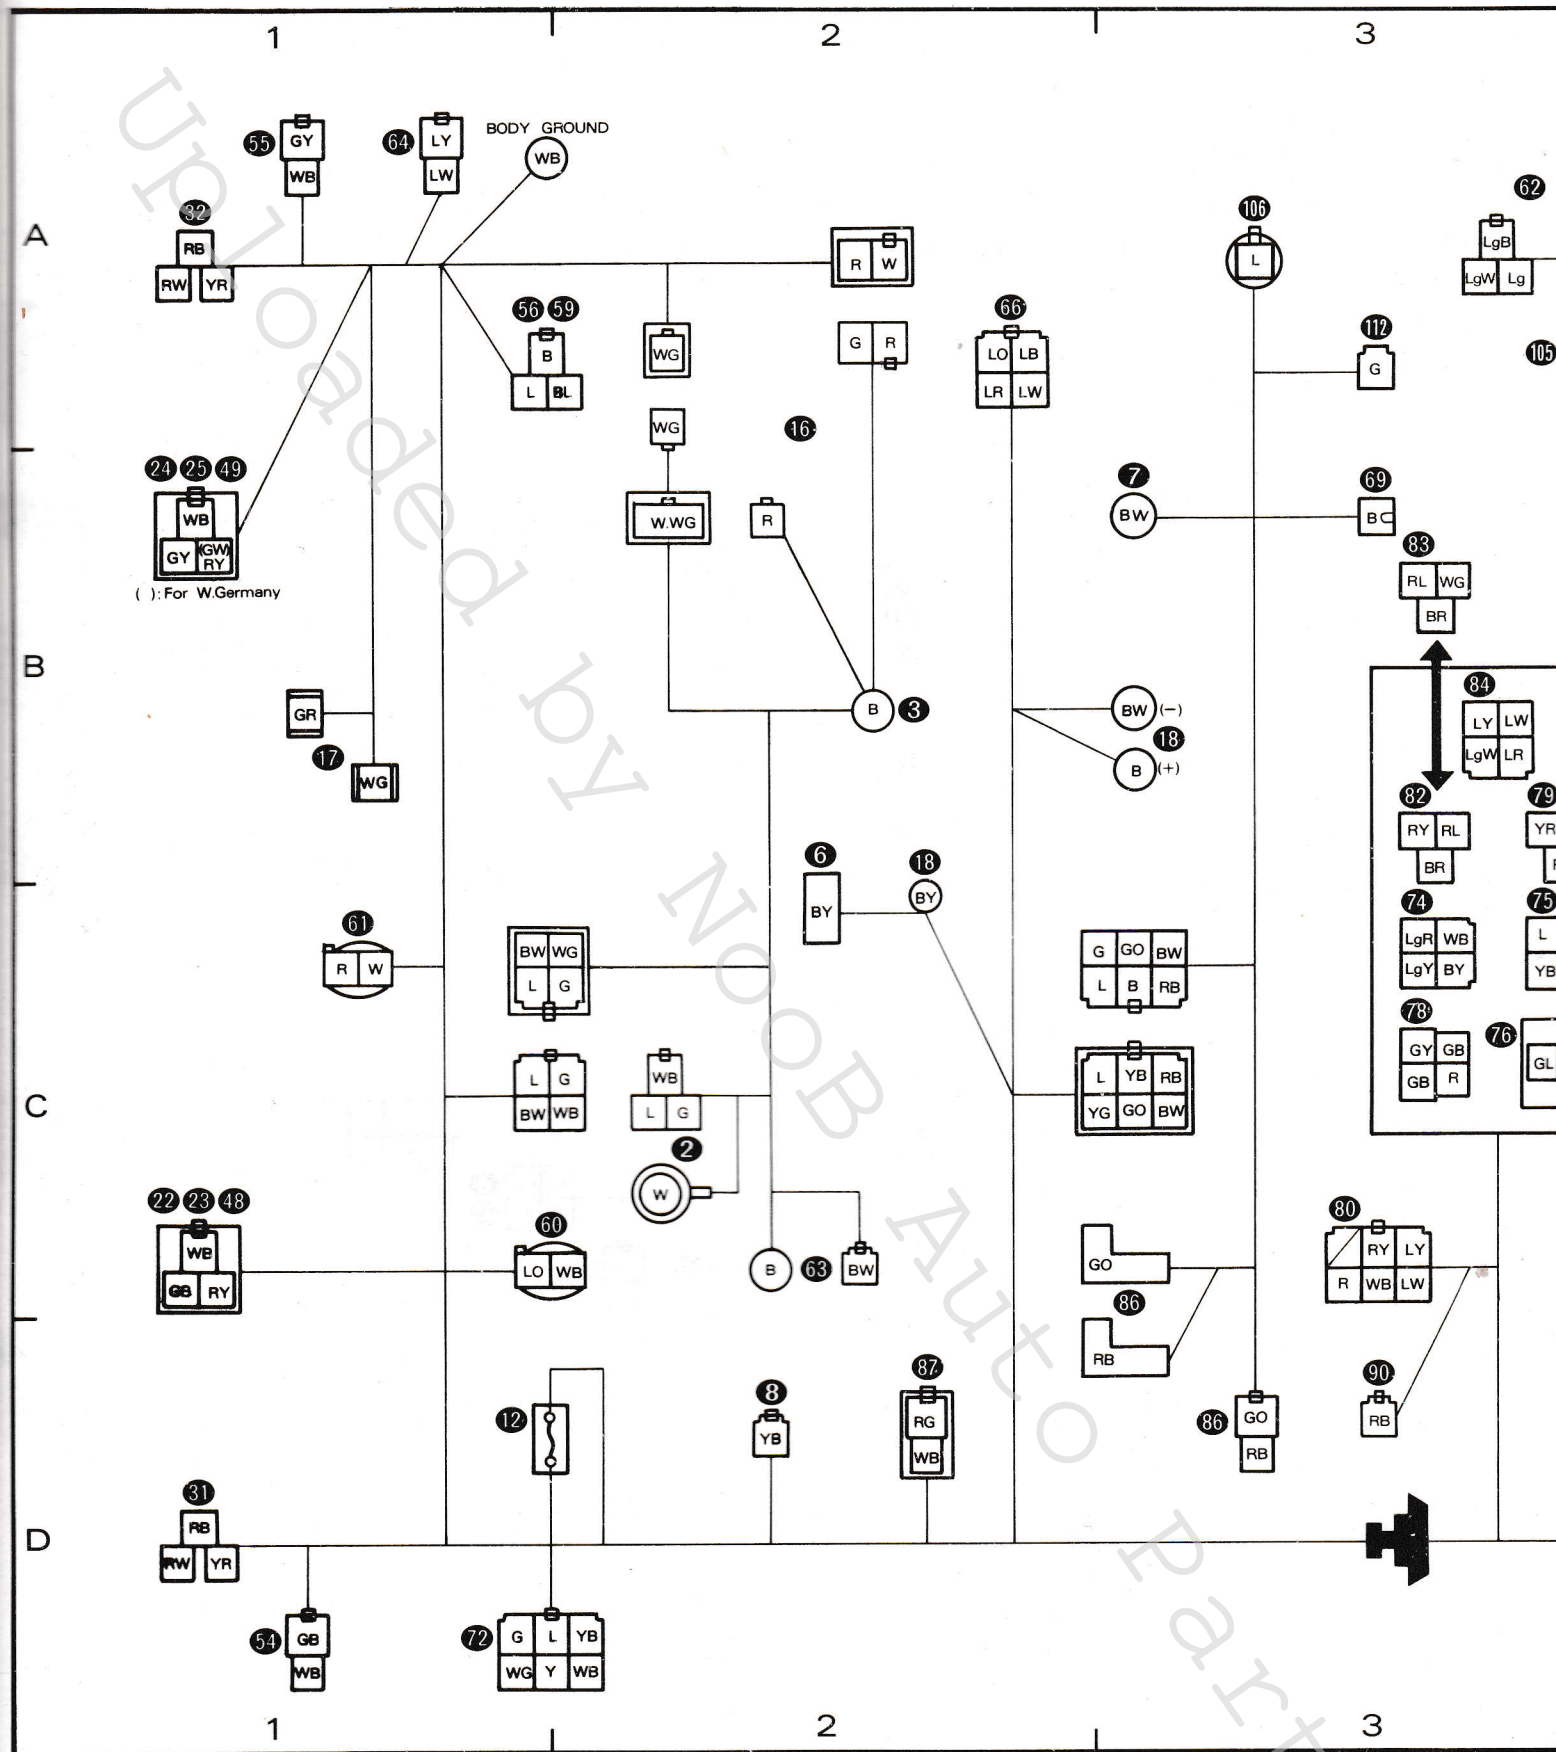


[illegible]

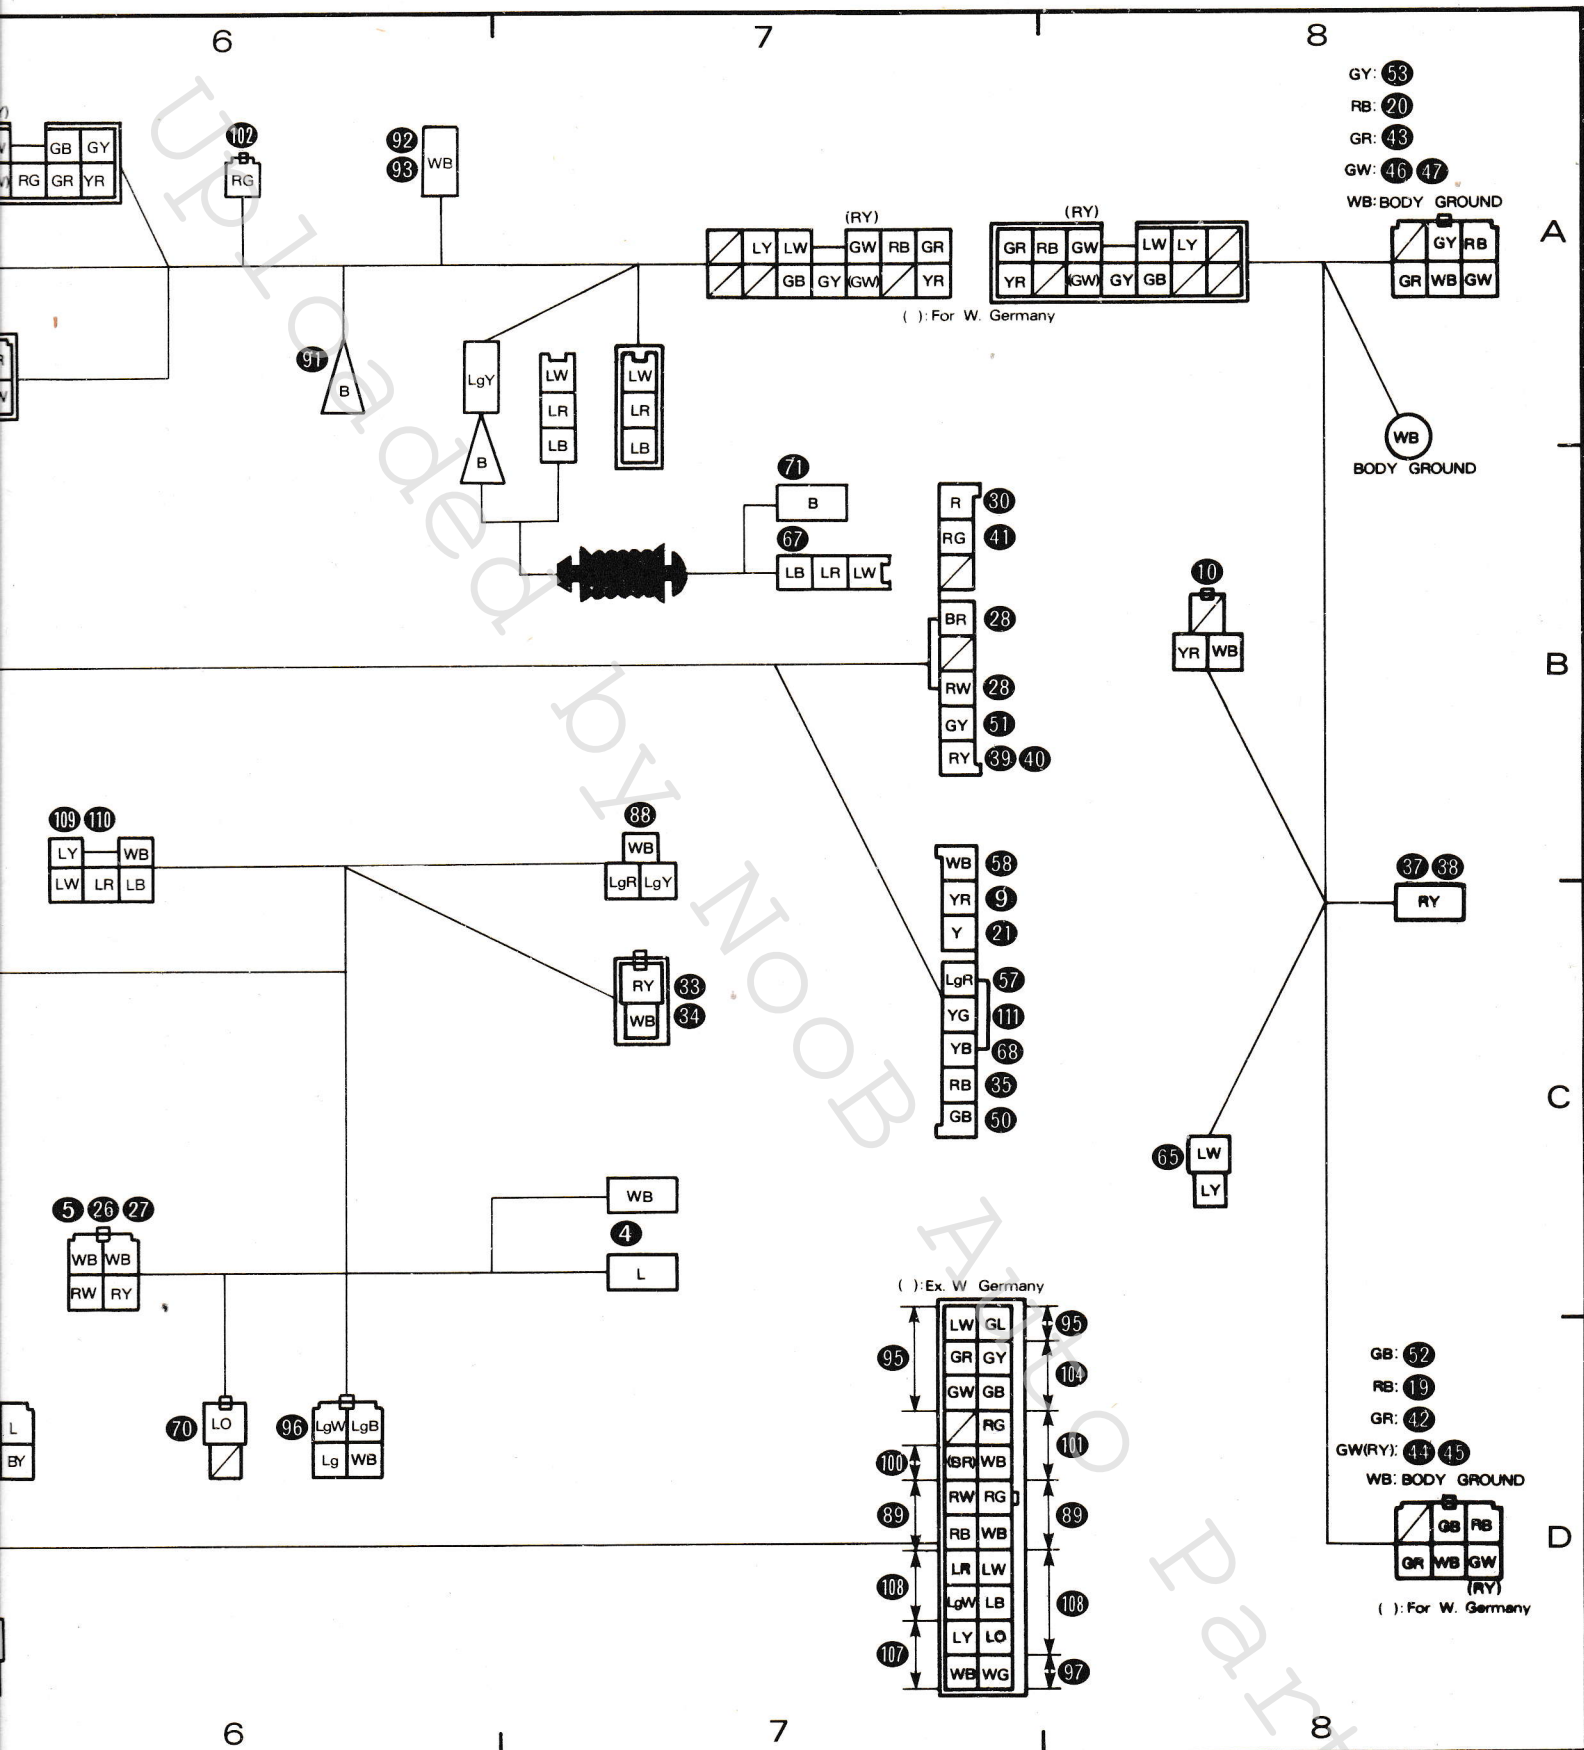

0 PRODUCTION VEHICLE

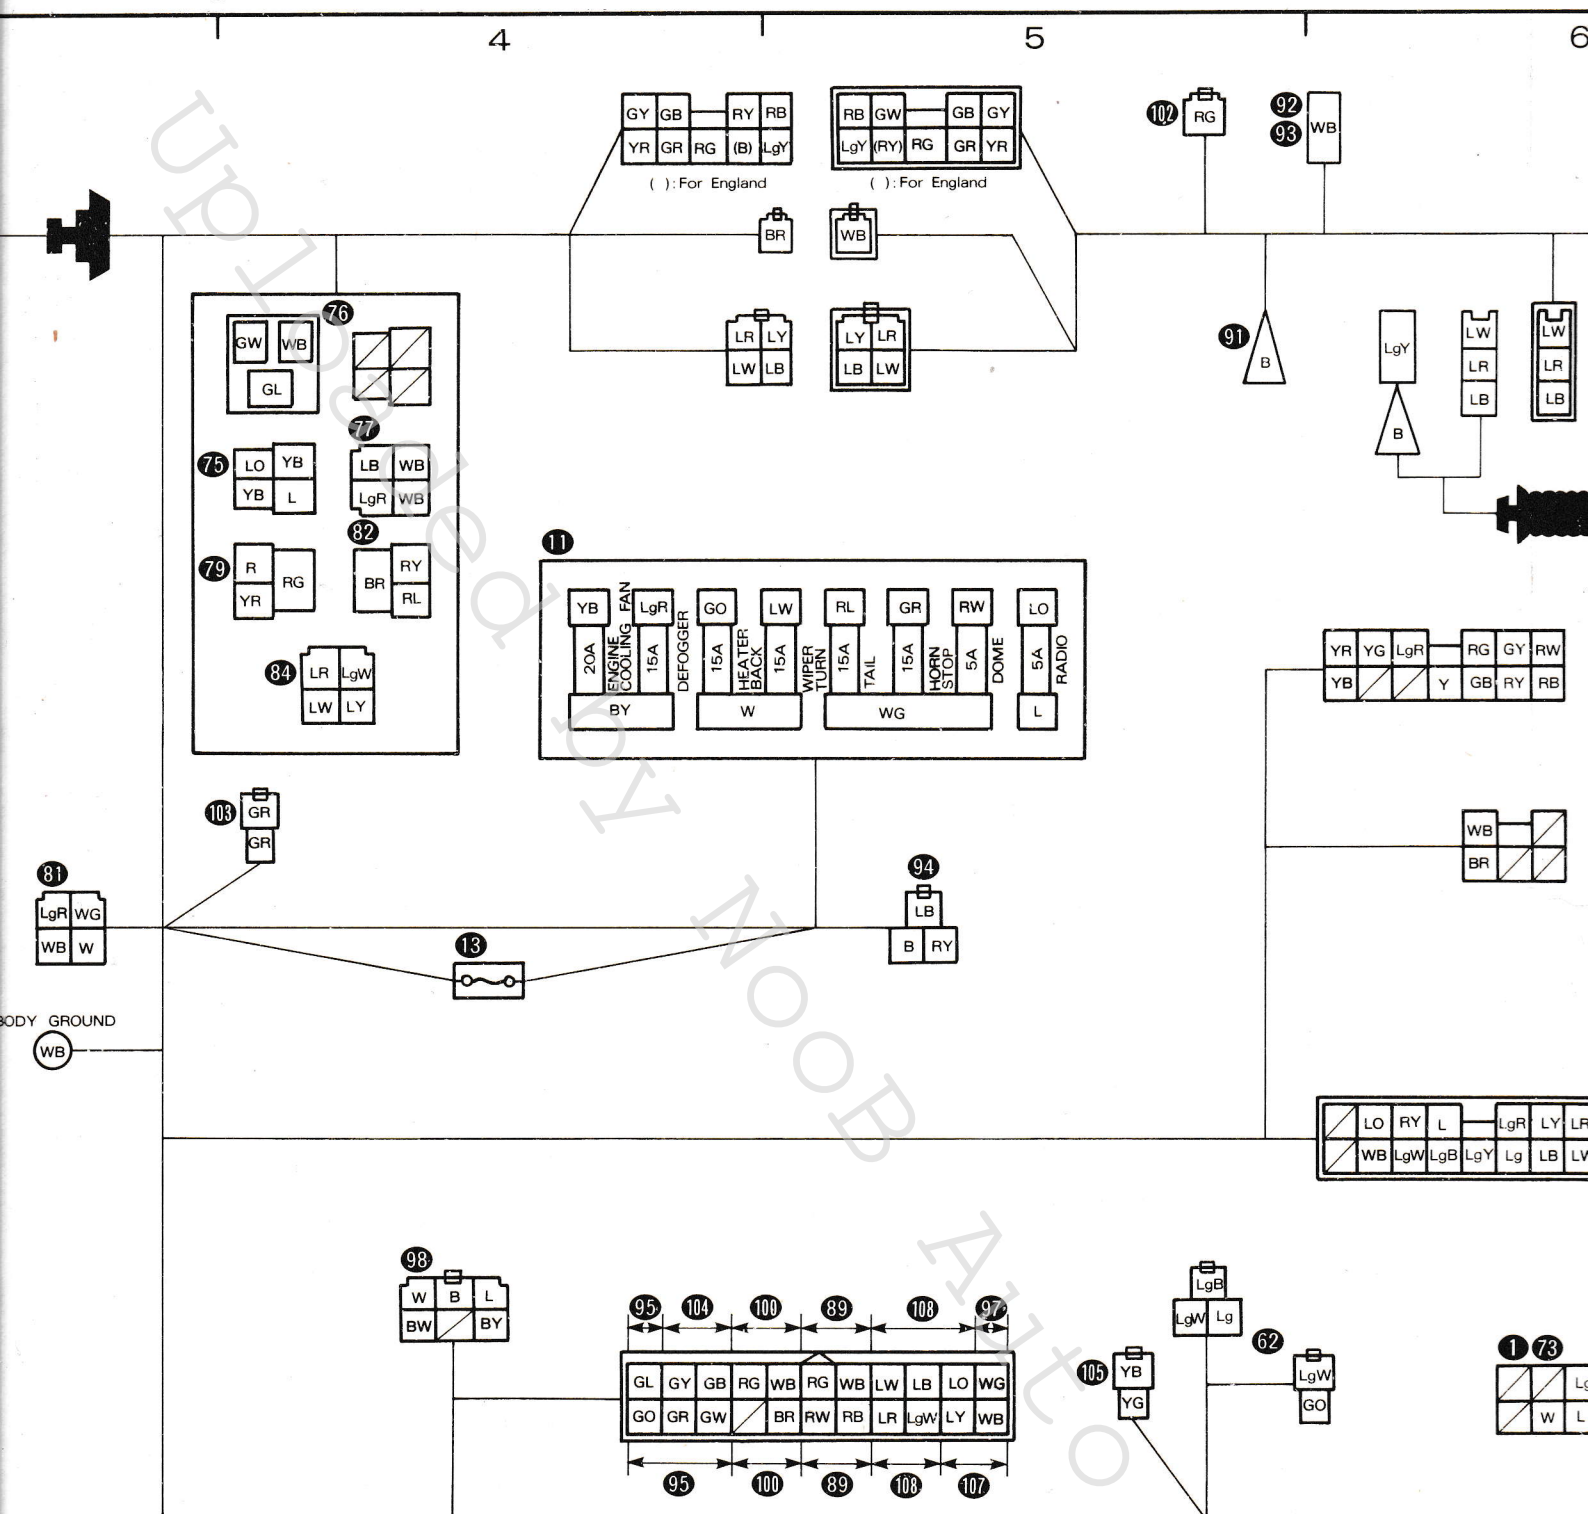

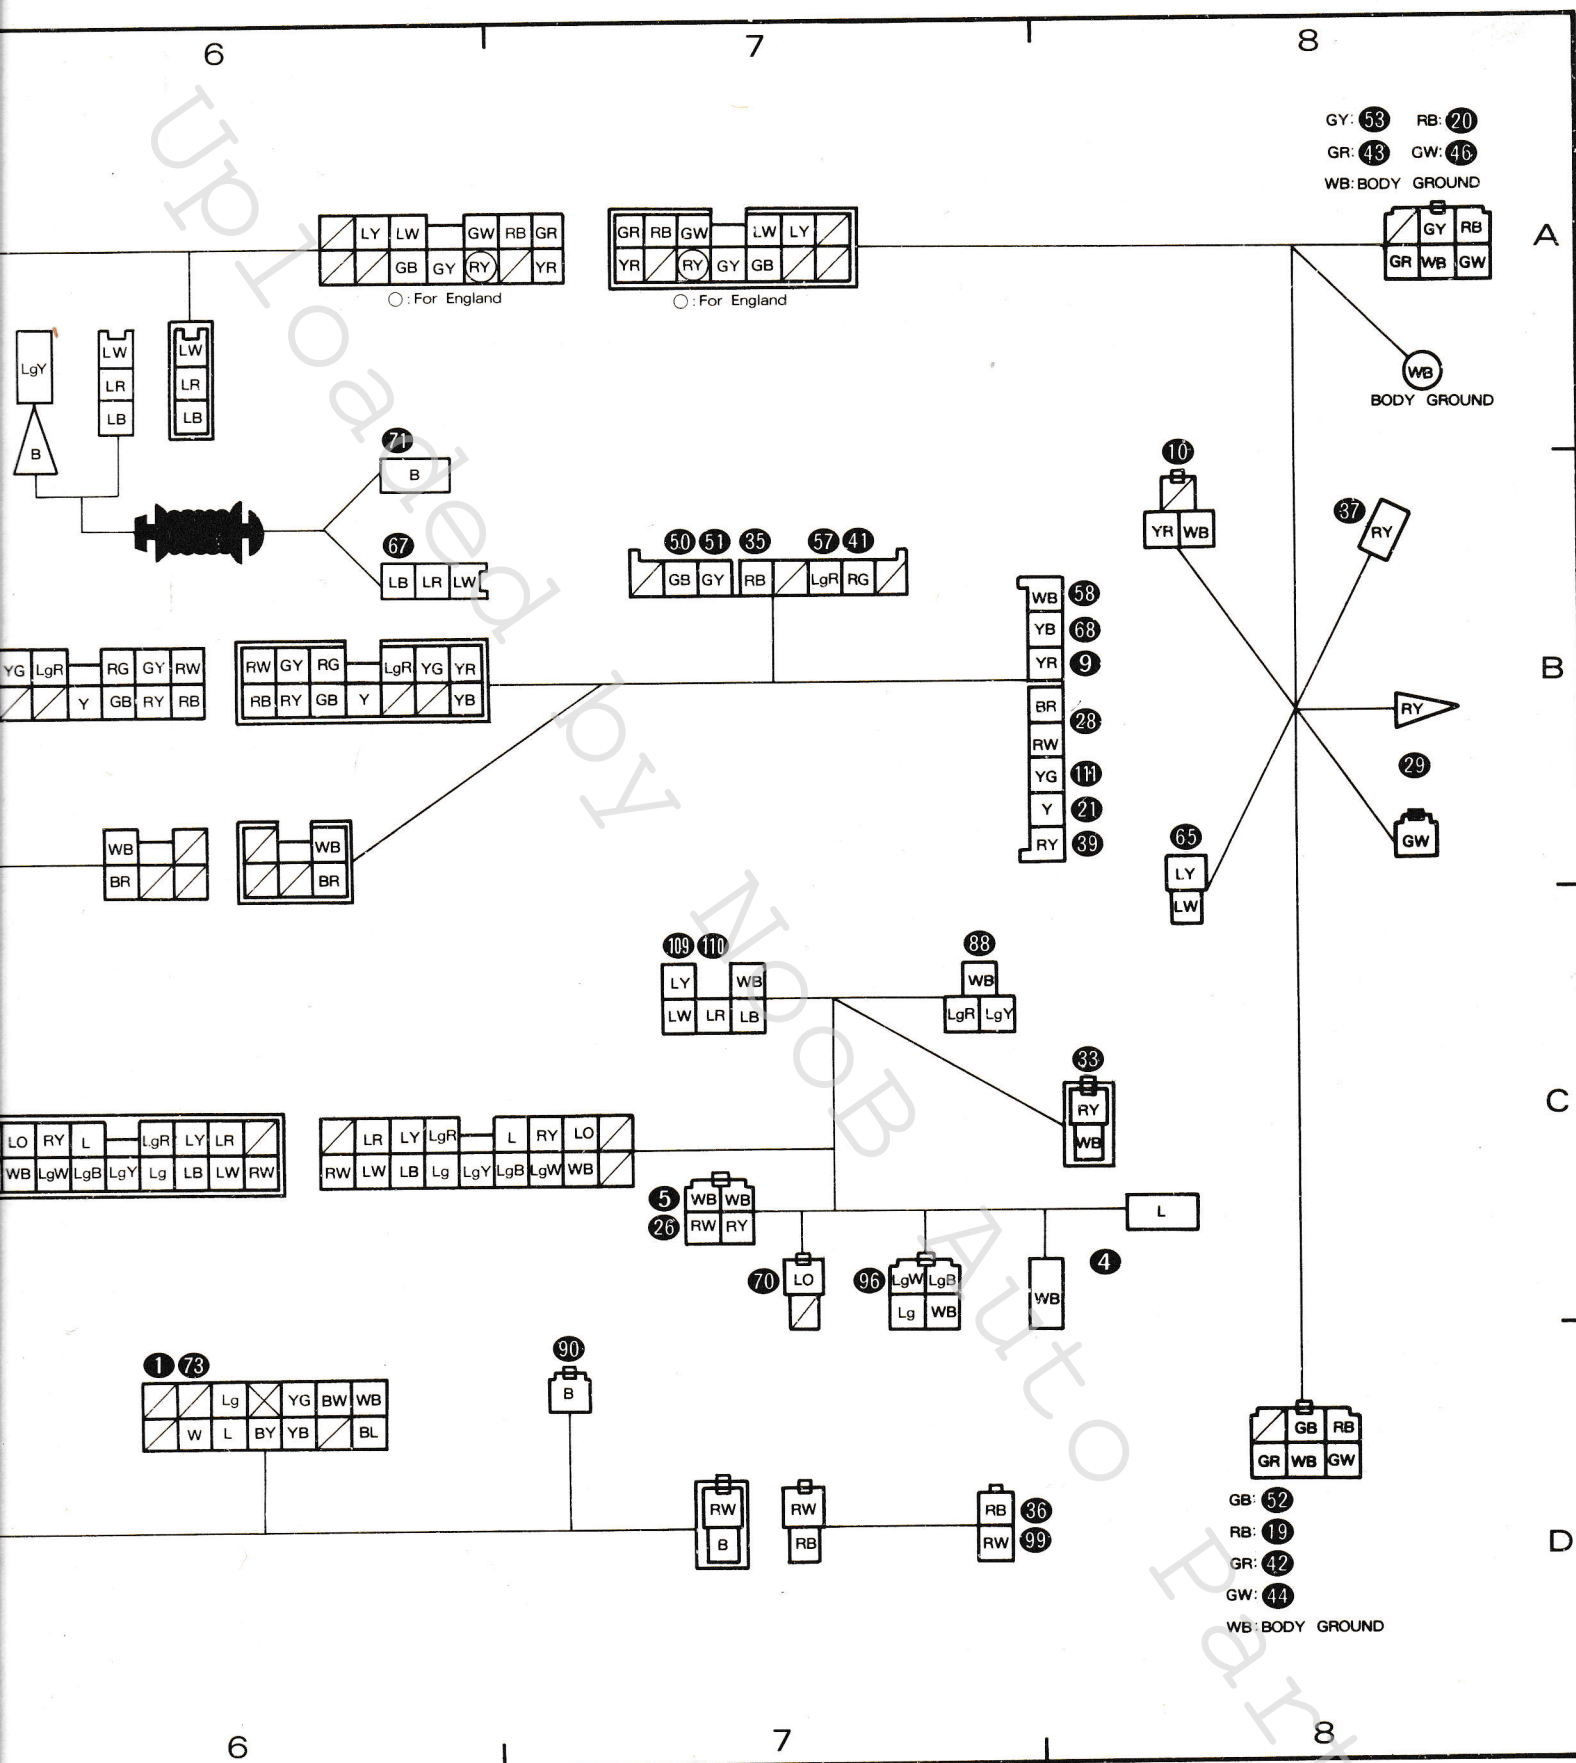

TERCEL

INDEX

TERCEL ELECTRICAL WIRING DIAGRAM – 1980 PRODUCTION VEHICLE


DIAGRAMME DE CABLAGE ELECTRIQUE

NUMBER	GRID LOCATION			COMPONENTS	NUMBER	GRID LOCATION			COMPONENTS
	Fig. 1	Fig. 2	Fig. 3			Fig. 1	Fig. 2	Fig. 3	
1	D-2	B-4	B-7	A/C AMPLIFIER (Ex. ECE)	71	D-2	B-2	B-2	MAGNET CLUTCH
2	B-1	C-2	C-2	ALTERNATOR	72	—	B-4	D-7	METER (+B)
3	C-1	C-3	C-3	BATTERY 12V	73	—	B-4	D-7	METER GROUND
4	B-8	C-6	B-6	CIGARETTE LIGHTER	74	C-2	D-1	D-1	MOTORS:
5	C-8	B-4	C-7	CLOCK	75	C-2	A-1	A-1	A/C COOLING FAN (Ex. ECE)
6	C-1	D-2	D-2	CONDENSER	76	D-5	D-1	—	COOLING FAN
7	C-2	B-1	B-1	COOLING FAN SENSOR	77	C-2	B-5	C-6	HEADLIGHT CLEANER
8	D-1	B-2	B-2	DISTRIBUTOR	78	B-1	B-2	B-2	(For ECE OPT)
9	C-2	B-2	A-2	FUEL CUT SOLENOID	79	C-5	A-2	A-2	HEATER BLOWER
10	B-3	C-4	C-7	FUEL GAUGE	80	D-5	D-8	C-8	STARTER
11	B-3	A-7	A-7	FUEL SENDER	81	C-4	C-3	A-2	WASHER, FRONT
12	A-2	C-3	C-3	FUSE BOX (Ex. ECE)	82	D-5	A-8	A-8	WASHER, REAR (For 3-Door)
13	A-2	B-3	—	FUSE BOX (For ECE)	83	B-8	A-5	B-7	WIPER, FRONT
14	B-3	—	—	FUSE, CHARGE 5A	84	B-4	B-3	C-4	WIPER, REAR (For 3-Door)
15	B-1	C-3	C-3	FUSIBLE LINK	85	B-1	D-3	D-3	RADIO
16	D-2	B-5	C-7	HEATER RESISTOR	86	D-2	C-2	C-2	REAR WINDOW DEFOGGER
17	B-4	A-2	A-2	HORN	87	B-2	C-3	C-3	REGULATOR
18	B-4	B-1	—	HORN (For ECE)	88	B-2	B-2	—	RELAYS:
19	C-1	D-2	D-2	IGNITION COIL	89	B-4	C-6	B-5	A/C
20	—	C-8	C-8	LICENSE PLATE GROUND	90	B-7	B-3	—	COOLING FAN (Ex. ECE)
21	B-5	C-4	C-5	LIGHTS:	91	B-4	B-6	A-5	COOLING FAN (For ECE)
22	D-7	C-4	—	A/T INDICATOR (Ex. ECE)	92	C-4	C-6	—	DEFOGGER
23	D-3	D-8	D-8	A/T INDICATOR (For ECE)	93	B-6	C-2	C-2	DIMMER (For ECE)
24	D-3	A-8	A-8	BACK-UP, LH	94	D-5	C-5	—	FLASHER
25	B-3	B-4	C-7	BACK-UP, RH	95	B-2	C-6	B-5	HAZARD (For ECE)
26	C-3	D-6	—	CHARGE WARNING	96	B-2	C-2	C-3	HEADLIGHT (Ex. ECE)
27	D-5	D-1	C-1	CHARGE WARNING (For LHD)	97	B-2	B-2	—	HEADLIGHT CLEANER
28	D-6	D-1	—	CLEARANCE, LH (Ex. ECE)	98	B-5	C-6	A-5	(For ECE, OPT)
29	D-5	A-1	B-1	CLEARANCE, LH (For ECE)	99	B-6	C-6	—	HEATER
30	D-7	A-1	—	CLEARANCE, RH (Ex. ECE)	100	B-5	C-6	B-5	IGNITION (Ex. ECE)
31	C-5	—	C-7	CLOCK (Ex. ECE)	101	B-8	A-5	D-6	IGNITION (For ECE)
32	C-5	B-1	B-1	FOG (Ex. ECE OPT)	102	D-2	B-6	—	TAIL LIGHT (Ex. ECE)
33	D-7	B-1	—	FOG, FRONT, LH (For ECE OPT)	103	D-3	B-2	B-2	TAIL LIGHT (For ECE)
34	D-7	B-1	—	FOG, FRONT, RH (For ECE OPT)	104	D-3	A-2	B-3	WINDSHIELD WIPER (Intermittent)
35	D-8	D-8	—	FOG, REAR, LH (For ECE OPT)	105	C-3	C-3	—	SPEAKER
36	D-7	A-8	—	FOG, REAR, RH (For ECE OPT)	106	C-3	D-6	—	SWITCHES:
37	C-3	C-4	C-7	FUEL WARNING	107	B-3	C-5	B-6	A/C (Ex. ECE, RHD)
38	B-6	D-1	D-1	HEAD, LH (Ex. ECE)	108	C-6	B-7	C-4	BACK-UP LIGHT (For A/T)
39	B-7	D-1	—	HEAD, LH (For ECE)	109	B-7	B-7	—	BACK-UP LIGHT (For M/T)
40	B-6	A-1	A-1	HEAD, RH (Ex. ECE)	110	D-8	C-5	C-6	BRAKE WARNING LIGHT
41	B-7	A-1	—	HEAD, RH (For ECE)	111	D-8	A-5	B-6	(For ECE)
42	B-5	B-6	C-7	HEATER CONTROL (Ex. ECE)	112	D-8	C-5	C-6	CHARGE WARNING LIGHT
43	D-7	B-6	—	HEATER CONTROL (For ECE)	113	D-8	B-5	B-6	(For LHD)
44	B-6	C-4	D-7	HIGH BEAM INDICATOR	114	B-5	B-7	B-5	DEFROGGER
45	B-7	C-4	—	HIGH BEAM INDICATOR	115	D-7	D-7	—	DIMMER (Ex. ECE)
46	C-8	A-4	C-5	INTERIOR	116	D-8	D-6	—	DIMMER (For ECE)
47	C-5	C-8	C-8	LICENSE PLATE, LH (Ex. ECE)	117	C-3	A-7	A-7	DOOR COURTESY, FRONT, LH
48	D-6	C-8	—	LICENSE PLATE, LH (For ECE)	118	B-4	B-6	C-4	DOOR COURTESY, FRONT, RH
49	C-5	B-8	B-8	LICENSE PLATE, RH (Ex. ECE)	119	D-2	B-6	C-7	DOOR COURTESY, REAR, LH
50	D-6	B-8	—	LICENSE PLATE, RH (For ECE)	120	C-4	B-7	B-4	(For 4-Door)
51	B-5	C-4	D-7	METER (Ex. ECE)	121	A-1	B-7	C-5	DOOR COURTESY, REAR, RH
52	C-7	C-4	—	METER (For ECE)	122	C-8	A-4	D-5	DOOR COURTESY, REAR, RH
53	B-3	B-4	C-7	OIL WARNING	123	D-6	B-6	B-4	(For 4-Door)
54	C-3	B-4	C-7	P.K.B. WARNING	124	C-7	B-6	—	FOG LIGHT (Ex. ECE OPT)
55	C-8	A-8	B-8	REAR ROOM (For 3-Door)	125	B-1	B-2	B-3	FOG LIGHT, FRONT
56	C-4	B-4	—	RED INDICATOR (For ECE)	126	B-3	C-2	C-2	(For ECE OPT)
57	D-3	D-8	D-8	STOP, LH	127	C-3	C-4	C-5	FOG LIGHT, REAR (For ECE OPT)
58	D-3	A-8	A-8	STOP, RH	128	C-8	A-8	B-8	FUEL WARNING
59	C-5	D-8	D-8	TAIL, LH (Ex. ECE)	129	D-3	D-6	C-6	HAZARD
60	C-6	D-8	—	TAIL, LH (For ECE)	130	B-4	B-6	B-4	HEATER BLOWER
61	D-5	A-8	A-8	TAIL, RH (Ex. ECE)	131	B-5	B-7	B-4	HORN
62	C-7	A-8	—	TAIL, RH (For ECE)	132	B-5	B-7	C-4	IGNITION
63	C-4	D-1	C-1	TURN SIGNAL, FRONT, LH	133	C-4	B-5	B-7	INTERIOR LIGHT
64	C-4	A-1	B-1	TURN SIGNAL, FRONT, RH	134	C-4	B-5	B-7	LIGHT CONTROL (Ex. ECE)
65	D-4	B-4	C-7	TURN SIGNAL, INDICATOR, LH	135	B-3	C-4	C-7	LIGHT CONTROL (For ECE)
66	D-4	C-4	C-7	TURN SIGNAL, INDICATOR, RH	136	B-3	B-1	B-1	NEUTRAL START (For A/T)
67	D-4	D-8	D-8	TURN SIGNAL, REAR, LH					OIL PRESSURE
68	D-4	A-8	A-8	TURN SIGNAL, REAR, RH					P.K.B.
69	D-4	D-3	D-3	TURN SIGNAL, SIDE, LH					REAR ROOM LIGHT (For 3-Door)
70	D-4	A-3	A-3	TURN SIGNAL, SIDE, RH					STOP LIGHT

Nombre	Référence sur le plan			Composant
	Fig. 1	Fig. 2	Fig. 3	
4	B-8	C-6	B-6	Amplificateur
2	B-1	C-2	C-2	Alternateur
1	D-2	B-4	B-7	Amplificateur A/C (sauf ECE)
3	C-1	C-3	C-3	Batterie 12V
19	C-1	C-3	C-4	Batterie d'appoint
72	—	B-4	D-7	Climatiseur (H&B)
7	C-1	D-2	D-2	Climatiseur
15	B-1	C-3	C-3	Climatiseur flexible
84	B-4	B-3	C-4	Dispositif d'arrêt arrière
8	D-1	B-2	B-2	Dispositif
71	D-2	B-2	B-2	Ensemble magnétique
136	B-3	B-1	B-1	Ensemble temp. eau
14	B-3	—	—	Fusible CHARGE 5A
101	B-8	A-5	D-6	Hublot
102	D-2	B-6	—	Indicateur
114	B-5	B-7	B-5	Indicateur conditionnement
116	D-8	D-6	—	Indicateur d'appoint (sauf ECE, OPT)
115	D-7	D-7	—	Indicateur d'appoint, avant (sauf ECE, OPT)
124	C-7	B-6	—	Indicateur d'appoint, arrière (sauf ECE, OPT)
123	D-6	B-6	C-4	Indicateur d'éclairage
121	A-1	B-7	C-5	Indicateur
107	B-3	C-5	B-6	Indicateur
125	B-1	B-2	B-3	Indicateur neutre
118	B-4	B-6	C-4	Indicateur
122	C-8	A-4	D-5	Indicateur intérieur
128	C-8	A-8	B-8	Indicateur intérieur, (pour 3-portes)
112	D-8	C-5	C-6	Indicateur intérieur, (pour 4-portes)
113	D-8	B-5	B-6	Indicateur intérieur, (pour 4-portes)
110	D-8	C-5	C-6	Indicateur intérieur, (pour 4-portes)
111	D-8	A-5	B-6	Indicateur intérieur, (pour 4-portes)
134	C-4	B-5	B-7	Indicateur intérieur, (pour 4-portes)
132	B-5	B-7	C-4	Indicateur intérieur, (pour 4-portes)
108	C-6	B-7	C-4	Indicateur intérieur, (pour 4-portes)
109	B-7	B-7	—	Indicateur (sauf ECE)
120	C-4	B-7	B-4	Indicateur (pour ECE)
105	C-3	C-3	—	Indicateur d'avertissement (sauf ECE)
117	C-3	A-7	A-7	Indicateur d'avertissement (sauf ECE)
130	B-4	B-6	B-4	Indicateur d'avertissement
106	C-3	D-6	—	Indicateur voyant d'arrêt
133	C-4	B-5	B-7	Indicateur voyant d'arrêt
131	B-5	B-7	C-4	Indicateur voyant d'arrêt
129	D-3	D-6	C-6	Indicateur voyant d'arrêt
126	B-3	C-2	C-2	Indicateur voyant d'arrêt
103	D-3	B-2	B-2	Indicateur voyant d'arrêt
104	D-3	A-2	B-3	Indicateur voyant d'arrêt
119	D-2	B-6	C-7	Indicateur voyant d'arrêt
127	C-3	C-4	C-5	Indicateur voyant d'arrêt
10	B-3	C-4	C-7	Indicateur voyant d'arrêt
135	B-3	C-4	C-7	Indicateur voyant d'arrêt
17	B-4	A-2	A-2	Indicateur voyant d'arrêt
18	B-4	B-1	—	Indicateur voyant d'arrêt
32	C-5	B-1	B-1	Indicateur voyant d'arrêt
33	D-7	B-1	—	Indicateur voyant d'arrêt
34	D-7	B-1	—	Indicateur voyant d'arrêt
35	D-8	D-8	—	Indicateur voyant d'arrêt
36	D-7	A-8	—	Indicateur voyant d'arrêt
37	C-3	C-4	C-7	Indicateur voyant d'arrêt
53	B-3	B-4	C-7	Indicateur voyant d'arrêt
67	D-4	D-8	D-8	Indicateur voyant d'arrêt
68	D-4	A-8	A-8	Indicateur voyant d'arrêt
63	C-4	D-1	C-1	Indicateur voyant d'arrêt
64	C-4	A-1	B-1	Indicateur voyant d'arrêt
69	D-4	D-3	D-3	Indicateur voyant d'arrêt
70	D-4	A-3	A-3	Indicateur voyant d'arrêt
65	D-4	B-4	C-7	Indicateur voyant d'arrêt
66	D-4	C-4	C-7	Indicateur voyant d'arrêt


6



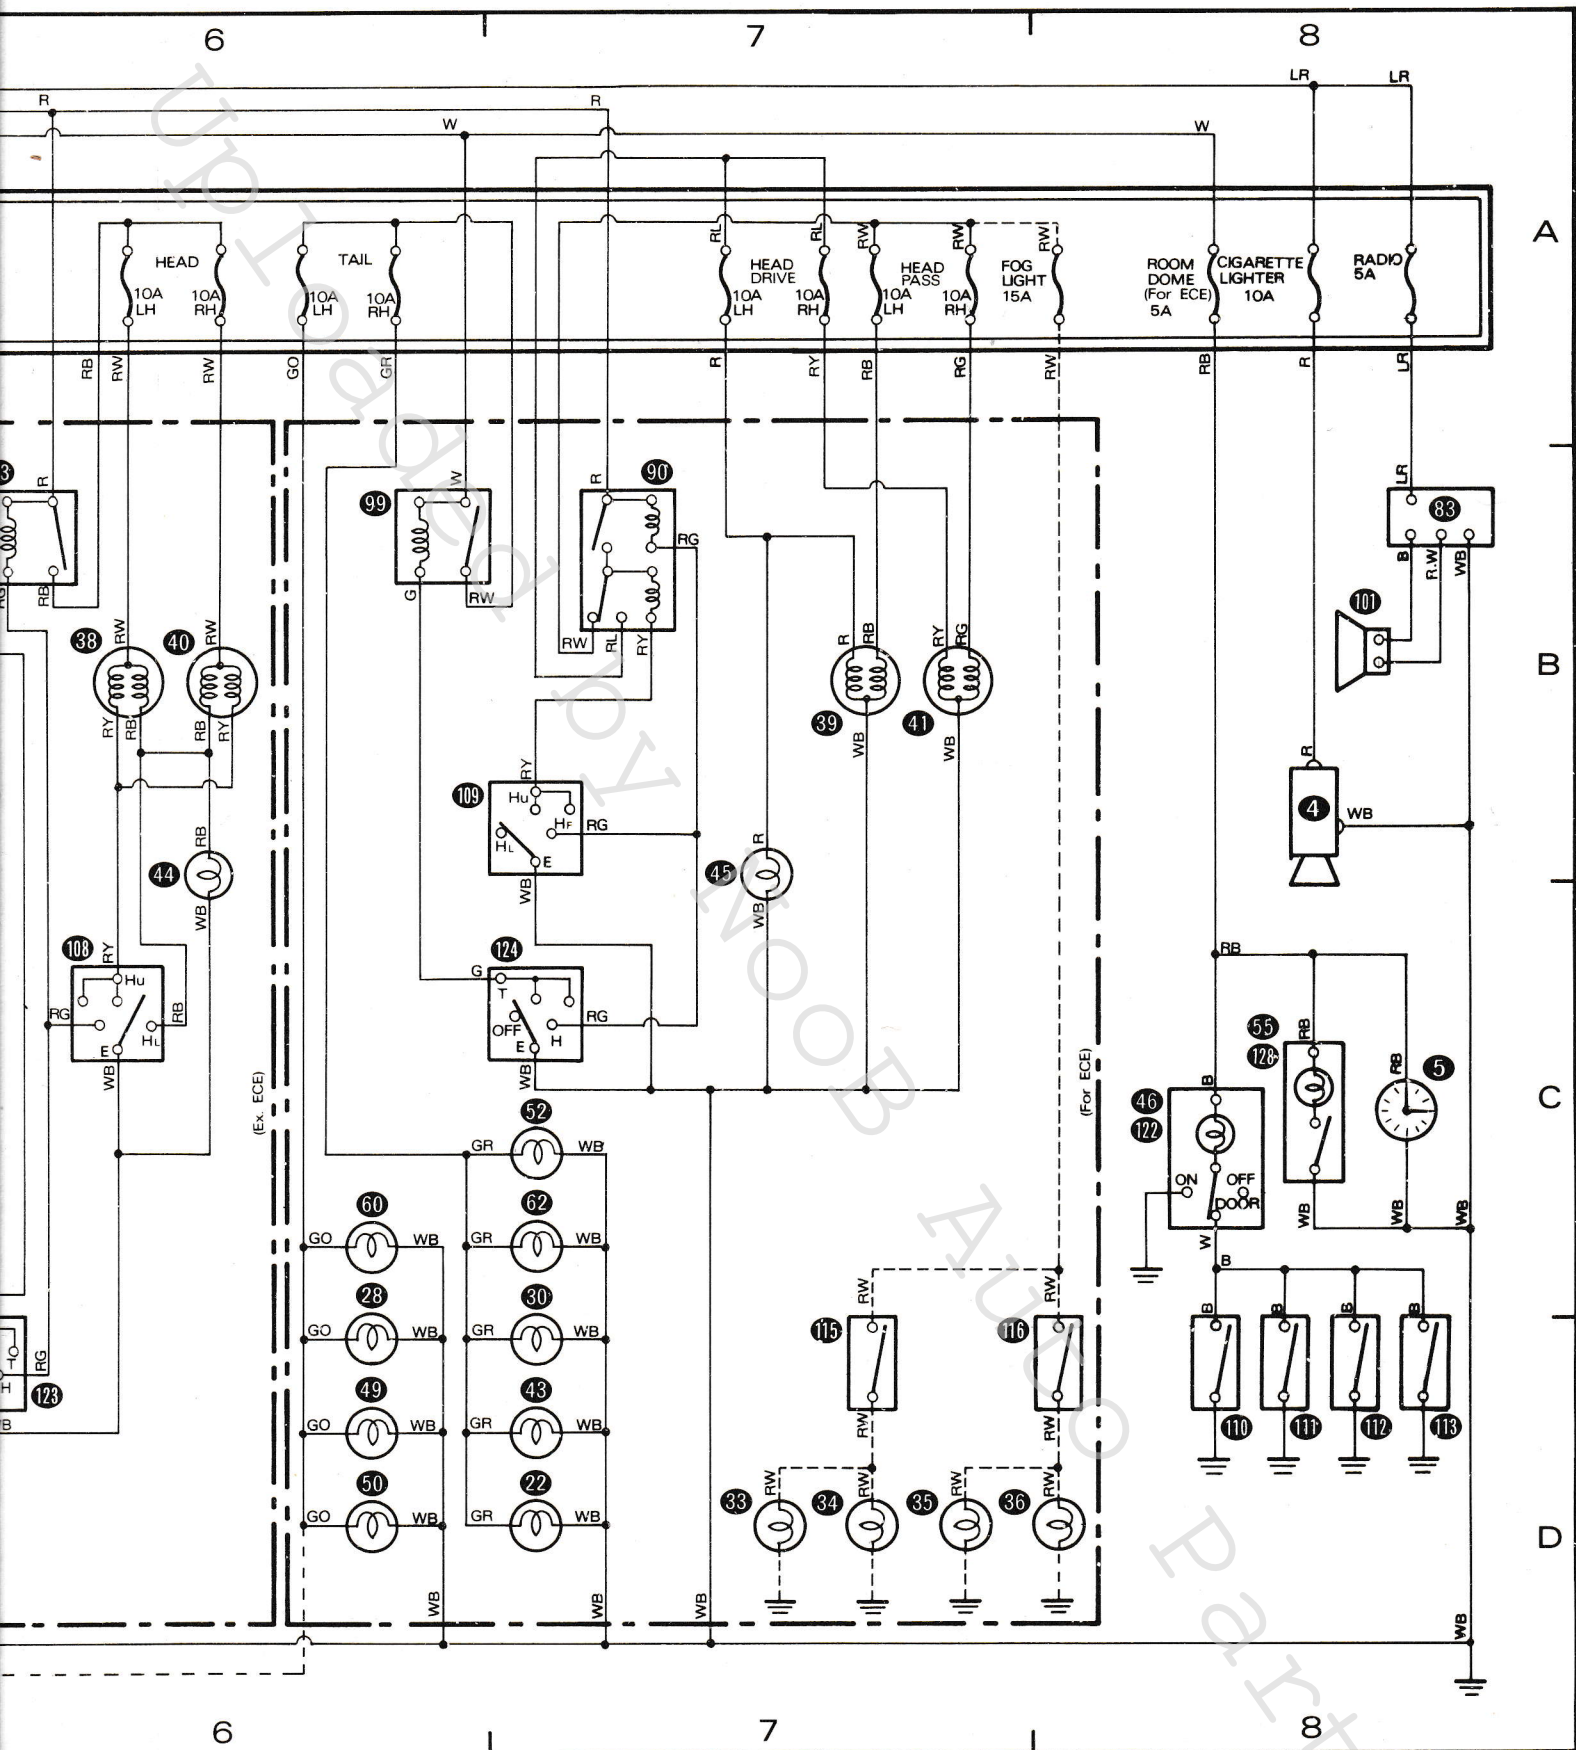


[illegible]


[illegible]

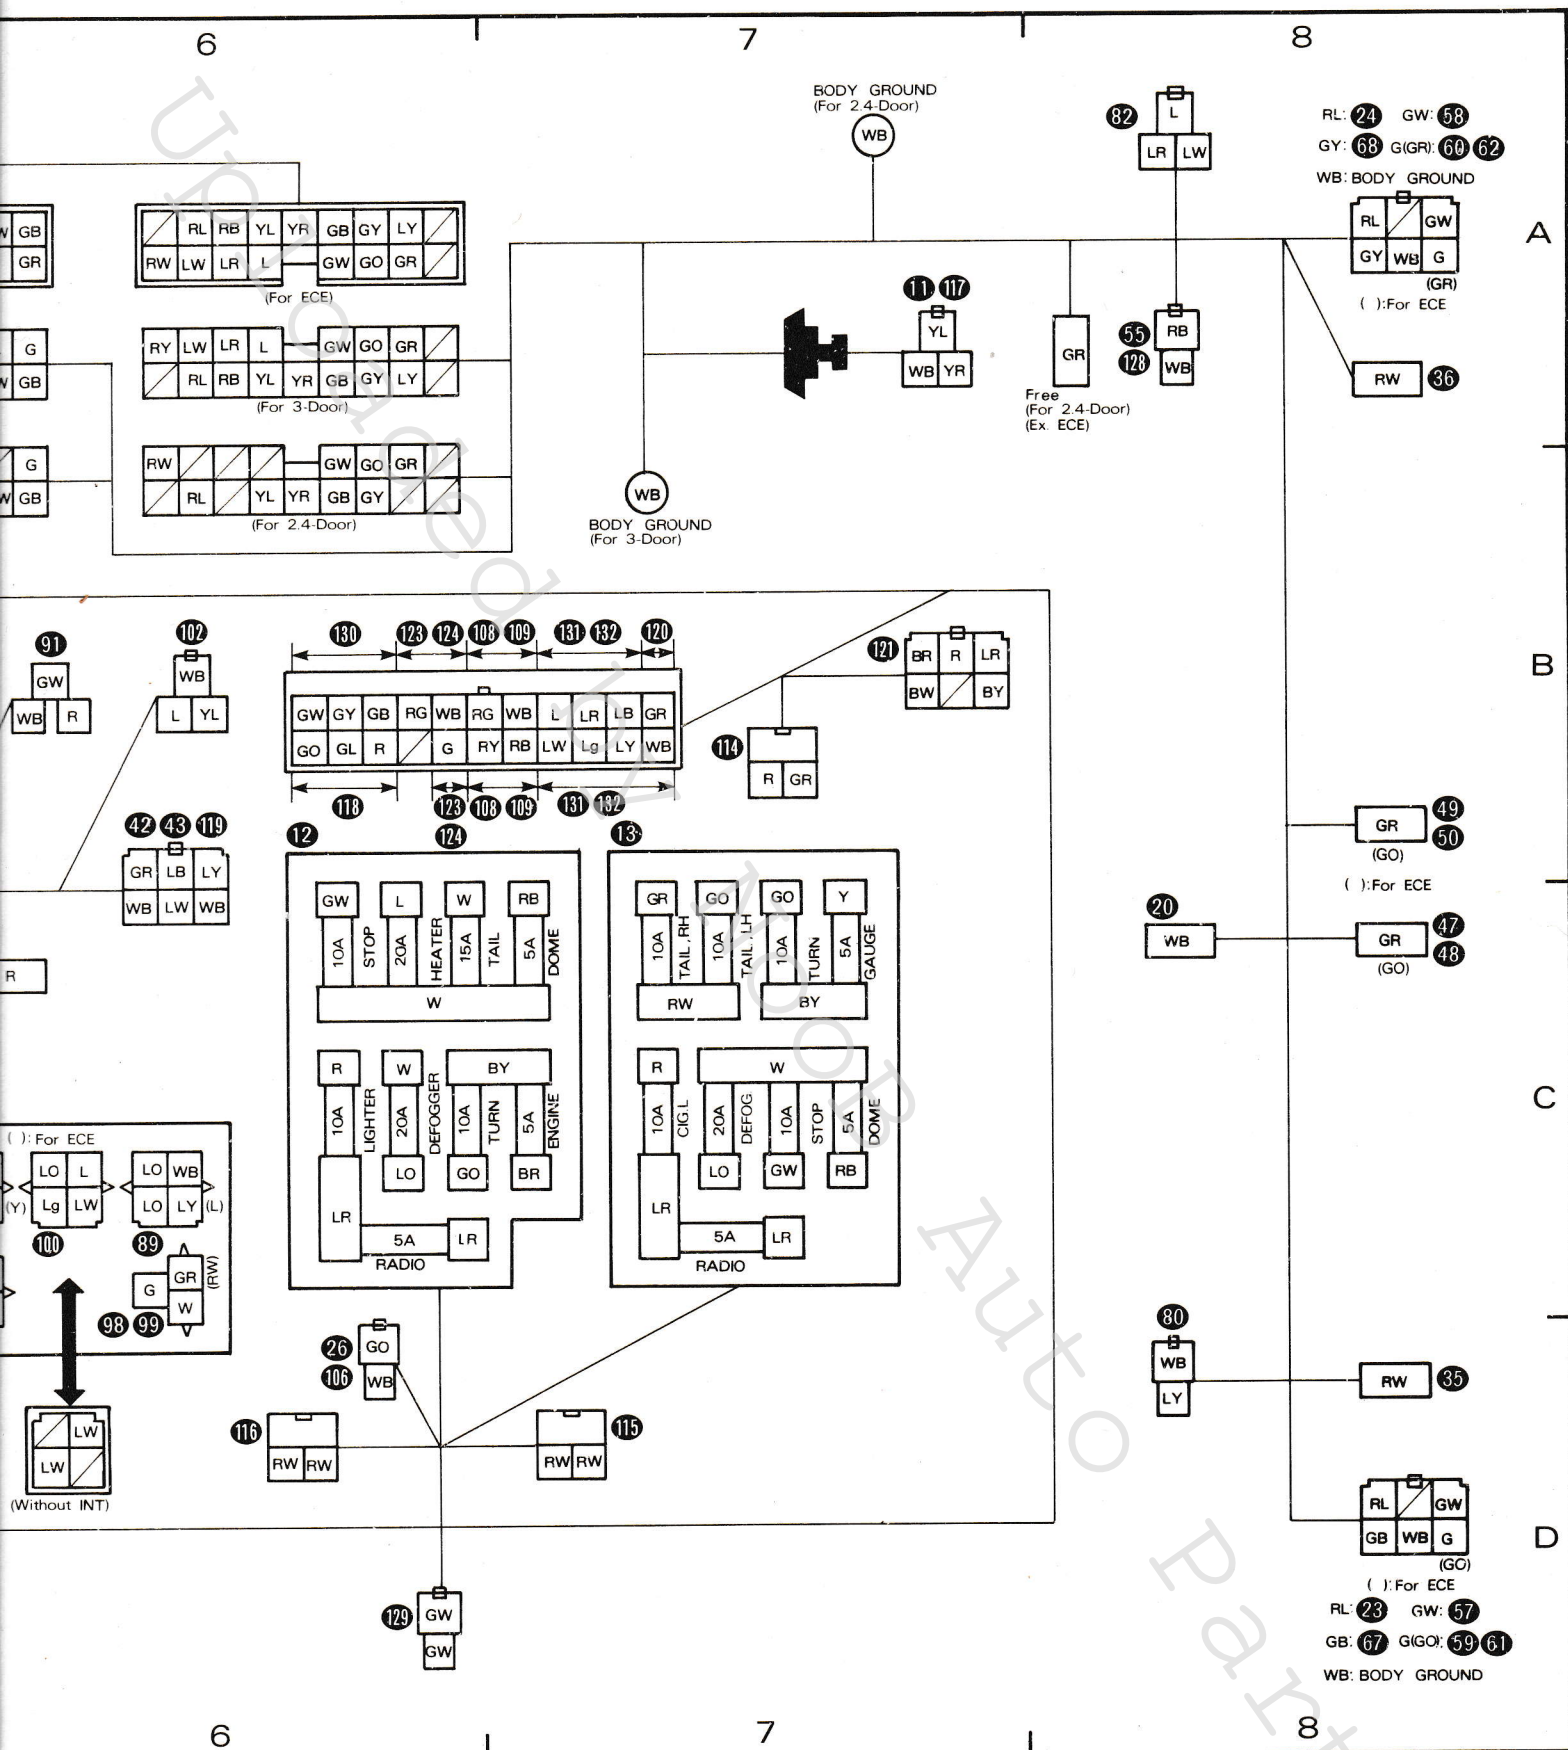


RHD, TERCEL ELECTRICAL WIRING HARNESS — 1980

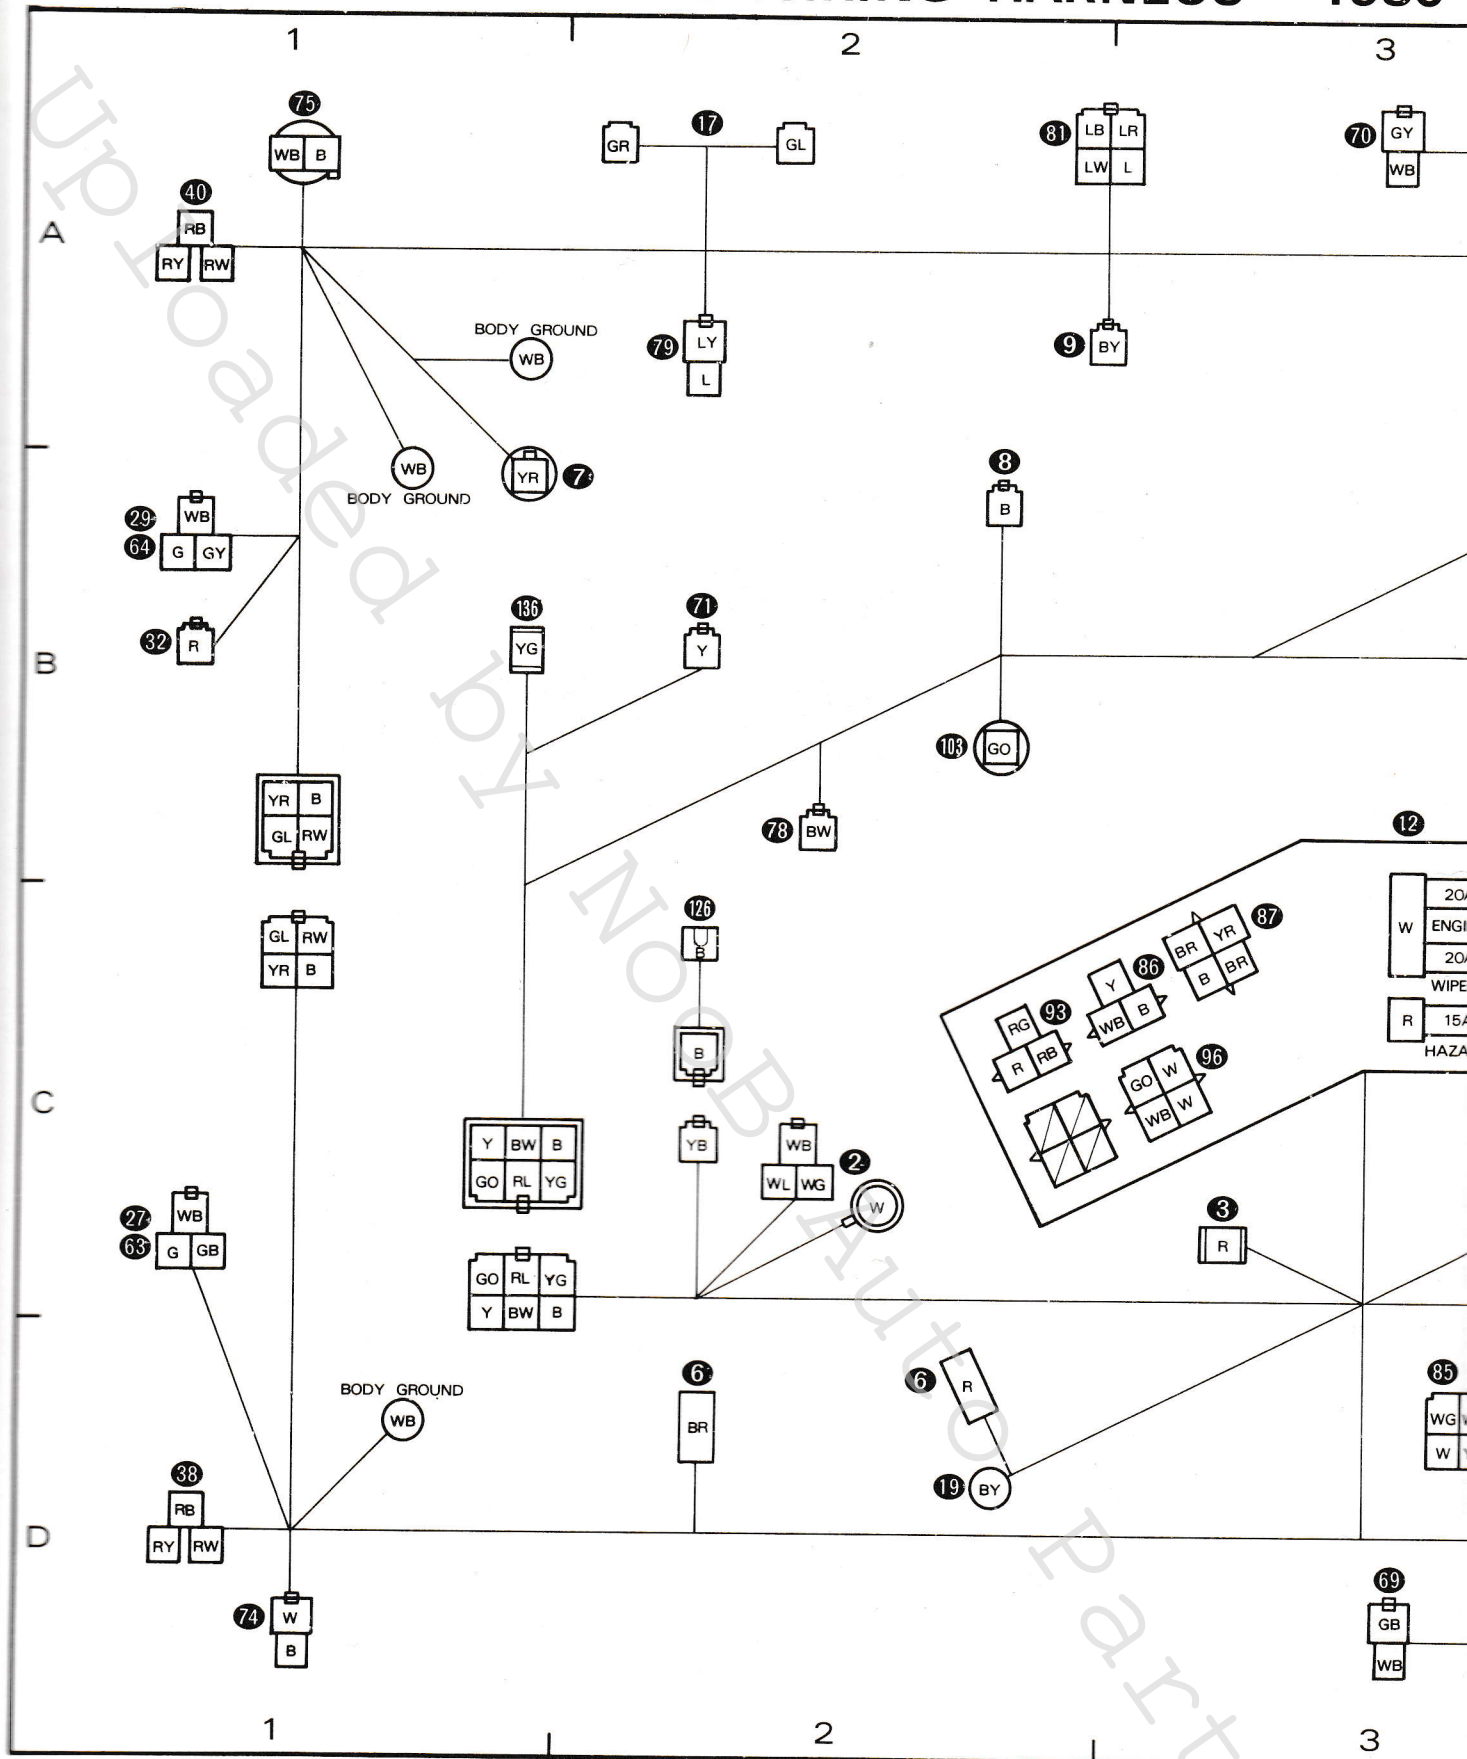

0 PRODUCTION VEHICLE

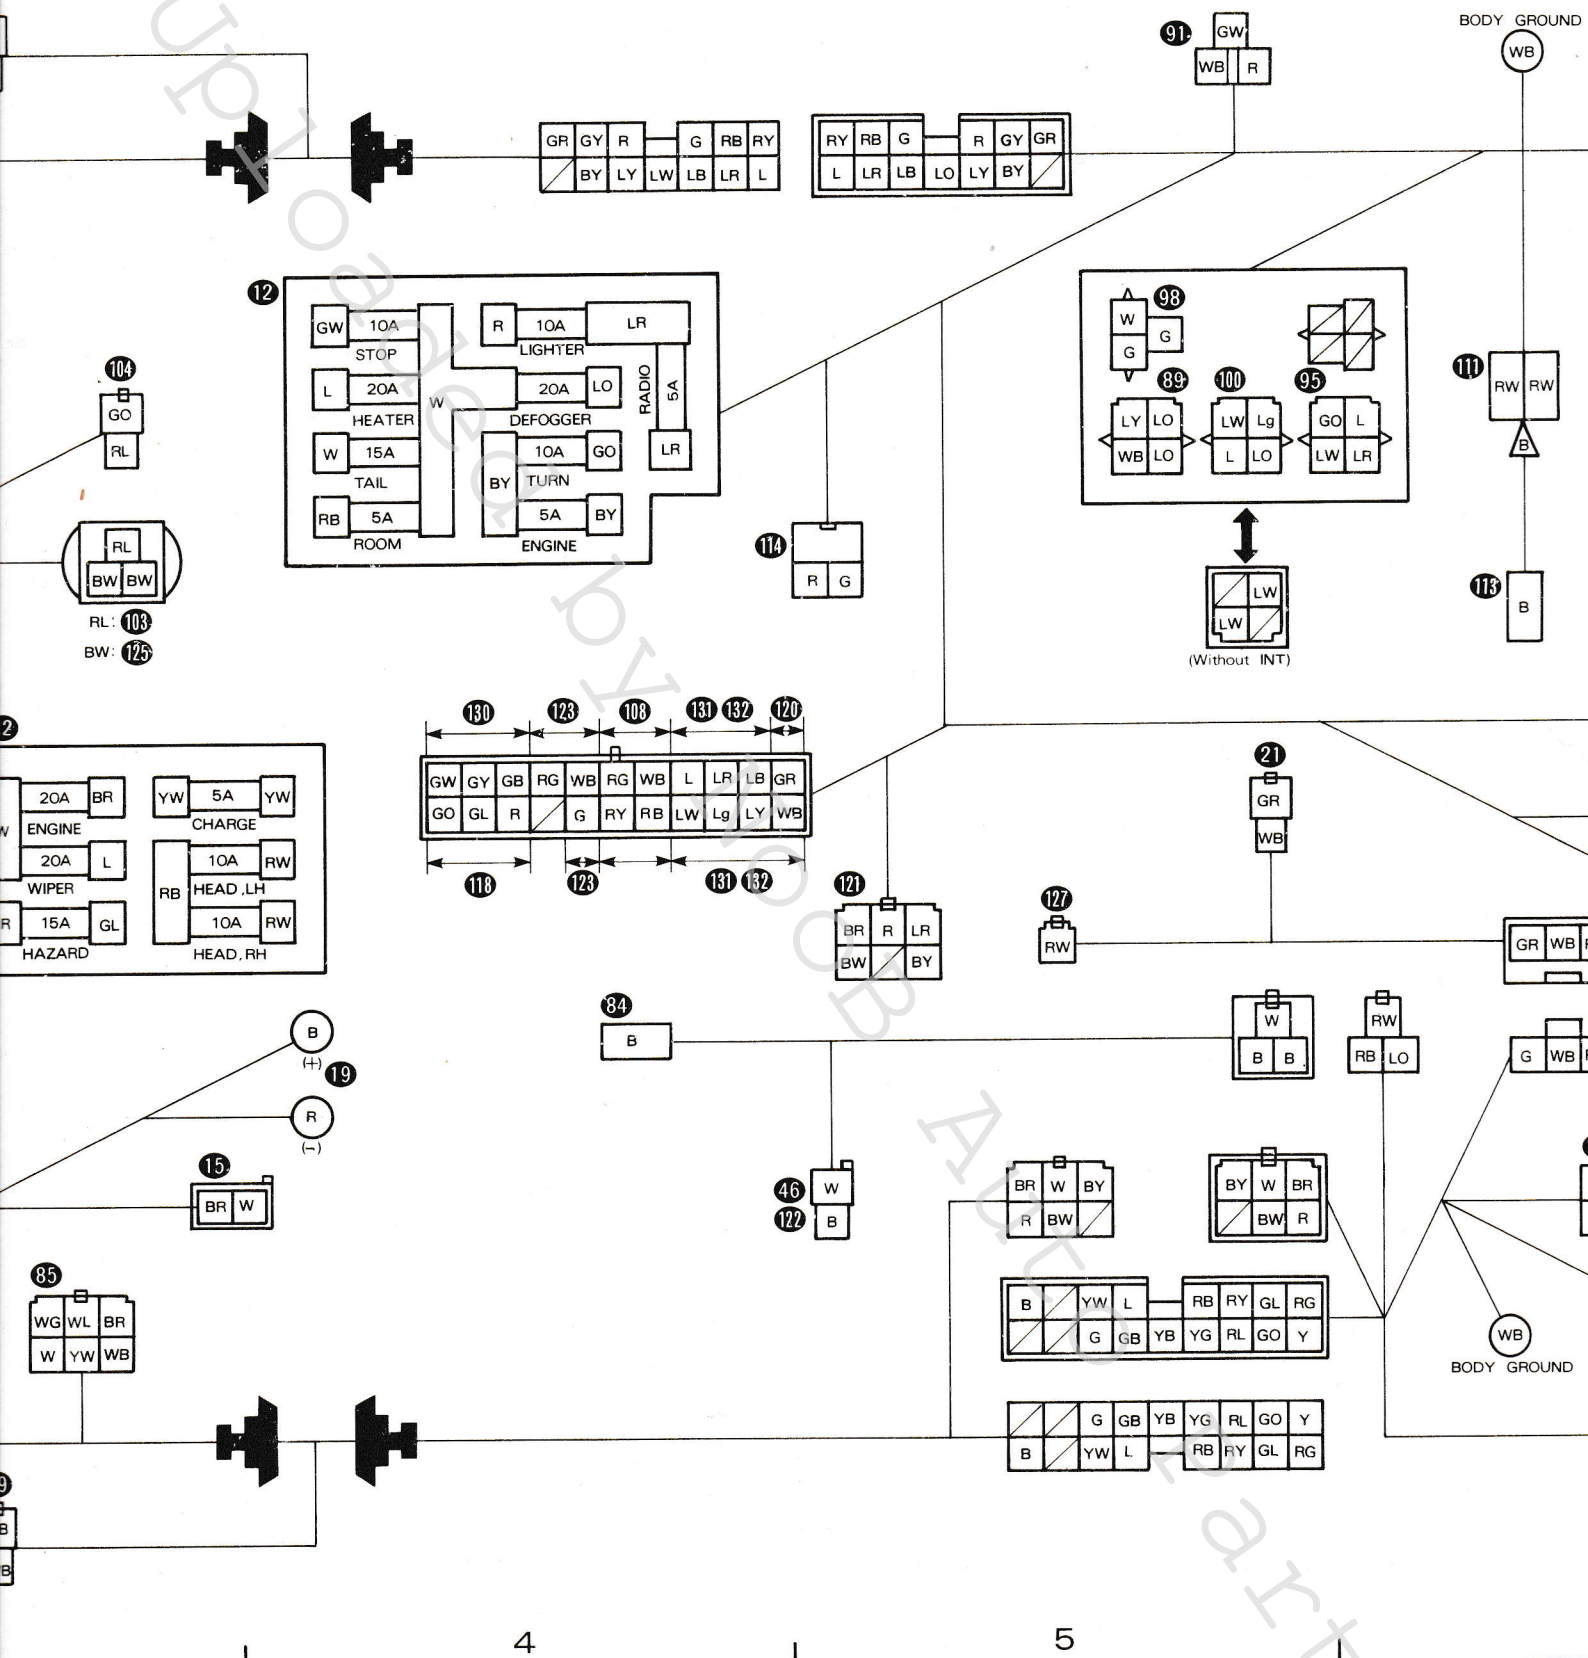

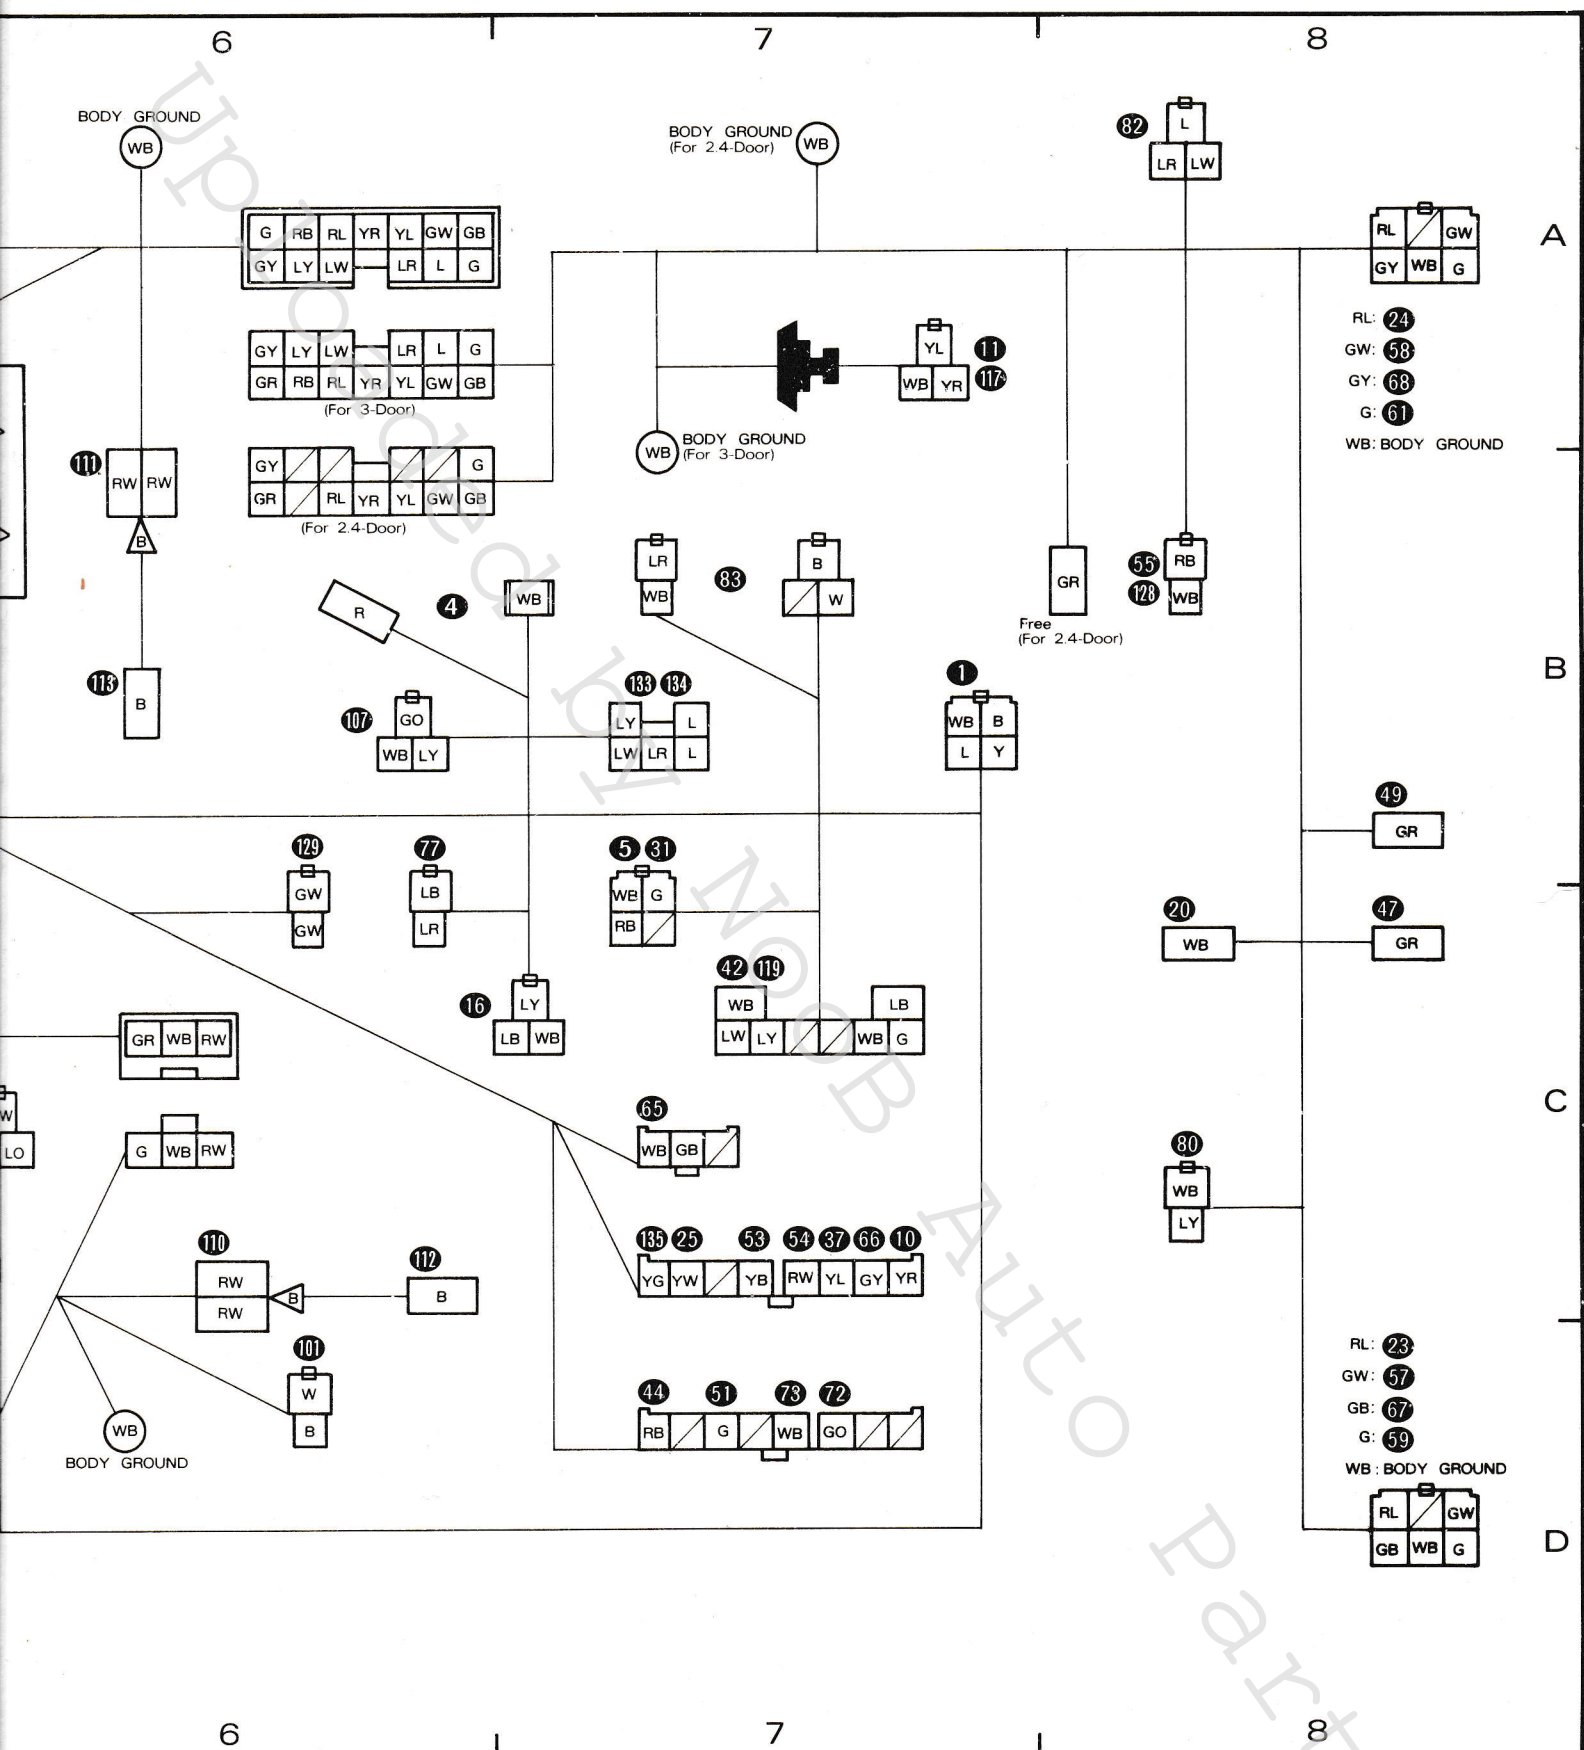

COROLLA
(Sedan & Wagon)

88

Al


1

4


Nombre	Répérage sur le plan			Composants
	Fig. 1	Fig. 2	Fig. 3	
5 92 1	B-8 D-1 C-2	B-5 B-3 B-6	D-5 D-3 D-3	Allume-cigare Alternateur Amplificateur A/C
3 26 4	D-1 B-2 D-2	B-2 A-3 A-4	B-2 A-3 A-4	Batterie 12V Bobine allumage Bobine chauffage d'appoint
135 92 93	D-1 — —	— C-4 C-5	— B-4 B-5	Captteur de vitesse Compteur (+) Compteur (—)
7	B-2	A-4	A-3	Condenseur
20	C-1	B-2	B-3	Connecteur fusible
21	C-2	D-2	D-2	Connecteur fusible (pour moteur électrique)
114 115 9	B-4 B-4 B-2	B-7 C-8 —	A-7 C-8 —	Dégivreur lunette arrière Dégivreur lunette avant (pour Charrette) Distributeur
88 90 91	D-3 D-3 D-3	A-4 — —	— A-3 A-3	Embrayage magnétique Embrayage magnétique Embrayage magnétique
110 195 196	C-3 D-3 D-3	— B-4 A-4	— B-4 C-4	Emetteur pression d'huile Emetteur temp eau Emetteur temp eau
108 17 18	C-1 C-1 A-8	C-2 B-2 C-3	C-3 B-2 —	Filtre anti-parasites Fusible, CHARGE Fusible, TAIL 10 A (pour l'Allemagne)
133 134	C-8 C-8	D-6 A-6	D-4 A-7	Haut-parleur, LH Haut-parleur, RH
153	C-7	—	D-5	Interrupteurs: Anti-brouillard, arr. (pour la Grande-Bretagne)
137 162	B-3 C-7	B-6 D-6	D-5 C-3	A/C (air conditionné) Commande d'écarter les portes Commutateur sup. transmission
174	B-2 C-2	A-5	—	Commutateur sup. transmission (pour 3T) Commutateur sup. transmission (pour 4K) Commutateur sup. transmission (pour l'Australie)
175	B-2	B-5	—	Commutateur sup. transmission (pour 4K) Commutateur sup. transmission (pour l'Australie)
176	B-2 C-2	—	—	Commutateur sup. transmission (pour l'Australie)
160 146 163	A-1 B-4 B-8	C-4 B-5 C-6	C-5 C-5 D-7	Dallage Dégivreur Démarrage neutre
164 161 151	B-4 C-4 C-4	A-5 D-7 B-6	C-3 D-7 D-4	Démarrage neutre Eclairage intérieur Eclairage intérieur
152 144 150	D-4 D-6 C-4	B-6 A-5 B-6	A-7 D-4 A-7	Eclairage intérieur Eclairage intérieur Eclairage intérieur
184 180 148	C-5 C-5 C-7	C-4 C-6 D-6	C-6 C-5 —	Essuie-glace, arrière Essuie-glace, avant Gradateur (pour l'Australie)
147 159 156	B-6 B-6 B-3	D-6 D-6 B-8	C-5 C-5 B-8	Gradateur (sauf l'Australie) Klaxon Lampe avertisseur
155 177 184	B-3 B-5 C-3	A-8 D-6 —	A-8 C-5 —	Lampe avertisseur (pour Sedan) Lampe clignotant (pour l'Australie)
122 179 145	B-5 B-6 B-4	D-6 D-6 B-4	C-6 C-5 —	Lampe voyant d'arrêt Lave-glace, arrière Lave-glace pare-brise Lumière ambiante
138 169 165	C-3 D-2 B-3	B-4 B-6 B-4	C-3 C-4 B-4	Lumière d'arrêt Moteur ventilateur Pression (pour l'Australie)
166 138 139	B-3 B-1 B-4	A-4 C-6 B-5	C-4 D-7 B-4	Pression huile (pour l'Australie) Projecteur arrière Projecteur arrière
140 141 171	B-4 B-2 B-4	A-5 B-5 A-4	C-4 B-4 —	Projecteur arrière Projecteur arrière Thermo (pour 3T)
172 173	B-2 D-2	— B-3	— B-3	Thermo (pour l'Australie) Thermo
178 167	C-2 C-3	A-3 —	— D-7	(pour moteur électrique) Vide
168 142	C-3 C-4	D-5 —	D-7 —	Voyant avertisseur (pour l'Australie) Voyant de niveau d'huile (pour l'Australie)
143 157	C-3 B-5	D-3 D-6	A-5 C-5	Voyant de niveau d'huile (pour l'Australie) Voyant détresse
13 194	C-3 D-3	C-5 C-4	B-4 B-4	Jauge d'essence Jauge temp eau
24 25	B-6 B-6	D-1 A-1	C-1 B-1	Klaxon, LH Klaxon, RH
46 45	C-7 C-7	— —	D-7 A-8	Lampes: Anti-brouillard, arr. Grande-Bretagne Anti-brouillard, arr. Grande-Bretagne
43 35 47	D-7 C-3 B-3	— C-4 C-4	D-5 — C-5	Anti-brouillard, voyant (pour la Grande-Bretagne) Avertisseur de frein Avertisseur d'essence
29 57 80	C-8 B-8 C-5	B-4 B-4 D-8	C-4 D-5 D-8	Avertisseur d'huile Cendrier Clignotant, arrière (pour Charrette)
79 83	C-5 C-6	A-8 B-8	A-8 B-8	Clignotant, arrière (pour Charrette) Clignotant, arrière (pour Charrette)


3



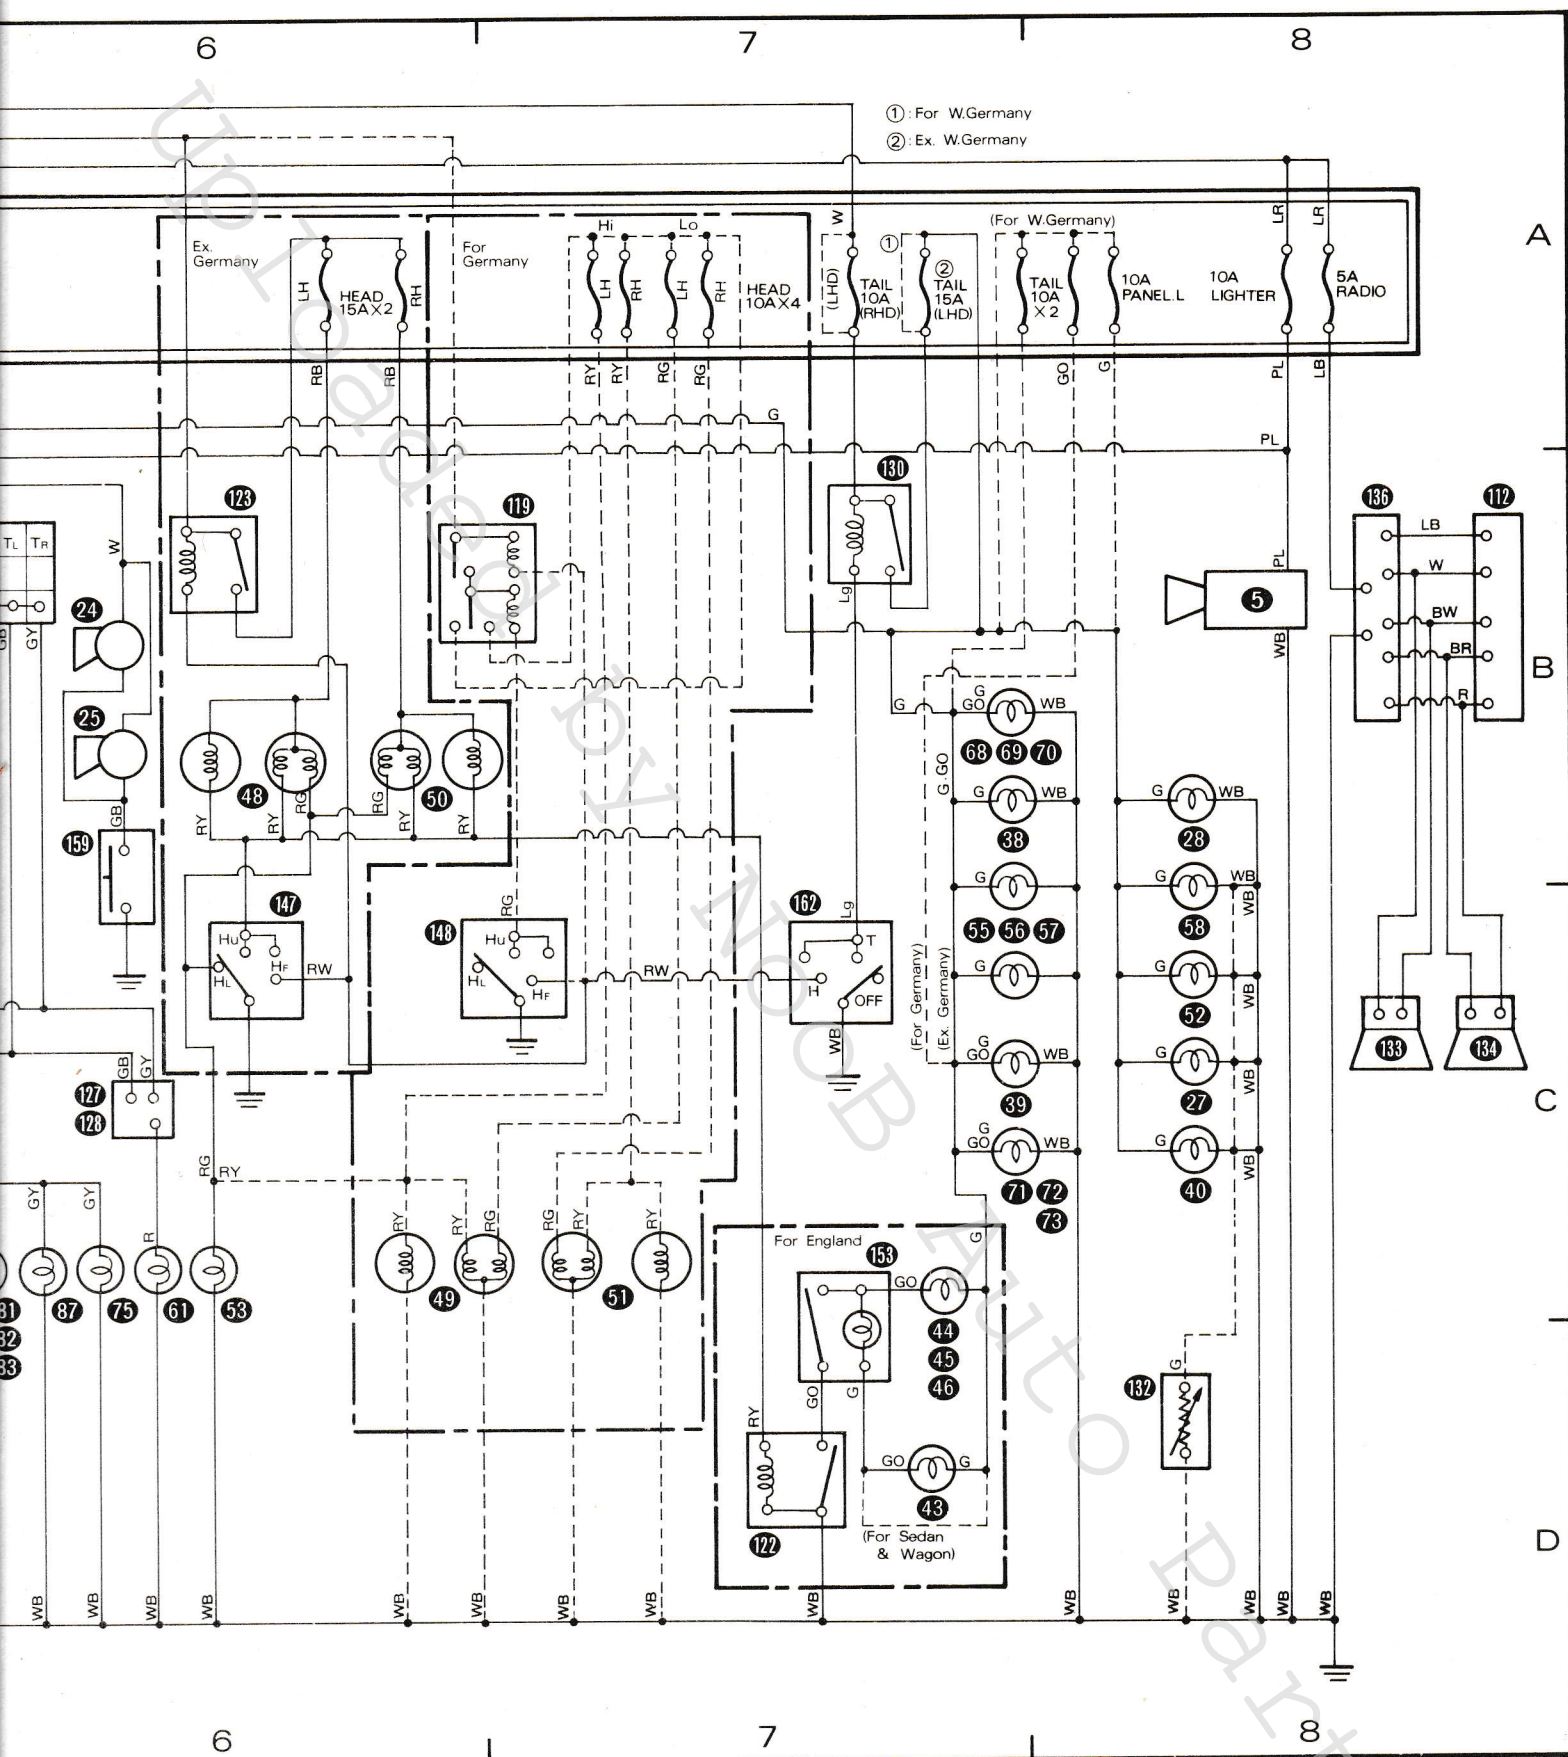


LHD, COROLLA (Sedan & Wagon) ELECTRICAL WIRING

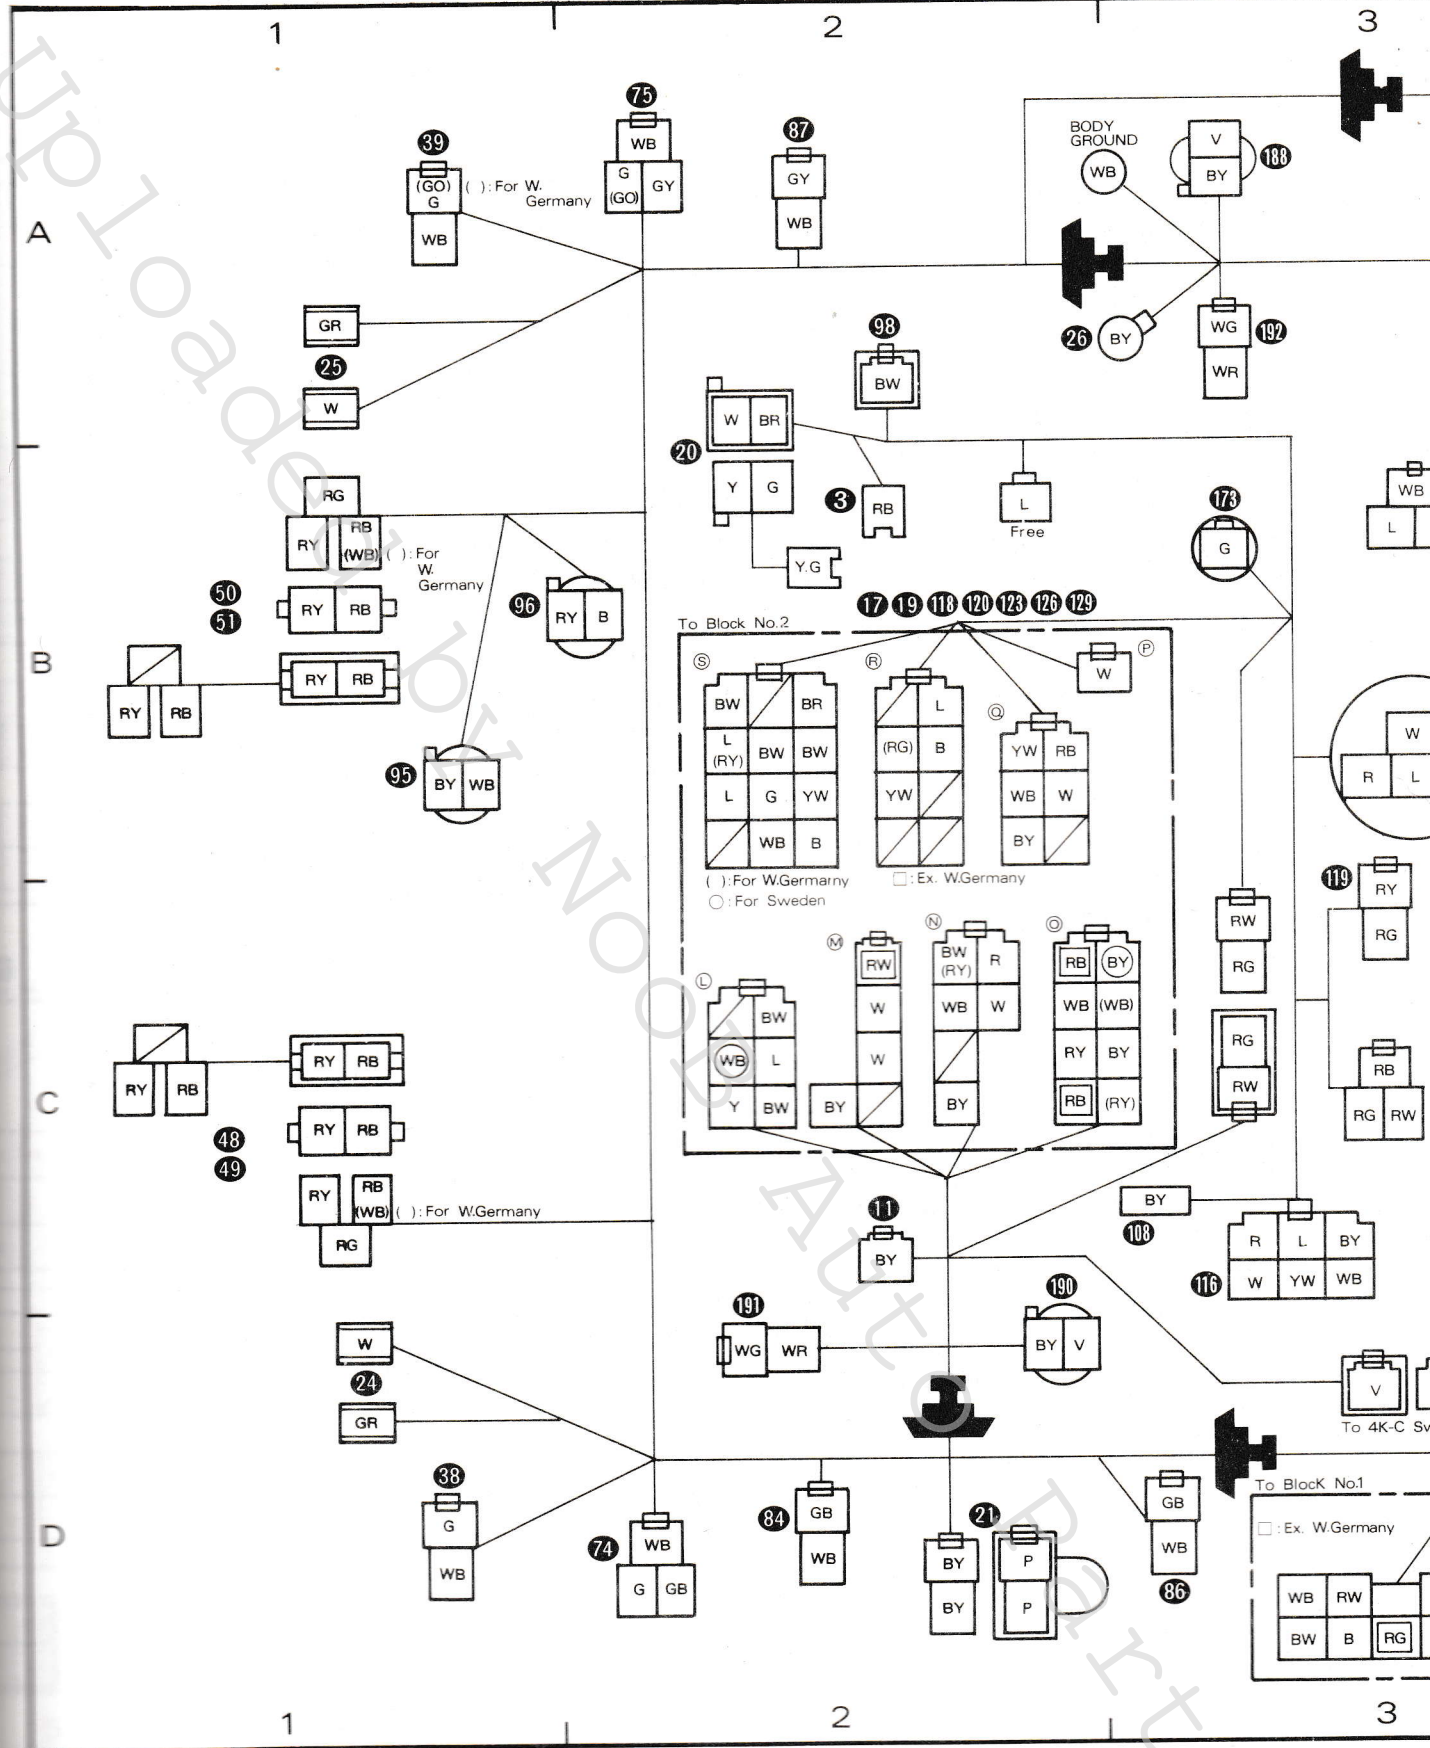

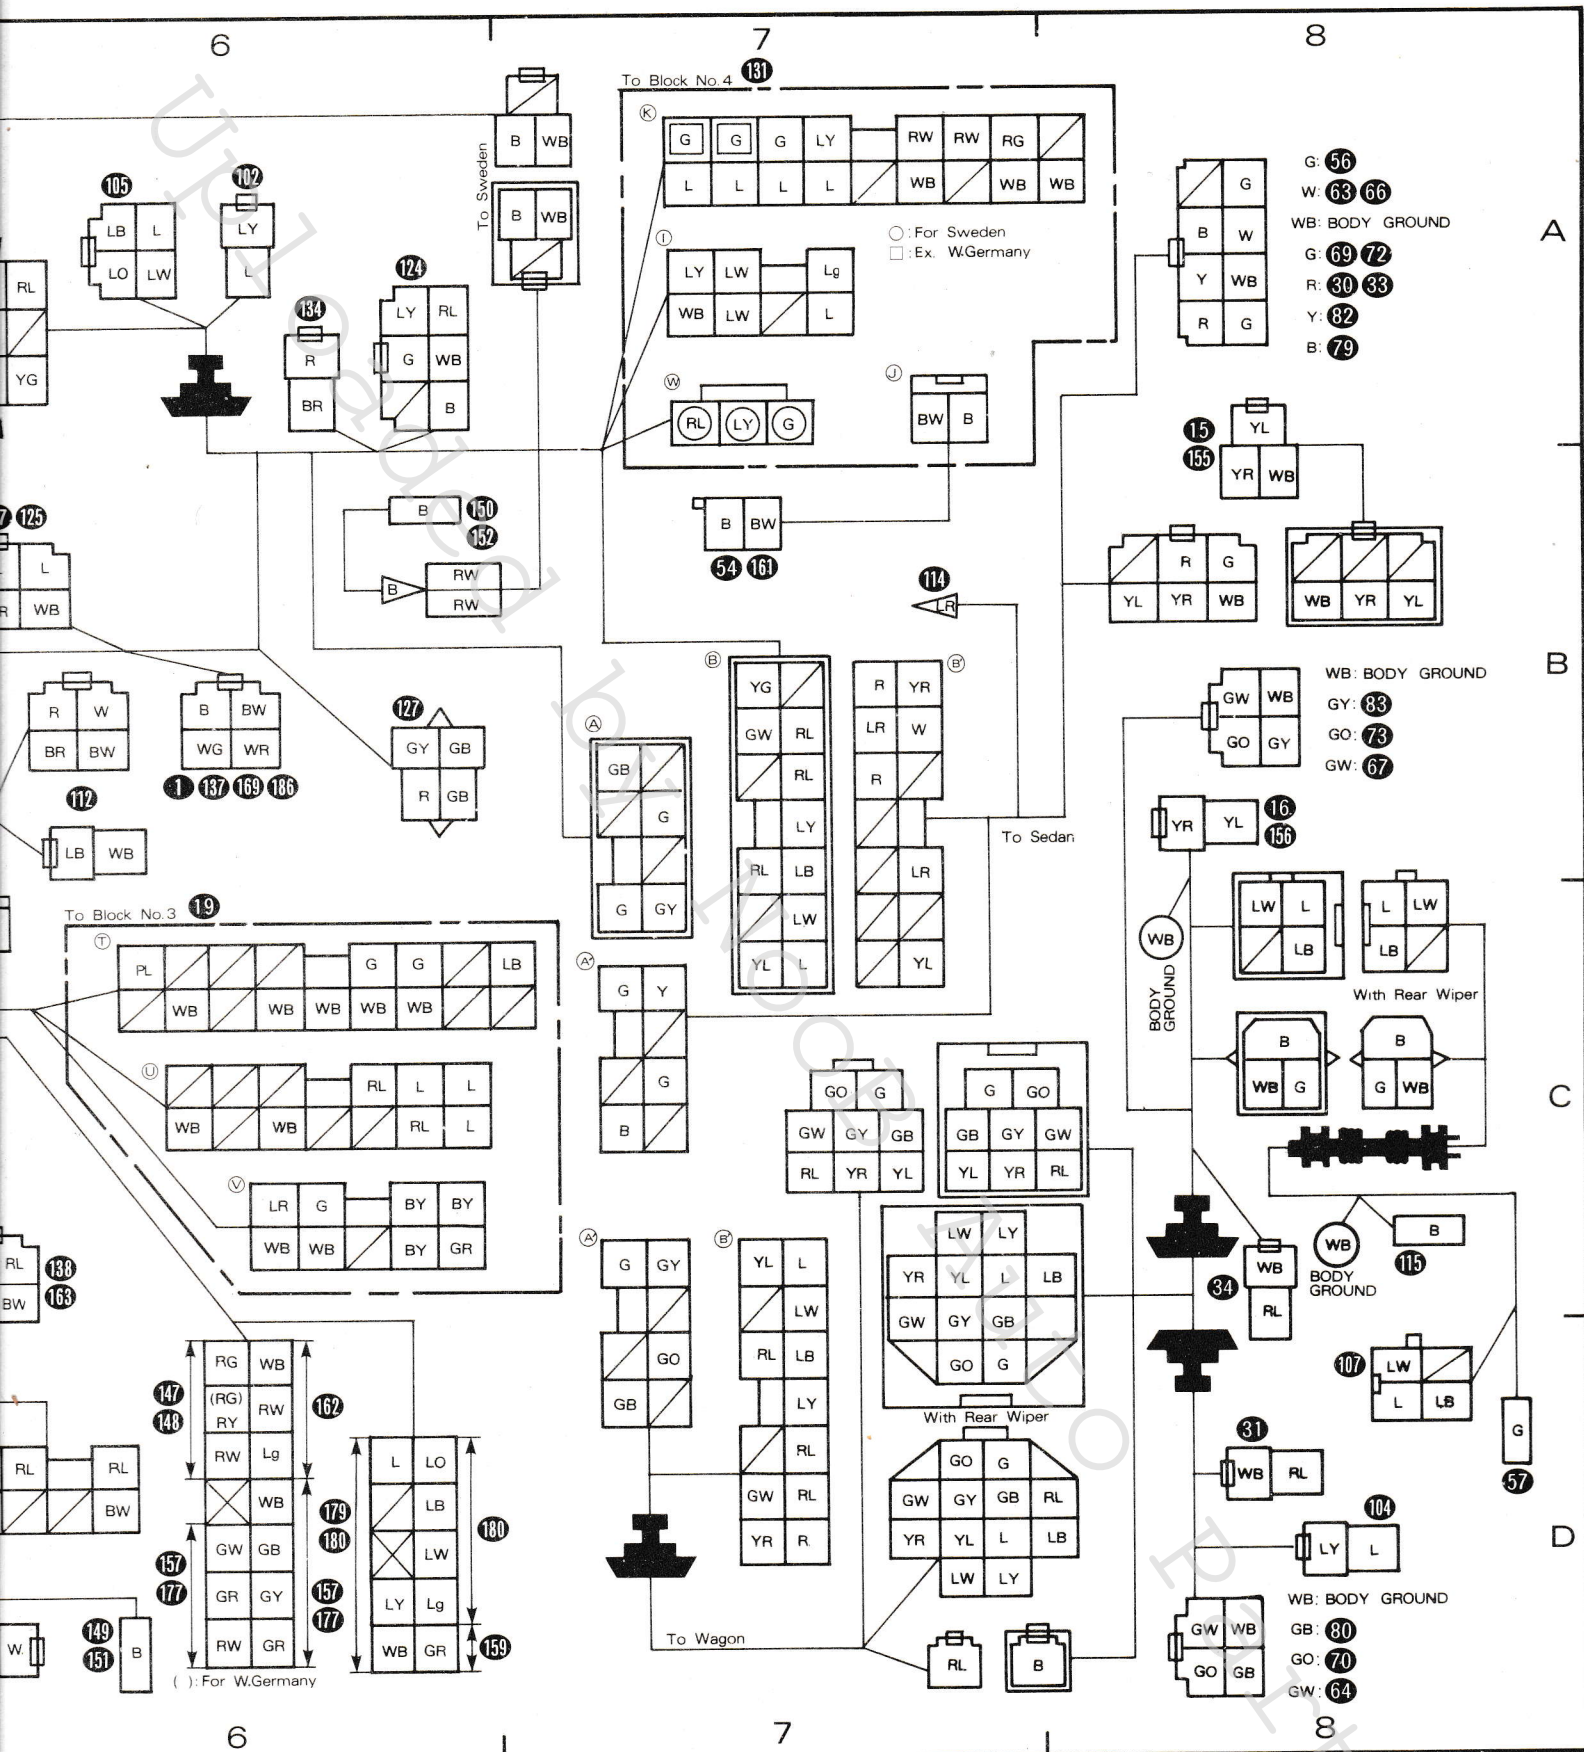

() : For KE

() : For KE

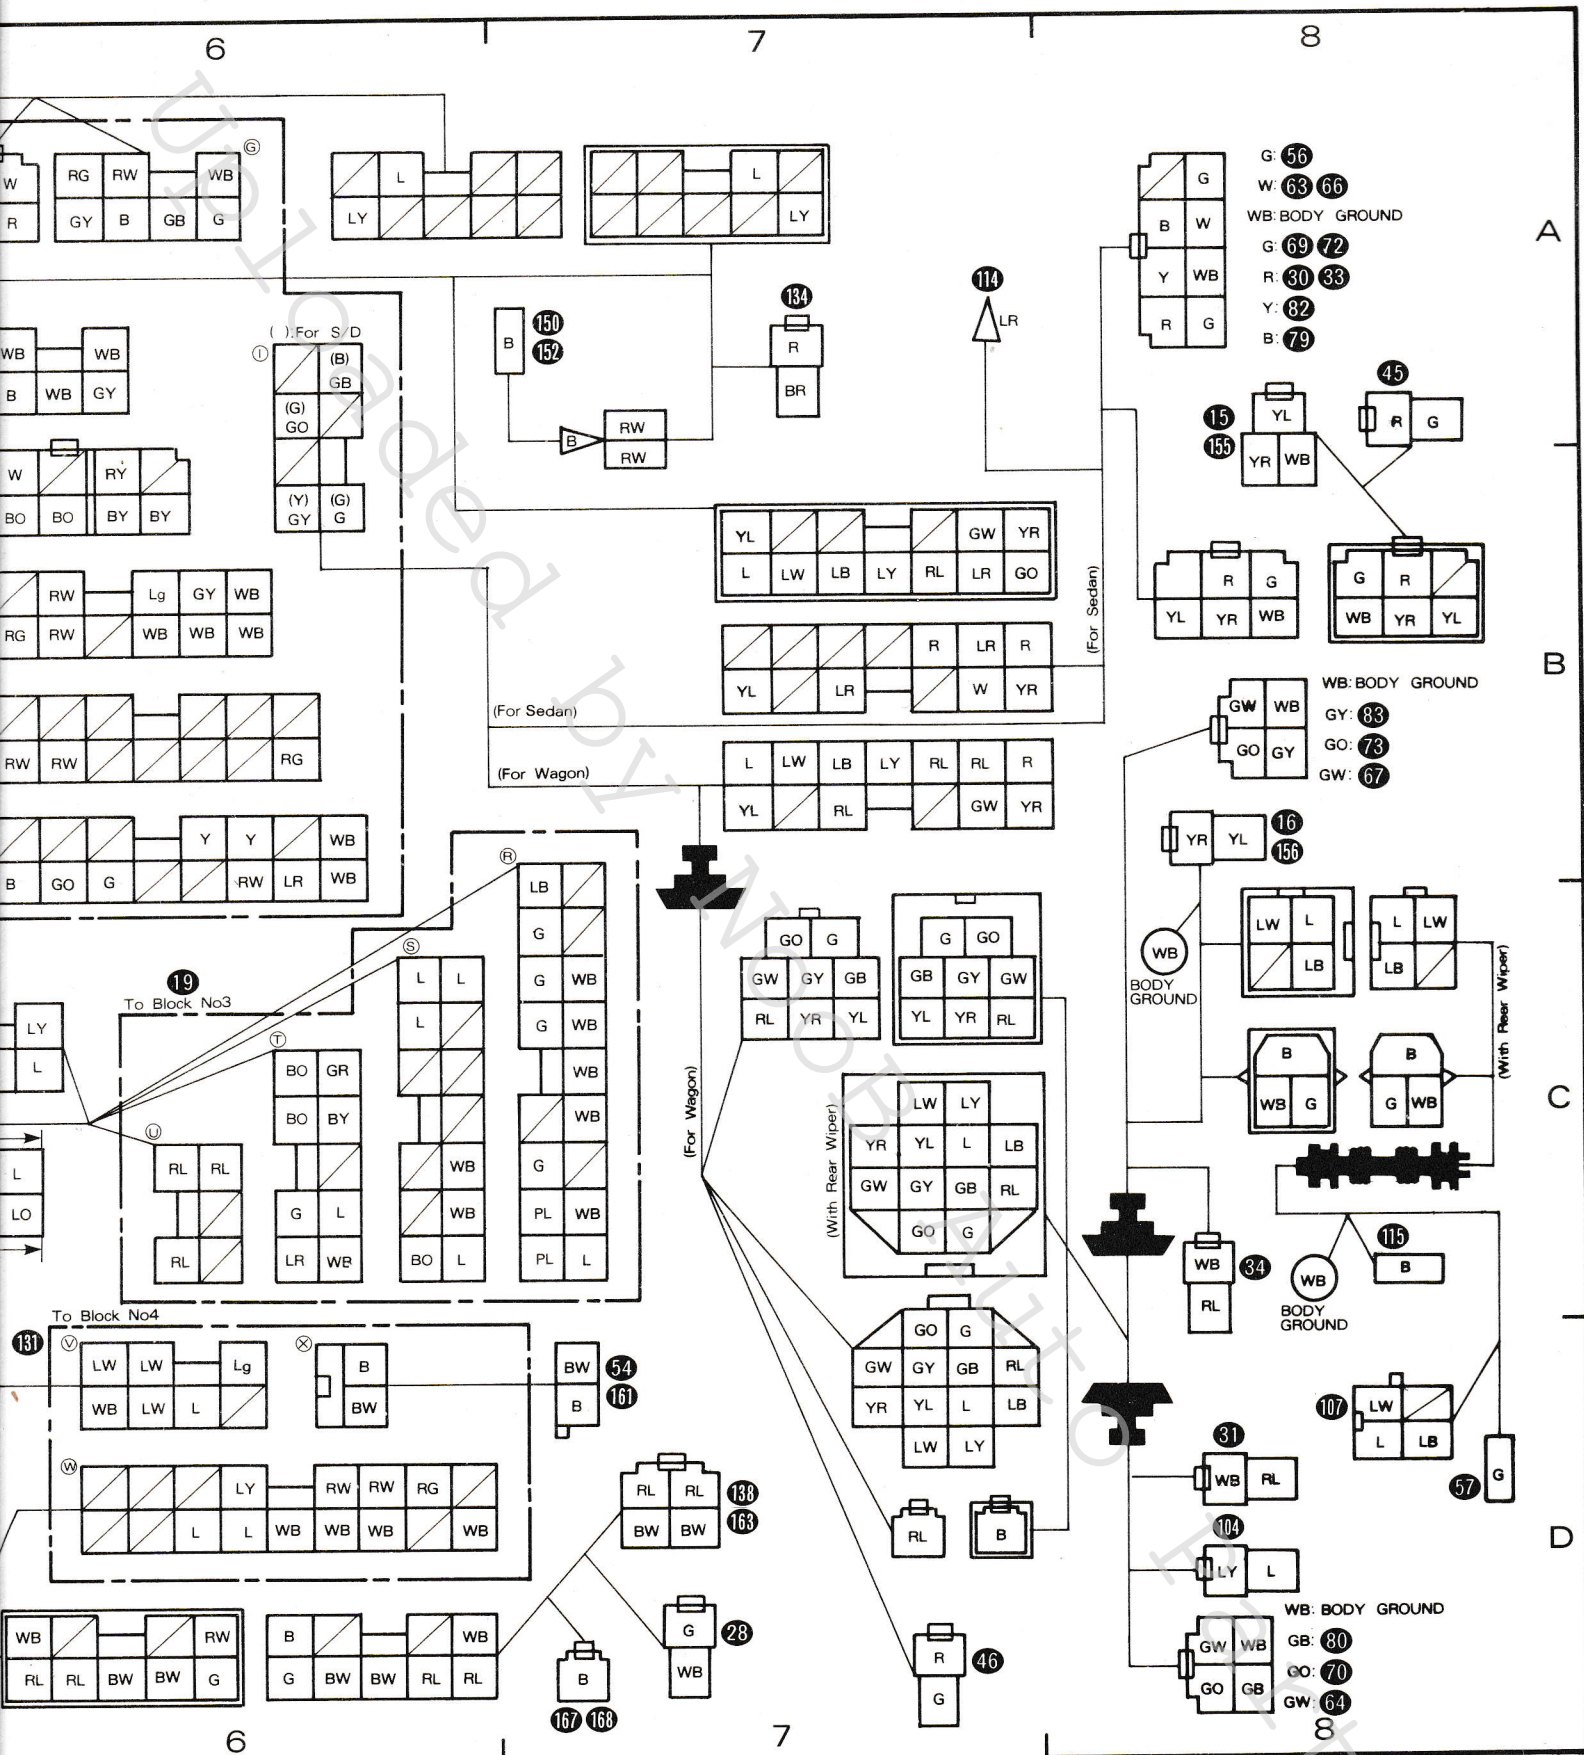

COROLLA
(Liftback & Coupe)

INDEX


COROLLA (Liftback & Coupe) ELECTRICAL WIRING DIAGRAM — 1980 PRODUCTION VEHICLE

DIAGRAMME DE CABLE

NUMBER	GRID LOCATION			COMPONENTS	NUMBER	GRID LOCATION			COMPONENTS
	Fig. 1	Fig. 2	Fig. 3			Fig. 1	Fig. 2	Fig. 3	
1	C-2	B-6	D-3	A/C AMPLIFIER	106	D-5	D-8	D-8	WIPER, REAR
2	D-1	B-3	B-3	ALTERNATOR	108	C-1	C-3	C-3	NOISE FILTER
3	D-1	B-2	B-2	BATTERY 12V	109	C-3	C-7	B-4	OIL PRESSURE GAUGE
4	D-2	A-3	A-3	CHOKE HEATER COIL (For TE)	110	C-3	B-4	—	OIL PRESSURE SENDER (For KE)
5	B-8	B-5	D-4	CIGARETTE LIGHTER	111	C-3	A-4	C-4	OIL PRESSURE SENDER (For TE)
6	C-4	C-6	C-5	CONDENSER	112	B-8	B-5	D-6	RADIO
7	B-2	A-3	A-3	—	113	B-4	D-8	D-8	REAR WINDOW DEFOGGER
8	B-4	C-6	C-5	DIGITAL CLOCK	116	C-1	C-3	D-3	REGULATOR
9	B-2	—	—	DISTRIBUTOR	117	D-4	—	A-6	RELAYS:
10	D-2	D-6	A-7	EMISSION CONTROL COMPUTER (For ECE 2T-B)	118	C-2	B-2	B-2	BULB CHECK (For Australia)
11	B-2	C-2	D-2	FUEL CUT SOLENOID (For KE)	119	B-7	C-3	—	CHOKE CONTROL
12	B-2	A-3	A-3	FUEL CUT SOLENOID (For TE)	120	C-2	B-2	B-2	DIMMER (For W. Germany)
13	C-3	C-7	B-4	FUEL GAUGE	121	C-5	C-3	B-5	ELECTRIC FAN
14	C-3	C-8	C-8	FUEL LEVEL SENDER	122	D-7	—	A-6	FLASHER
17	C-1	B-2	B-2	FUSE, CHARGE 10A	123	B-6	B-2	B-2	FOG LIGHT, REAR (For England)
18	A-8	C-3	—	FUSE, TAIL 10A x 2 (For W. Germany)	124	C-5	A-6	—	HEADLIGHT (Ex. W. Germany)
19	A-2	C-4	A-6	FUSE BOX	125	B-2	B-6	C-3	HEADLIGHT CLEANER (For Sweden)
20	C-1	B-2	B-2	FUSIBLE LINK	126	B-1	B-2	B-2	HEATER
21	C-2	D-2	D-2	FUSIBLE LINK (For Electric Fan Motor)	128	C-6	B-6	—	MAIN
22	—	C-7	C-4	GAUGE (—)	129	B-1	B-2	—	RED INDICATOR LIGHT (For W. Germany)
23	B-2	B-6	C-3	HEATER RESISTOR	130	B-7	C-4	A-6	STARTER (For 2-A/T)
24	B-6	D-1	C-1	HORN, LH	131	C-5	A-7	D-5	TAIL LIGHT
25	B-6	A-1	C-1	HORN, RH	132	D-8	—	C-5	WINDSHIELD WIPER (Intermittent)
26	B-2	A-2	A-3	IGNITION COIL	133	C-8	D-5	D-4	RHEOSTAT (For Australia)
27	C-8	B-5	D-5	LIGHTS:	134	C-8	A-6	A-7	SPEAKER, LH
28	B-8	C-6	—	ASHTRAY	135	D-1	C-7	C-4	SPEAKER, RH
29	C-4	A-8	A-8	A/T INDICATOR	136	B-8	—	—	SPEED SENSOR
32	C-4	A-8	A-8	BACK-UP, LH	137	B-3	B-6	D-3	STEREO
35	C-3	B-4	D-5	BACK-UP, RH	138	B-4	C-6	—	SWITCHES:
36	B-3	C-6	B-5	BRAKE WARNING	139	B-4	B-5	B-4	A/C
37	B-3	B-4	—	CHARGE WARNING	140	B-4	A-5	—	BACK-UP LIGHT (For 2-A/T)
38	B-7	D-1	D-1	CHOKE WARNING	141	B-4	A-5	B-4	BACK-UP LIGHT (For KE M/T)
39	C-7	A-1	A-1	CLEARANCE, LH	142	C-4	—	A-5	BACK-UP LIGHT (For TE M/T)
40	C-8	—	—	CLEARANCE, RH	143	C-3	D-3	—	BRAKE FLUID LEVEL WARNING (For Australia)
41	B-4	C-8	B-7	CLOCK	144	B-3	C-4	—	BRAKE FLUID LEVEL WARNING (For ECE)
42	C-4	B-5	C-4	DECK ROOM	145	B-4	C-8	B-7	CHOKE WARNING LIGHT
43	D-7	—	D-5	DOOR INDICATOR	146	B-4	B-5	D-5	DECK ROOM LIGHT
44	C-7	—	B-8	FOG, INDICATOR, REAR (For England)	147	C-6	D-7	B-5	DEFOGGER
47	B-3	C-7	B-4	FOG, REAR (For England)	148	C-7	D-7	—	DIMMER (Ex. W. Germany)
48	B-6	C-1	C-1	FUEL WARNING	149	C-4	D-6	D-5	DIMMER (For W. Germany)
49	C-6	C-1	C-1	HEAD, LH (Ex. W. Germany)	150	C-4	B-6	A-7	DOOR COURTESY, FRONT, LH
50	B-6	B-1	B-1	HEAD, LH (For W. Germany)	151	C-4	—	—	DOOR COURTESY, FRONT, RH
51	C-7	B-1	B-1	HEAD, RH (Ex. W. Germany)	152	D-4	—	—	DOOR COURTESY, REAR, LH
52	C-8	B-5	D-4	HEAD, RH (For W. Germany)	153	C-7	—	C-4	DOOR COURTESY, REAR, RH
53	C-6	C-6	C-5	HEATER CONTROL	154	B-3	C-8	C-8	FOG LIGHT, REAR (For England)
54	C-4	B-7	D-6	HIGH BEAM INDICATOR	157	B-5	D-7	B-5	FUEL WARNING LIGHT
55	C-7	A-8	A-8	INTERIOR	158	C-3	B-5	D-4	HAZARD WARNING
58	C-8	C-7	B-5	LICENSE PLATE	159	B-6	D-7	C-5	HEATER BLOWER MOTOR
59	B-3	C-7	B-4	METER	160	A-1	C-4	C-5	HORN
60	C-3	—	D-5	OIL WARNING	161	C-4	B-7	D-6	IGNITION
61	C-6	B-4	—	P.K.B. WARNING	162	C-7	D-7	B-5	INTERIOR LIGHT
62	B-4	A-8	A-8	RED INDICATOR (For LHD)	163	B-1	C-6	—	LIGHT CONTROL
65	C-4	A-8	A-8	STOP, LH	164	B-1	C-6	—	NEUTRAL START (For 2-A/T)
66	B-7	A-8	A-8	STOP, RH	165	B-3	B-4	A-4	NEUTRAL START (For TE A/T)
68	C-7	A-8	A-8	TAIL, LH	166	B-3	A-4	C-4	OIL PRESSURE (For KE)
71	C-5	D-2	D-1	TAIL, RH	167	C-3	—	D-7	OIL PRESSURE (For TE)
75	C-6	A-2	A-1	TURN SIGNAL, FRONT, LH	168	C-3	D-5	D-7	P.K.B. WARNING (For Australia)
76	C-5	C-7	B-4	TURN SIGNAL, FRONT, RH	169	D-2	B-6	D-3	P.K.B. WARNING (For ECE & General)
77	C-5	C-6	B-4	TURN SIGNAL, INDICATOR, LH	170	B-4	C-4	A-5	PRESSURE (For A/C)
78	C-5	A-8	A-8	TURN SIGNAL, INDICATOR, RH	171	B-2	A-4	—	STOP LIGHT
81	C-6	A-8	A-8	TURN SIGNAL, REAR, LH	172	B-2	—	B-3	THERMO (For 3T-C Sweden)
84	C-5	D-2	D-3	TURN SIGNAL, REAR, RH	173	D-2	B-3	B-3	THERMO (For Australia)
85	C-5	—	D-2	TURN SIGNAL, SIDE, LH (For Australia)	174	B-2	A-5	—	THERMO (For Electric Fan)
86	C-5	D-3	D-3	TURN SIGNAL, SIDE, LH (For ECE)	175	B-2	B-5	—	TOP (For 3T-C Sweden)
87	C-6	A-2	A-2	TURN SIGNAL, SIDE, RH	176	B-2	—	B-4	TOP (For 4K-C Sweden)
88	D-3	A-4	—	MAGNET CLUTCH	177	B-5	D-7	B-5	TOP (For Australia)
89	D-3	—	A-3	MAGNET CLUTCH (For Australia)	178	C-2	A-3	A-3	TURN SIGNAL LIGHT
92	—	C-7	B-5	METER (+)	179	B-5	D-7	C-5	VACUUM
93	—	C-7	B-5	METER (—)	180	C-5	B-4	D-4	WINDSHIELD WASHER
95	C-2	B-1	B-1	MOTORES:	181	C-5	B-4	D-4	WINDSHIELD WIPER
96	B-5	B-2	—	ELECTRIC FAN (For ECE)	183	C-5	B-4	D-4	WIPER, REAR
97	B-2	B-6	C-3	HEADLIGHT CLEANER (For Sweden)	185	D-3	C-6	C-4	TACHOMETER
98	D-2	A-2	—	HEATER BLOWER	186	D-3	B-6	D-3	THERMISTOR
99	D-1	B-4	A-4	STARTER (For 2-A/T)	187	C-3	—	—	VOLT METER
100	D-1	A-4	C-3	STARTER (For KE M/T)	189	B-2	A-3	A-3	V.S.V. (For 3T-C Sweden & Australia)
101	B-5	A-3	A-3	STARTER (For TE)	190	B-2	D-2	—	V.S.V. (For 4K-C Sweden)
102	B-5	A-6	—	WASHER, FRONT	191	D-2	D-2	D-2	V.S.V. (For A/C only KE)
103	D-5	B-8	B-8	WASHER, REAR	192	D-2	A-3	A-2	V.S.V. (For A/C only TE)
105	B-5	A-6	D-3	WIPER, FRONT	193	C-2	A-3	A-3	V.S.V. (For Emission Control System)
					194	D-3	C-7	C-5	WATER TEMP GAUGE
					195	D-3	B-4	C-4	WATER TEMP SENDER (For KE)
					196	D-3	A-4	C-4	WATER TEMP SENDER (For TE)


Nombre	Répérage sur le plan		
	Fig. 1	Fig. 2	Fig. 3
5	B-8	B-5	D-4
2	D-1	B-3	B-3
1	C-2	B-6	D-3
3	D-1	B-2	B-2
26	B-2	A-2	A-2
4	D-2	A-3	A-3
135	D-1	C-7	C-4
92	—	C-7	B-4
93	—	C-7	B-5
7	B-2	A-3	A-3
20	C-1	B-3	B-3
21	C-2	D-2	D-2
113	B-4	D-8	D-8
9	B-2	—	—
88	D-3	A-4	—
89	D-3	—	A-3
110	C-3	B-4	—
111	C-3	A-4	C-4
195	D-3	B-4	B-4
196	D-3	A-4	C-4
108	C-1	C-3	C-3
17	C-1	B-2	B-2
18	A-8	C-3	—
133	C-8	D-5	D-4
134	C-8	A-6	A-7
153	C-7	—	C-4
137	B-3	B-6	D-3
162	C-7	D-7	B-5
174	B-2	A-5	—
175	B-2	B-5	—
176	B-2	—	B-4
160	A-1	C-4	C-5
146	B-4	B-5	D-5
163	B-1	C-6	—
164	B-1	A-5	—
161	C-4	B-7	D-6
151	C-4	—	—
152	D-4	—	—
149	C-4	D-6	D-5
150	C-4	B-6	A-7
183	C-5	B-4	D-4
180	C-5	B-4	D-4
148	C-7	D-7	—
147	C-6	D-7	B-5
159	B-6	D-7	C-6
154	B-3	C-8	C-8
177	B-5	D-7	B-5
144	B-3	C-4	—
181	C-5	B-4	D-4
179	B-5	D-7	C-5
145	B-4	C-8	B-7
170	B-4	C-4	A-5
158	C-3	B-5	D-4
169	D-2	B-6	D-3
165	B-3	B-4	A-4
166	B-3	A-4	C-4
138	B-4	C-6	—
139	B-4	B-5	D-3
140	B-4	A-5	—
141	B-4	A-5	B-4
142	C-4	—	A-5
143	C-3	D-3	—
144	B-3	C-4	—
145	B-4	C-8	B-7
146	B-4	B-5	D-5
147	C-6	D-7	B-5
148	C-7	D-7	—
149	C-4	D-6	D-5
150	C-4	B-6	A-7
151	C-4	—	—
152	D-4	—	—
153	C-7	—	C-4
154	B-3	C-8	C-8
157	B-5	D-7	B-5
158	C-3	B-5	D-4
159	B-6	D-7	C-5
160	A-1	C-4	C-5
161	C-4	B-7	D-6
162	C-7	D-7	B-5
163	B-1	C-6	—
164	B-1	C-6	—
165	B-3	B-4	A-4
166	B-3	A-4	C-4
167	C-3	—	D-7
168	C-3	D-5	D-7
169	D-2	B-6	D-3
170	B-4	C-4	A-5
171	B-2	A-4	—
172	B-2	—	B-3
173	D-2	B-3	B-3
174	B-2	A-5	—
175	B-2	B-5	—
176	B-2	—	B-4
177	B-5	D-7	B-5
178	C-2	A-3	A-3
179	B-5	D-7	C-5
180	C-5	B-4	D-4
181	C-5	B-4	D-4
183	C-5	B-4	D-4
185	D-3	C-6	C-4
186	D-3	B-6	D-3
187	C-3	—	—
189	B-2	A-3	A-3
190	B-2	D-2	—
191	D-2	D-2	D-2
192	D-2	A-3	A-2
193	C-2	A-3	A-3
194	D-3	C-7	C-5
195	D-3	B-4	C-4
196	D-3	A-4	C-4

COROLLA (Liftback & Coupe) ELECTRICAL WIRING DIAG

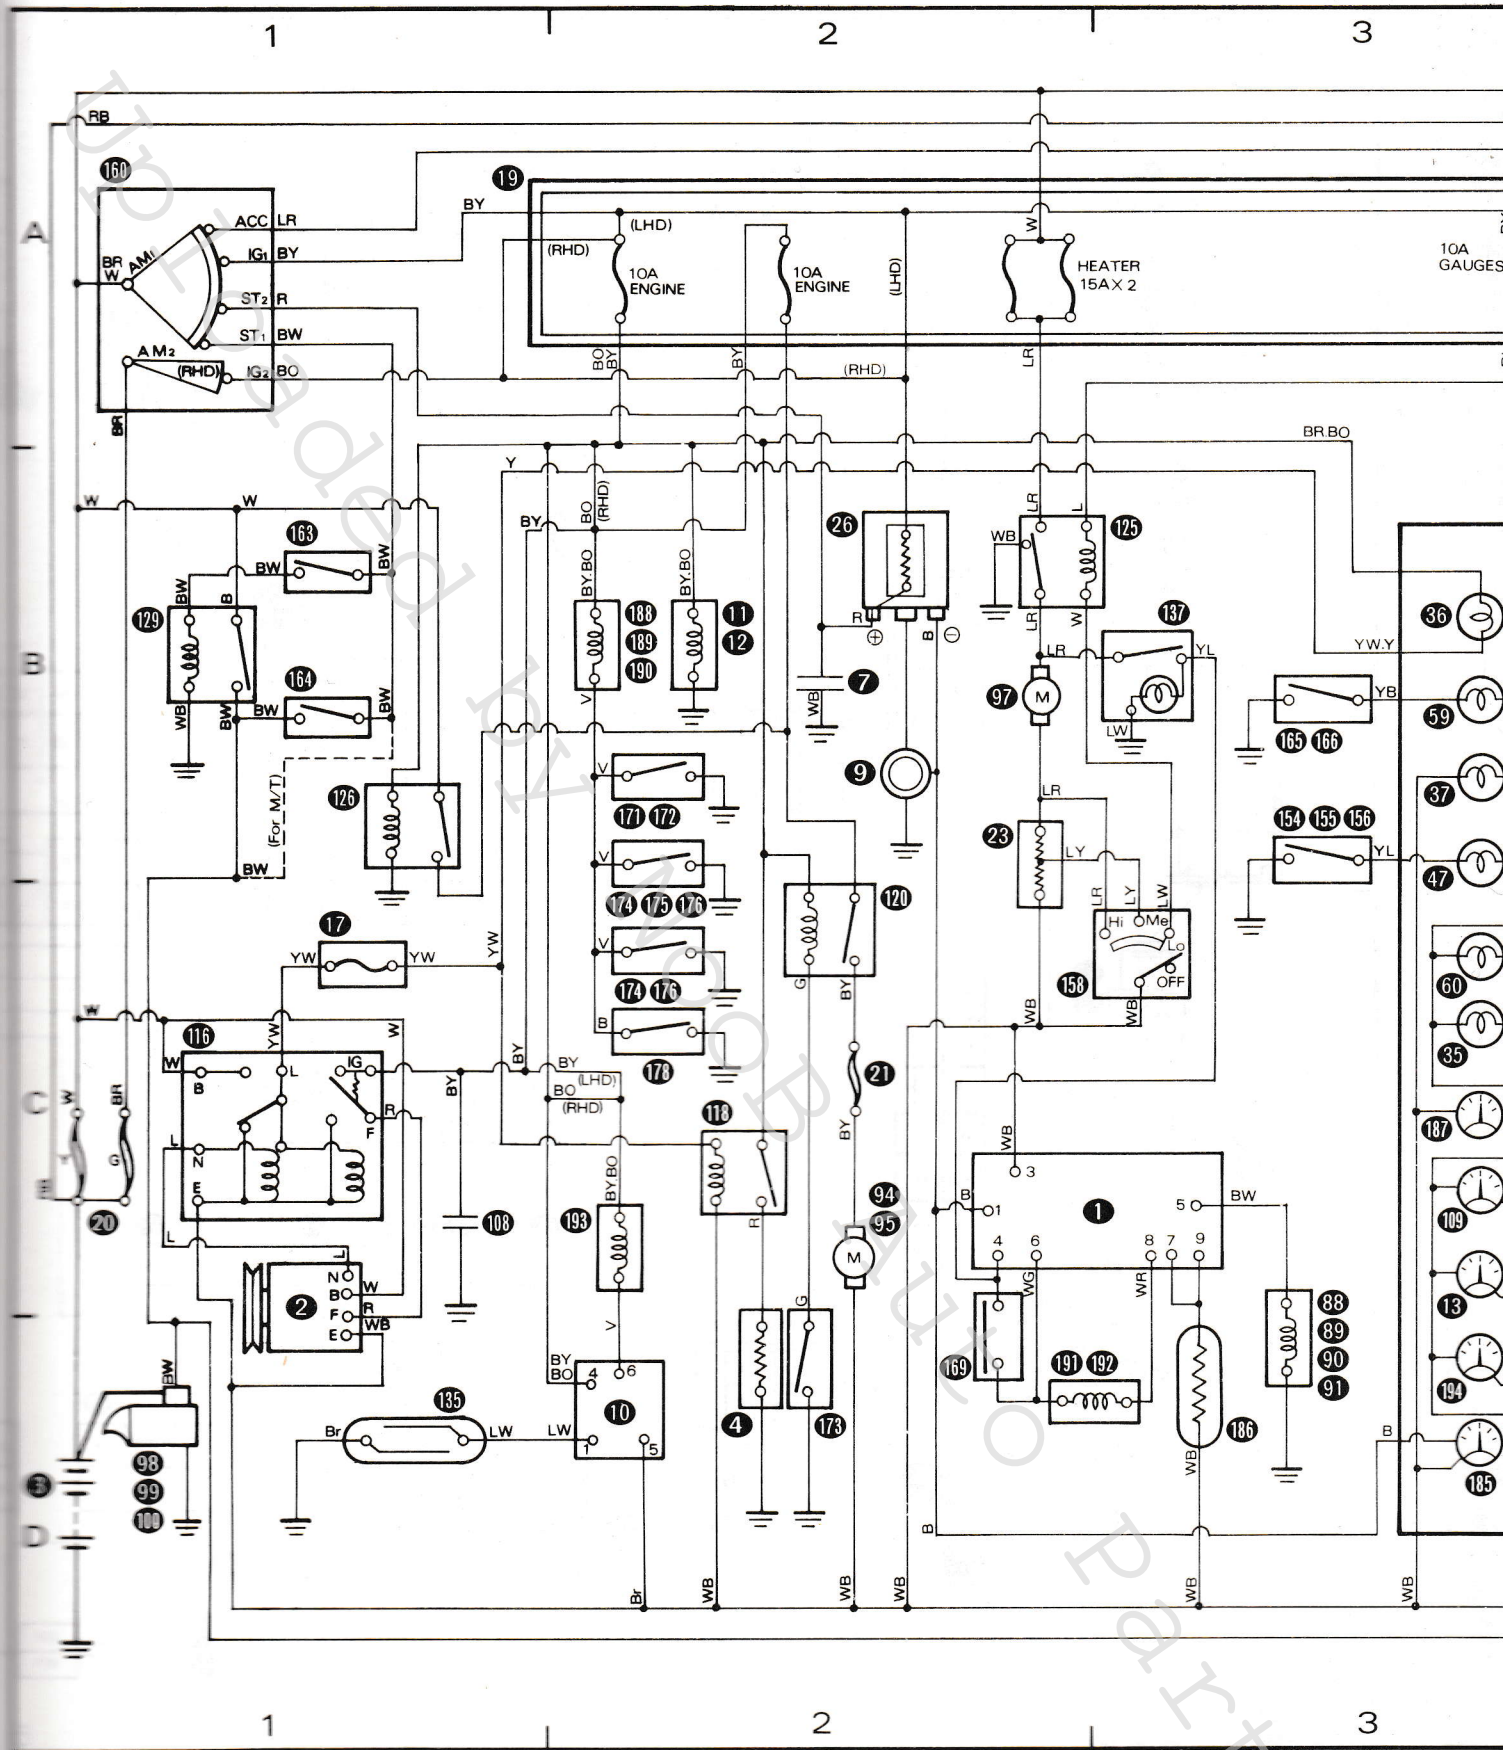


5




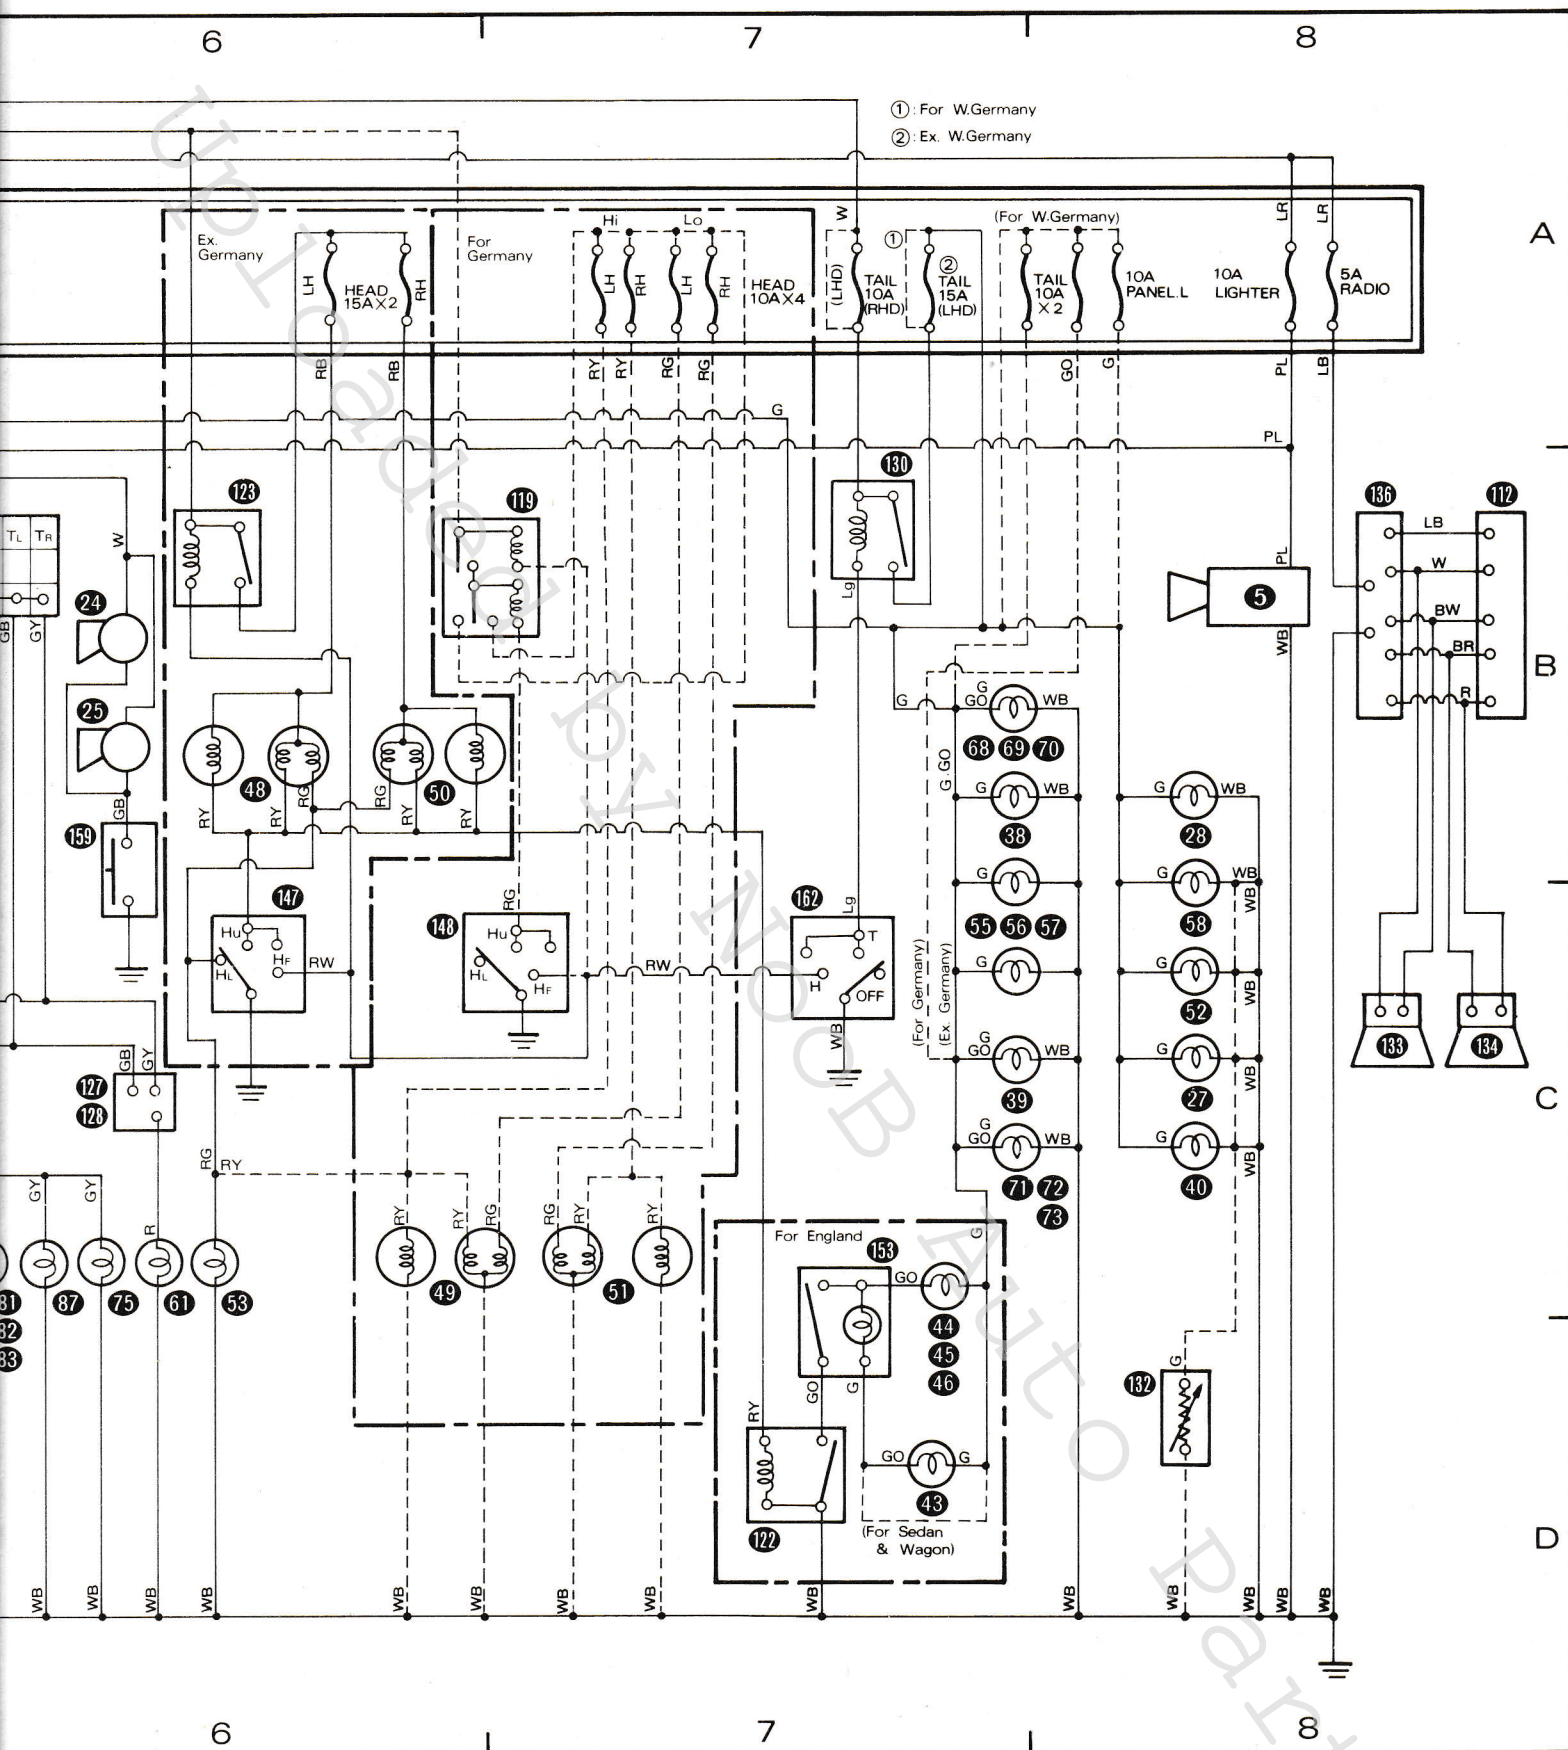


LHD,COROLLA (Liftback & Coupe) ELECTRICAL WIRING H

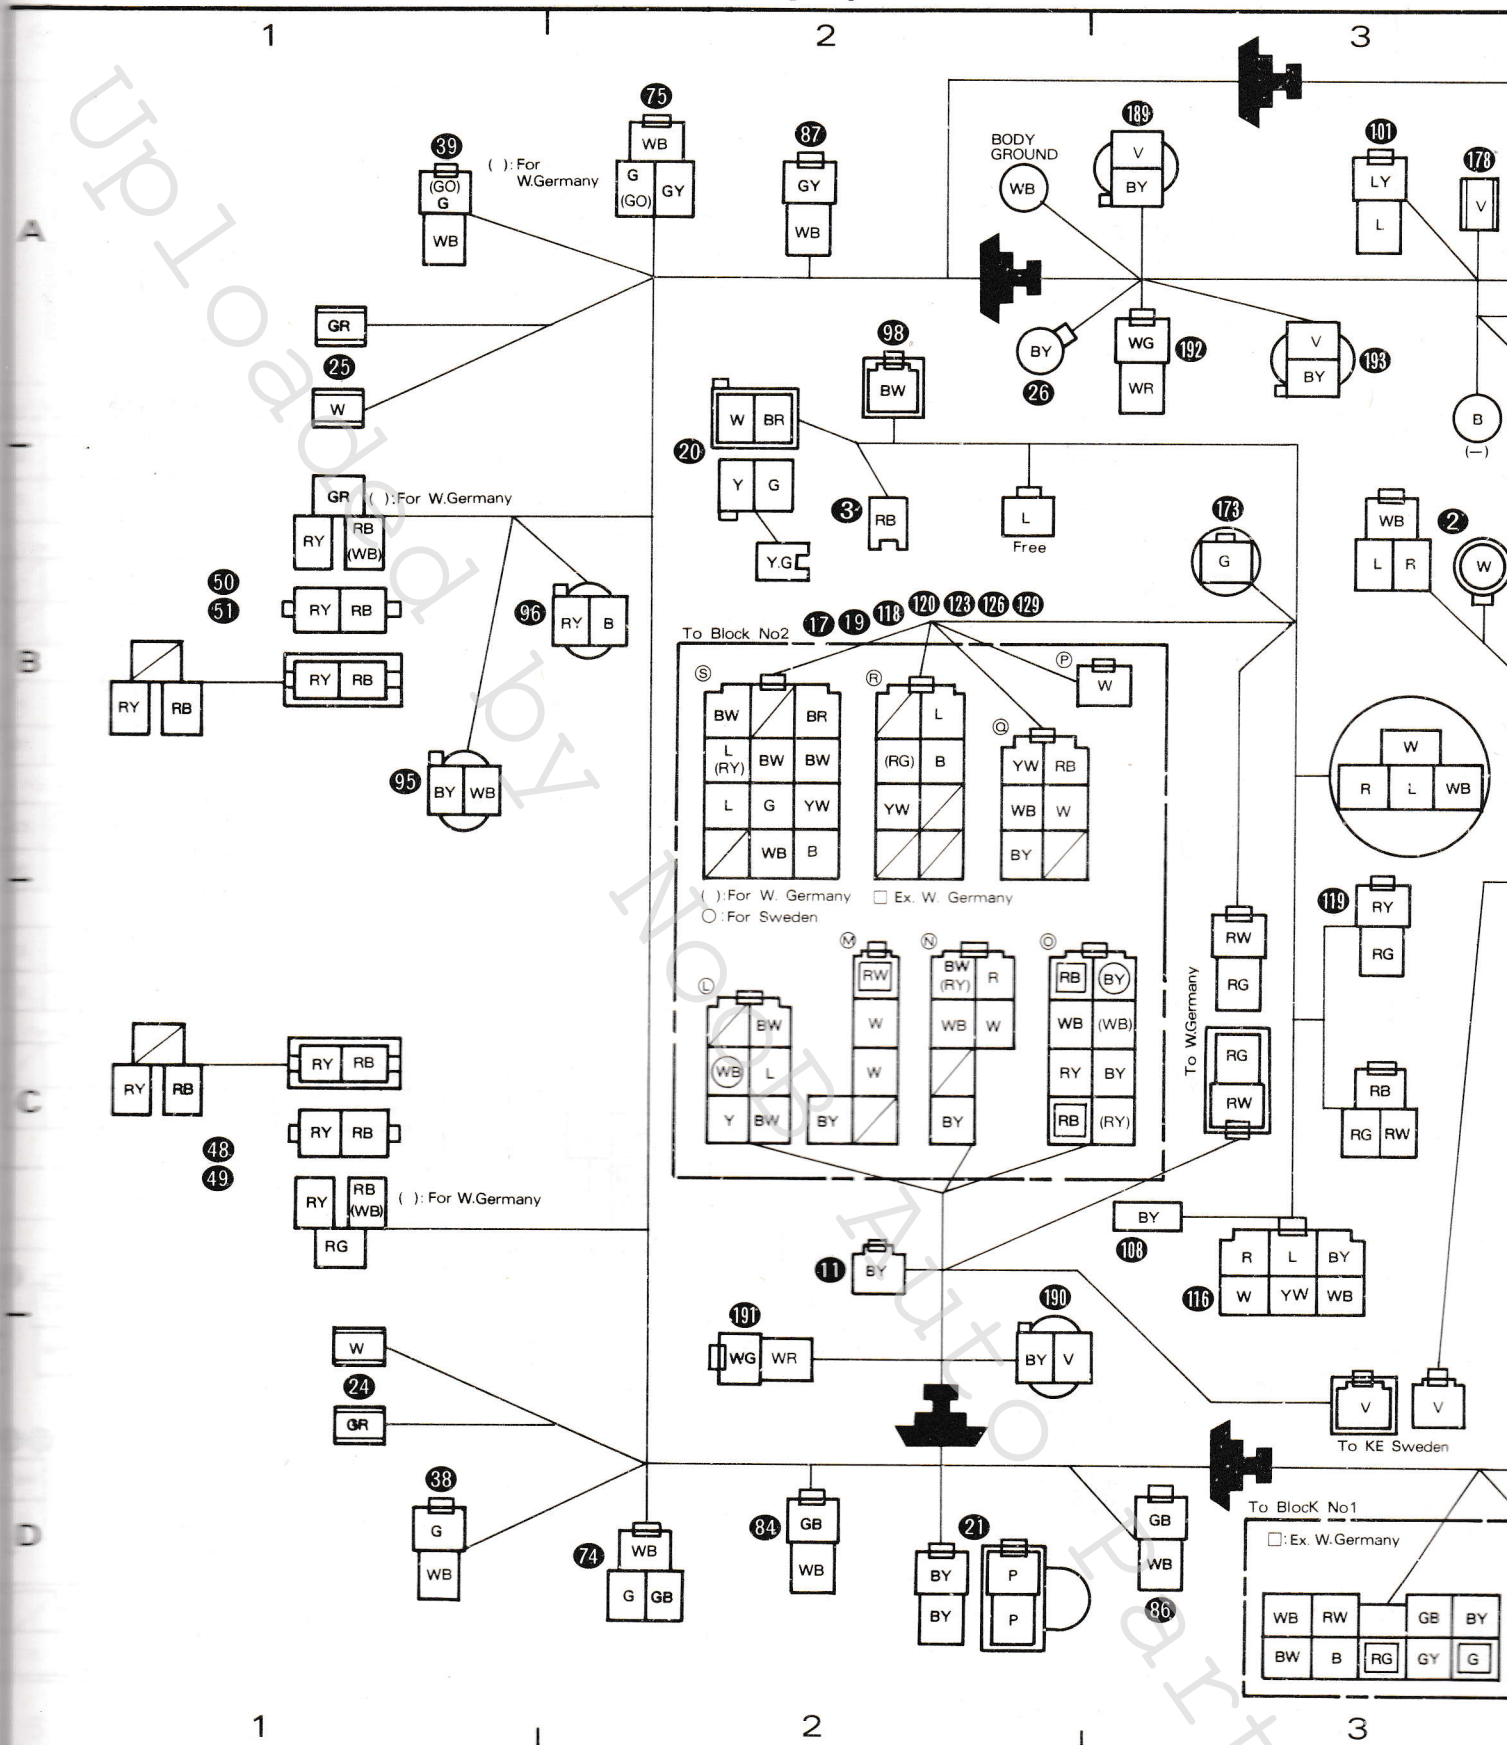


WIRING HARNESS — 1980 PRODUCTION VEHICLE

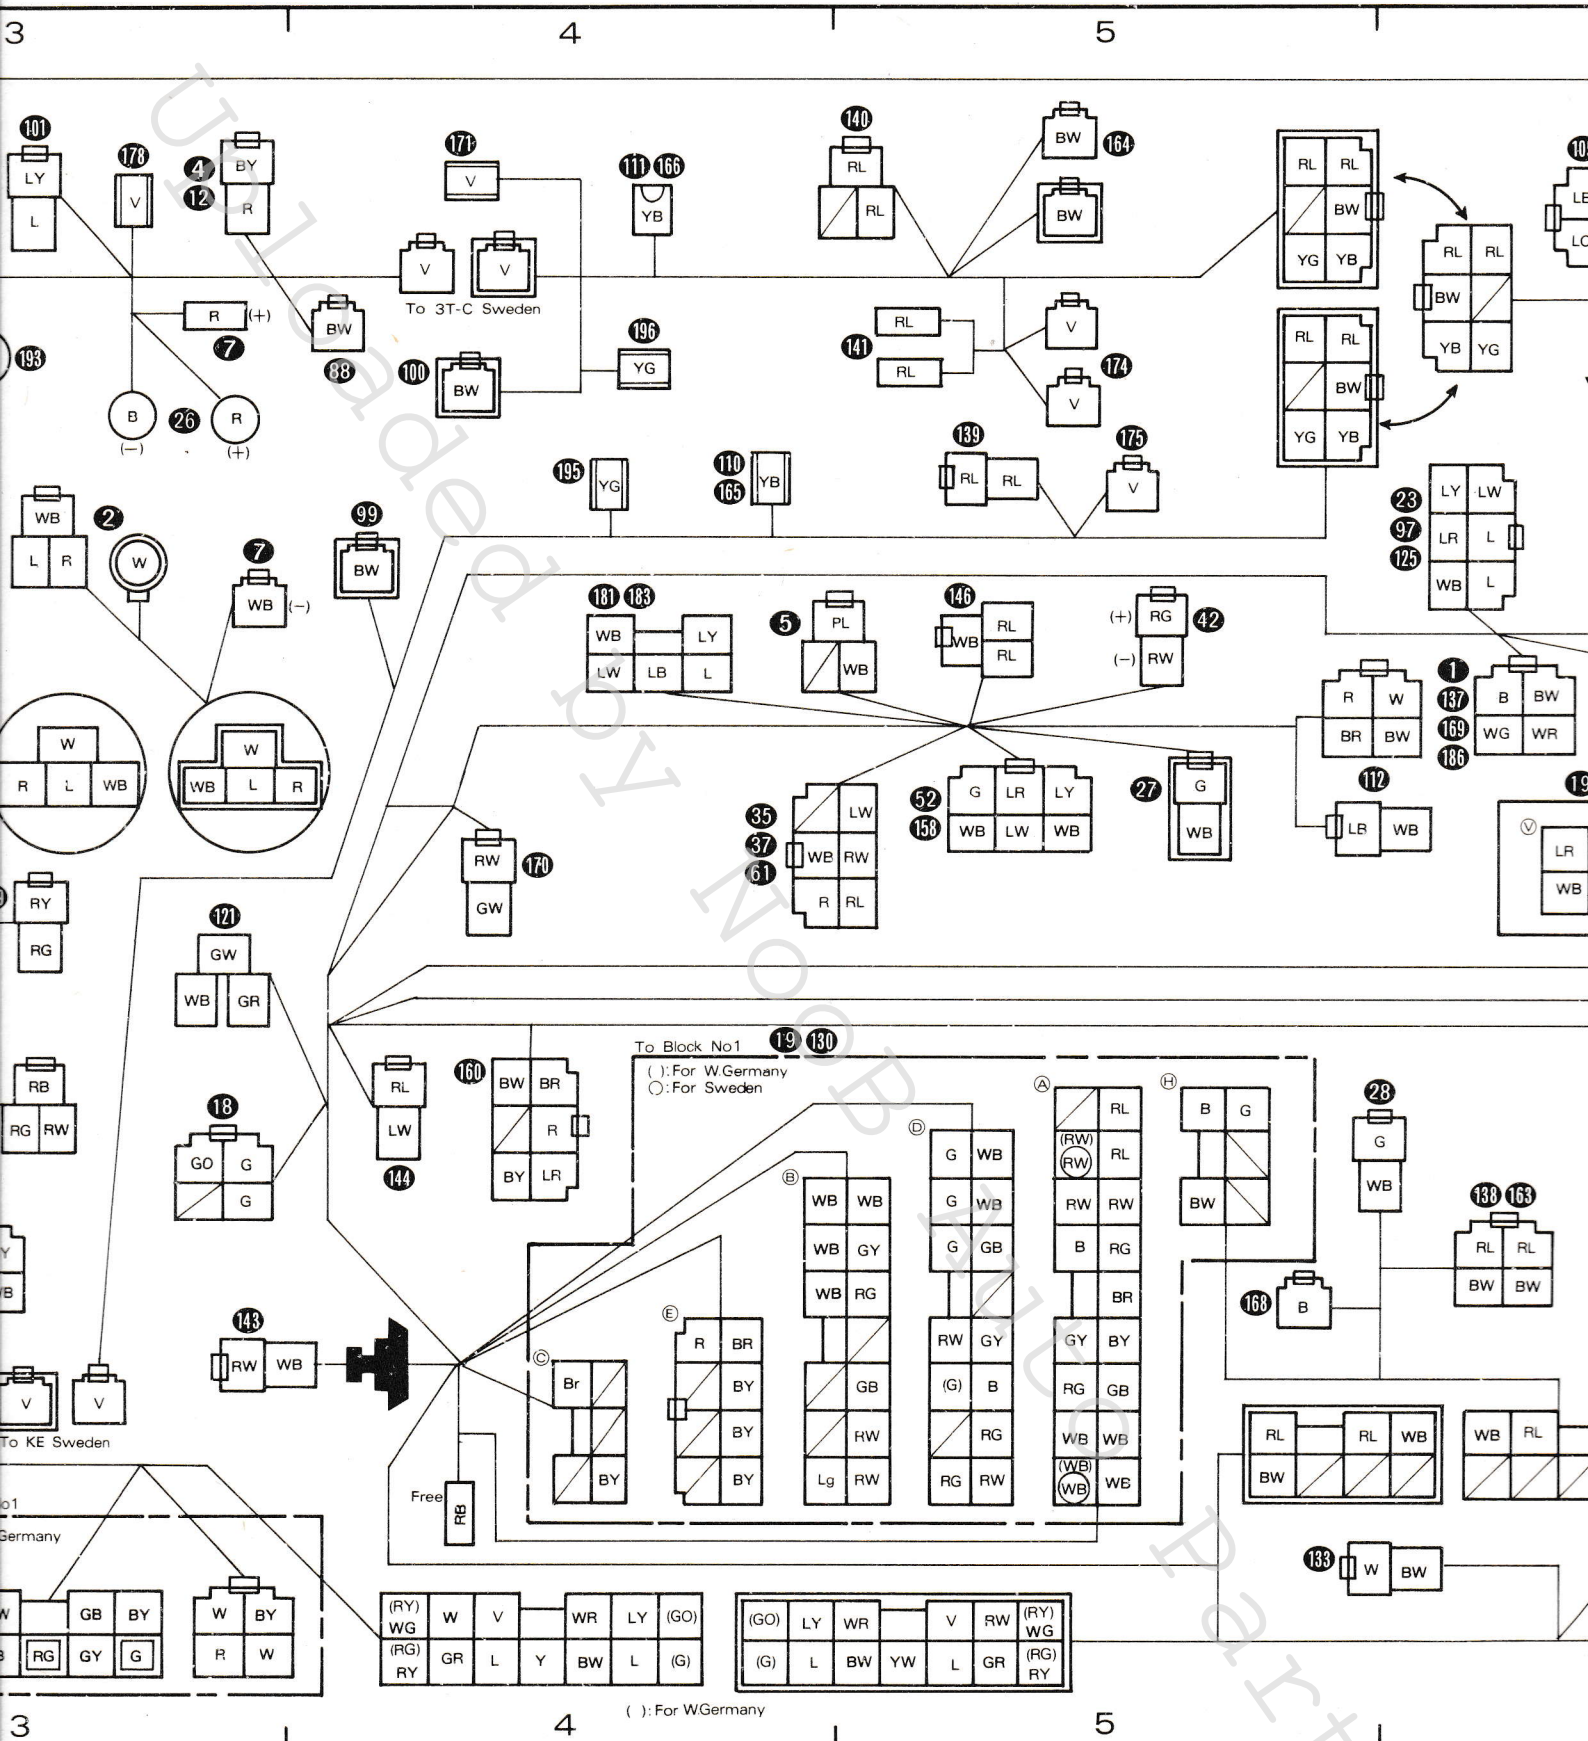


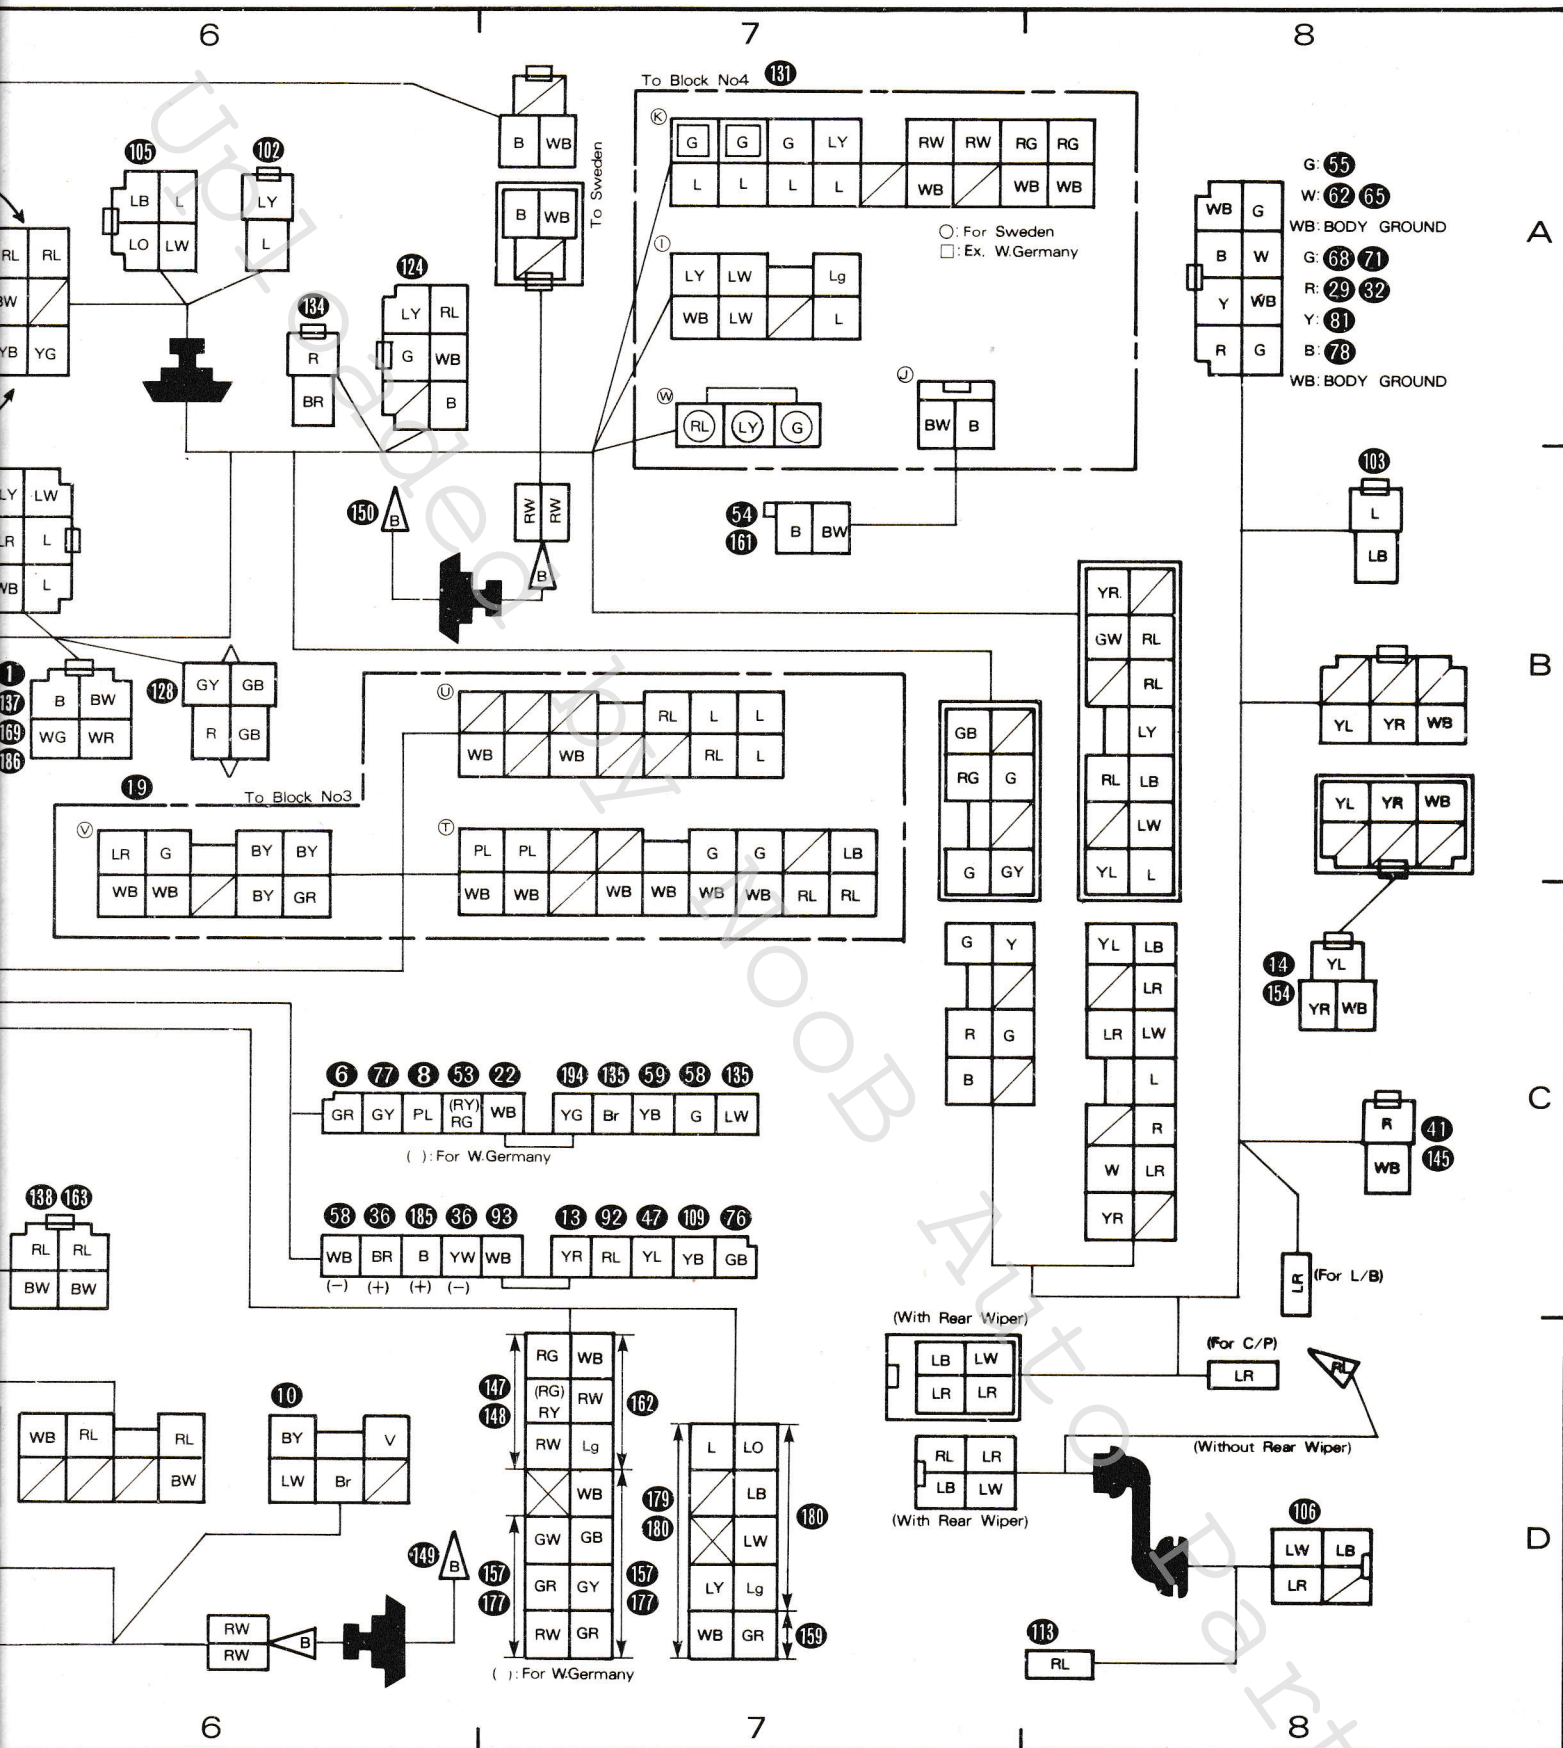


RHD,COROLLA (Liftback & Coupe) ELECTRICAL WIRING HARNESS

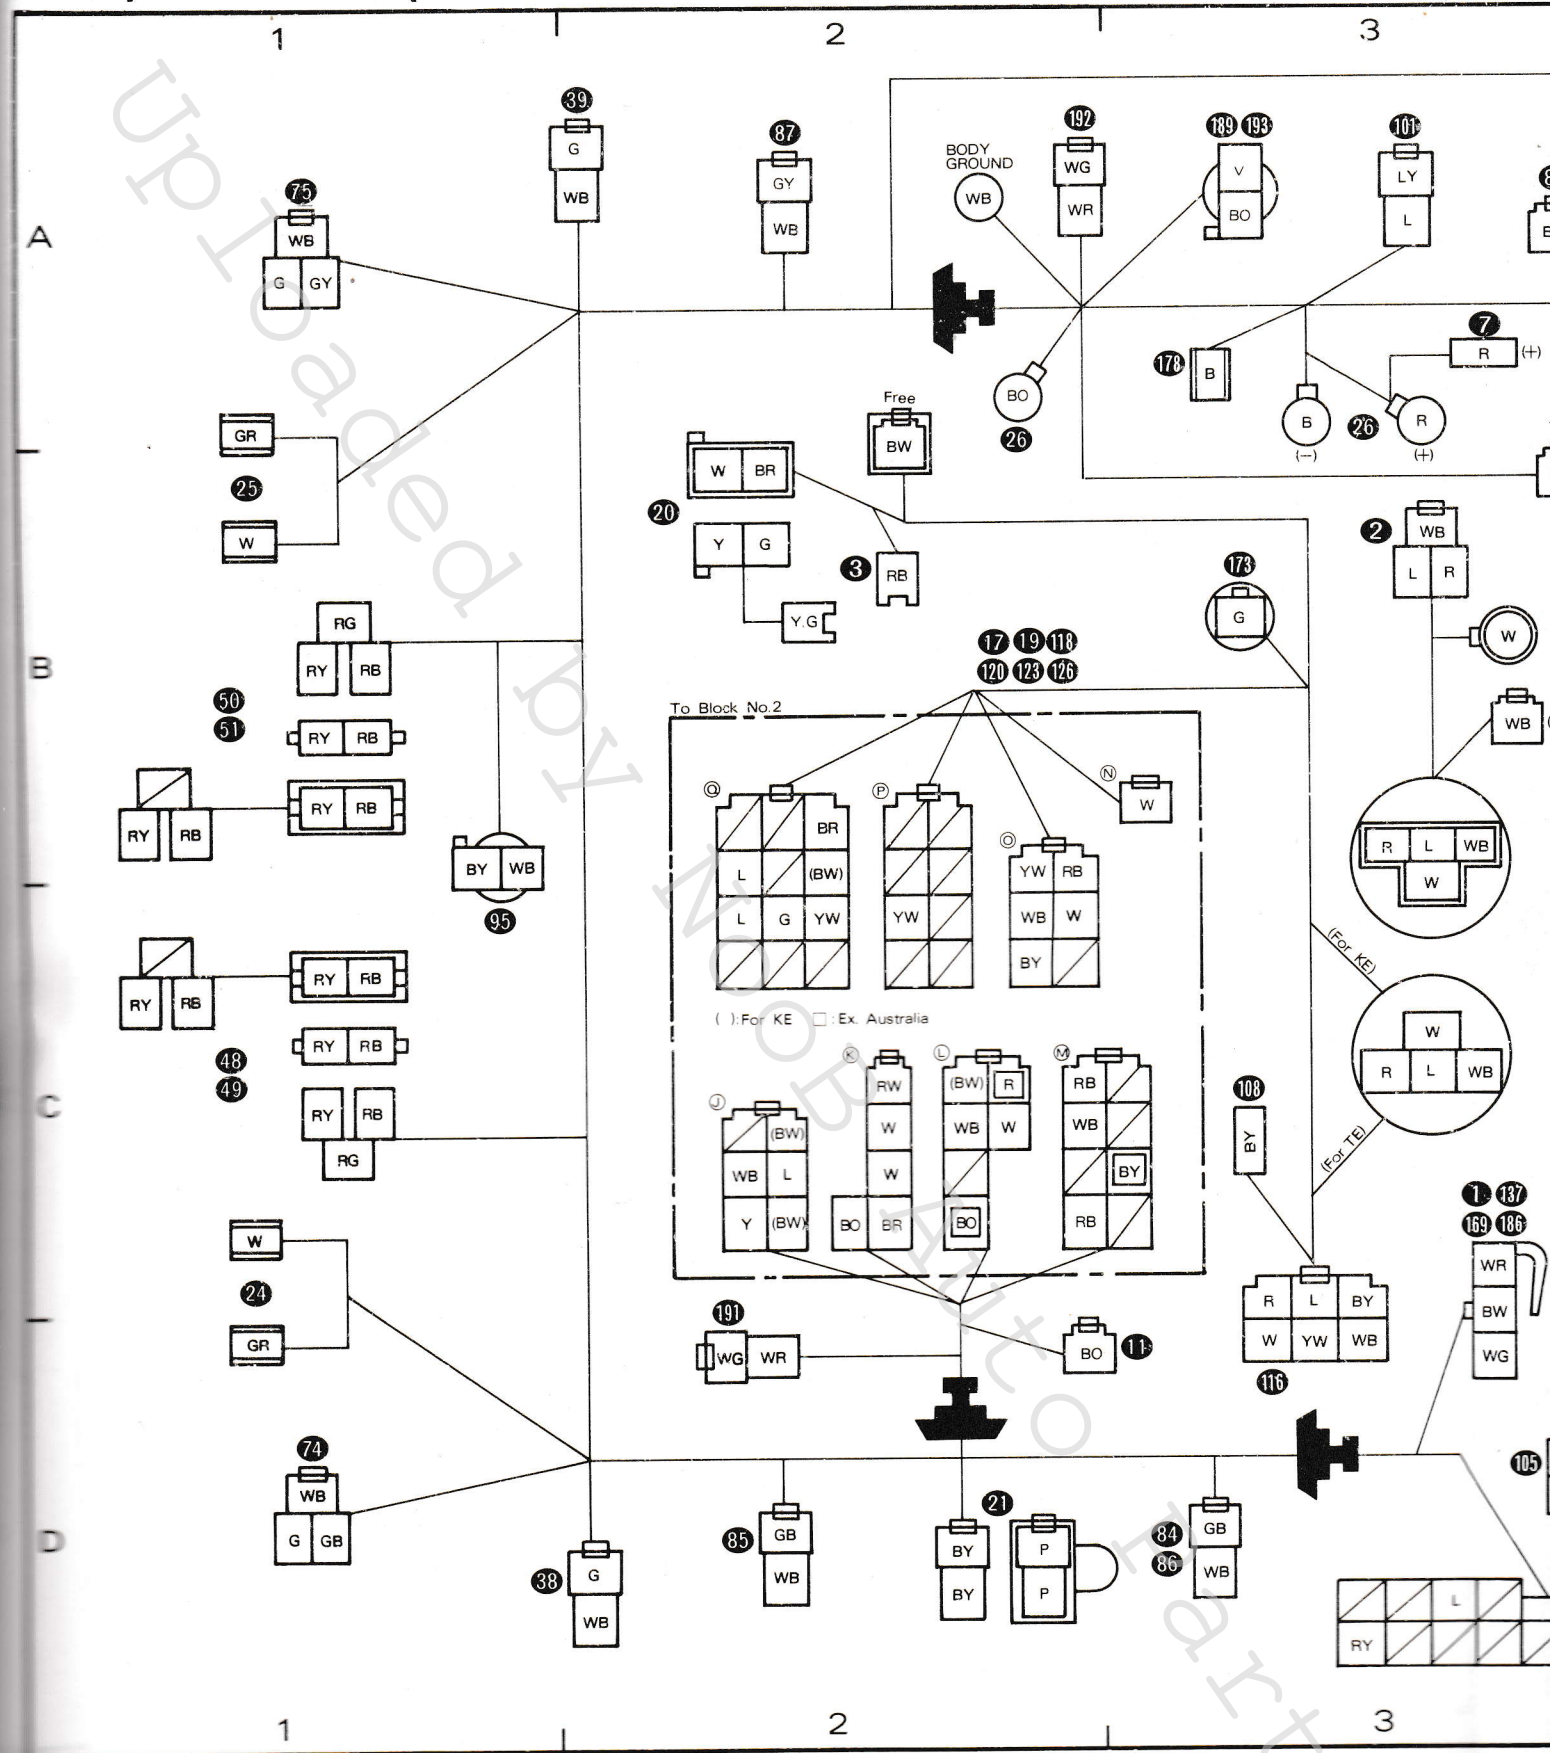


NG HARNESS — 1980 PRODUCTION VEHICLE

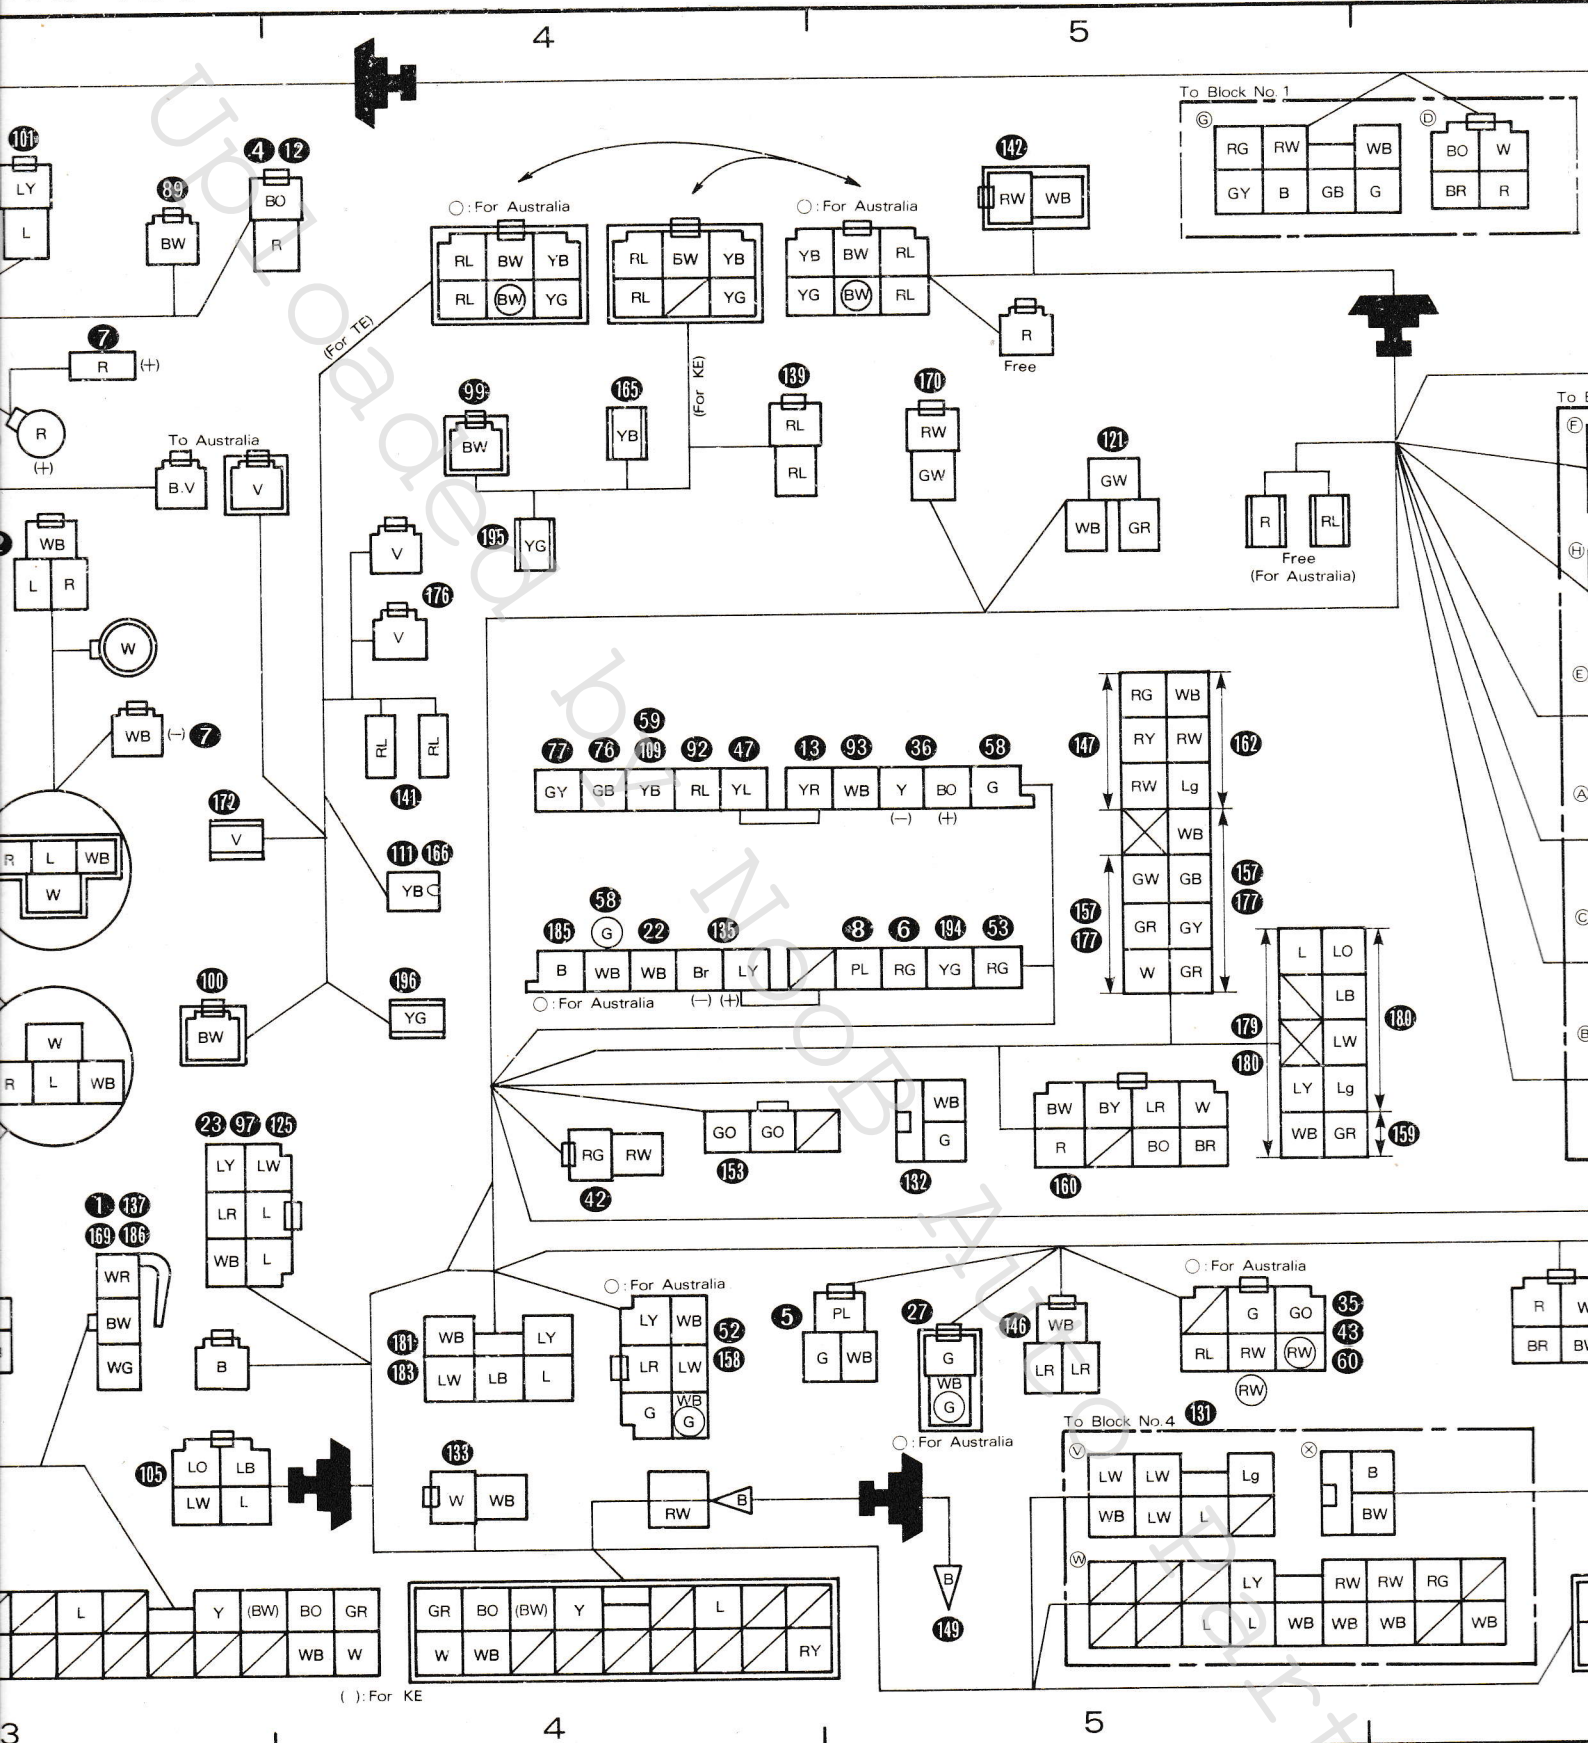

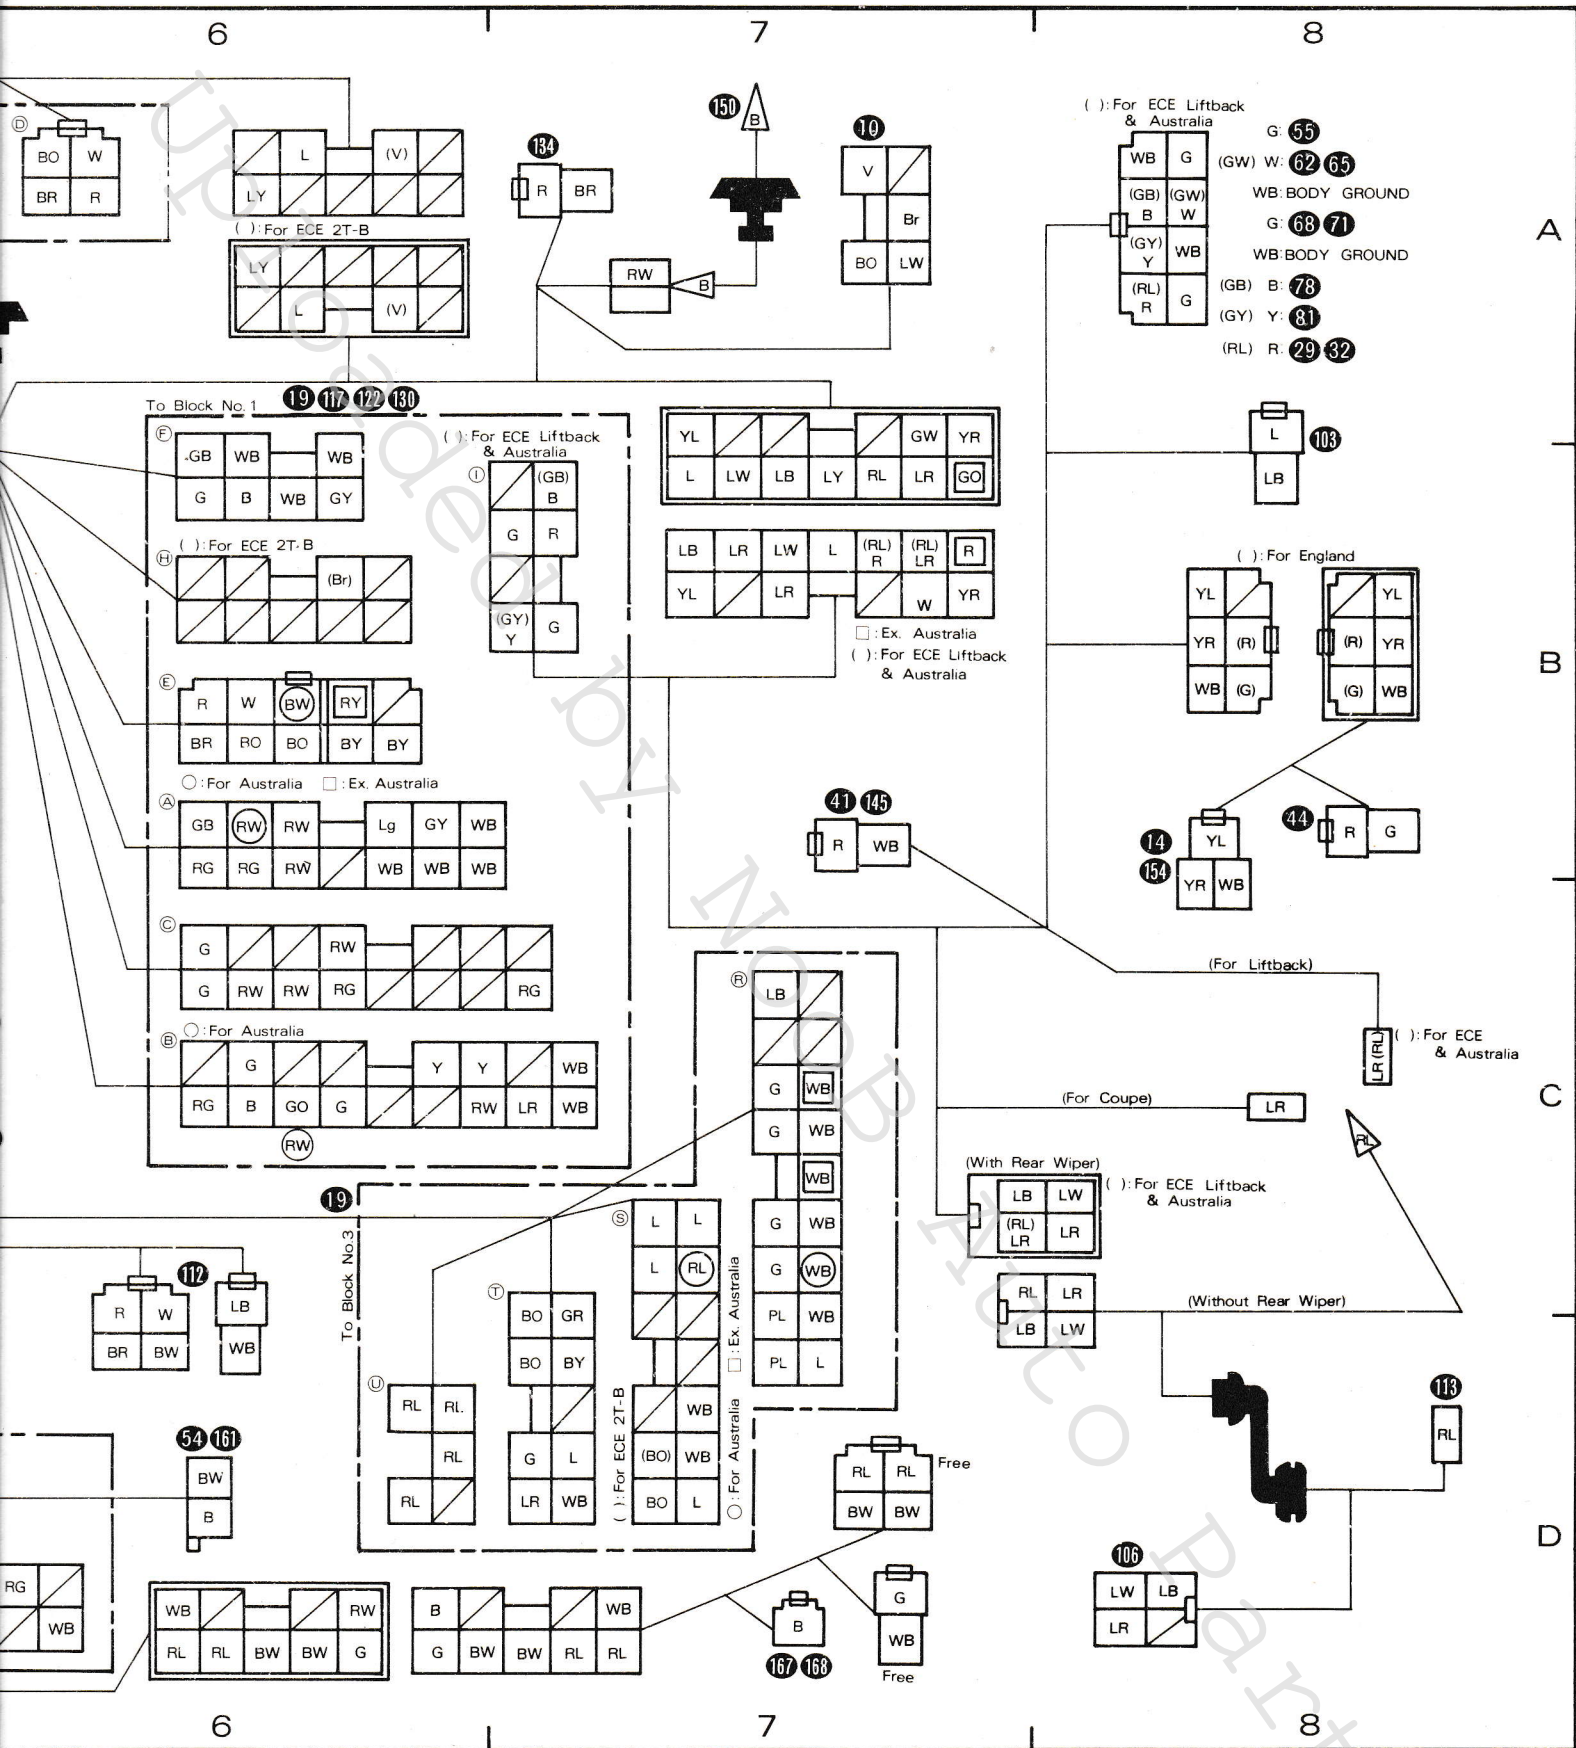


LHD, Fuse & Relay Block for COROLLA No.1,4 (Sedan, Liftback)

BLOCK No.1


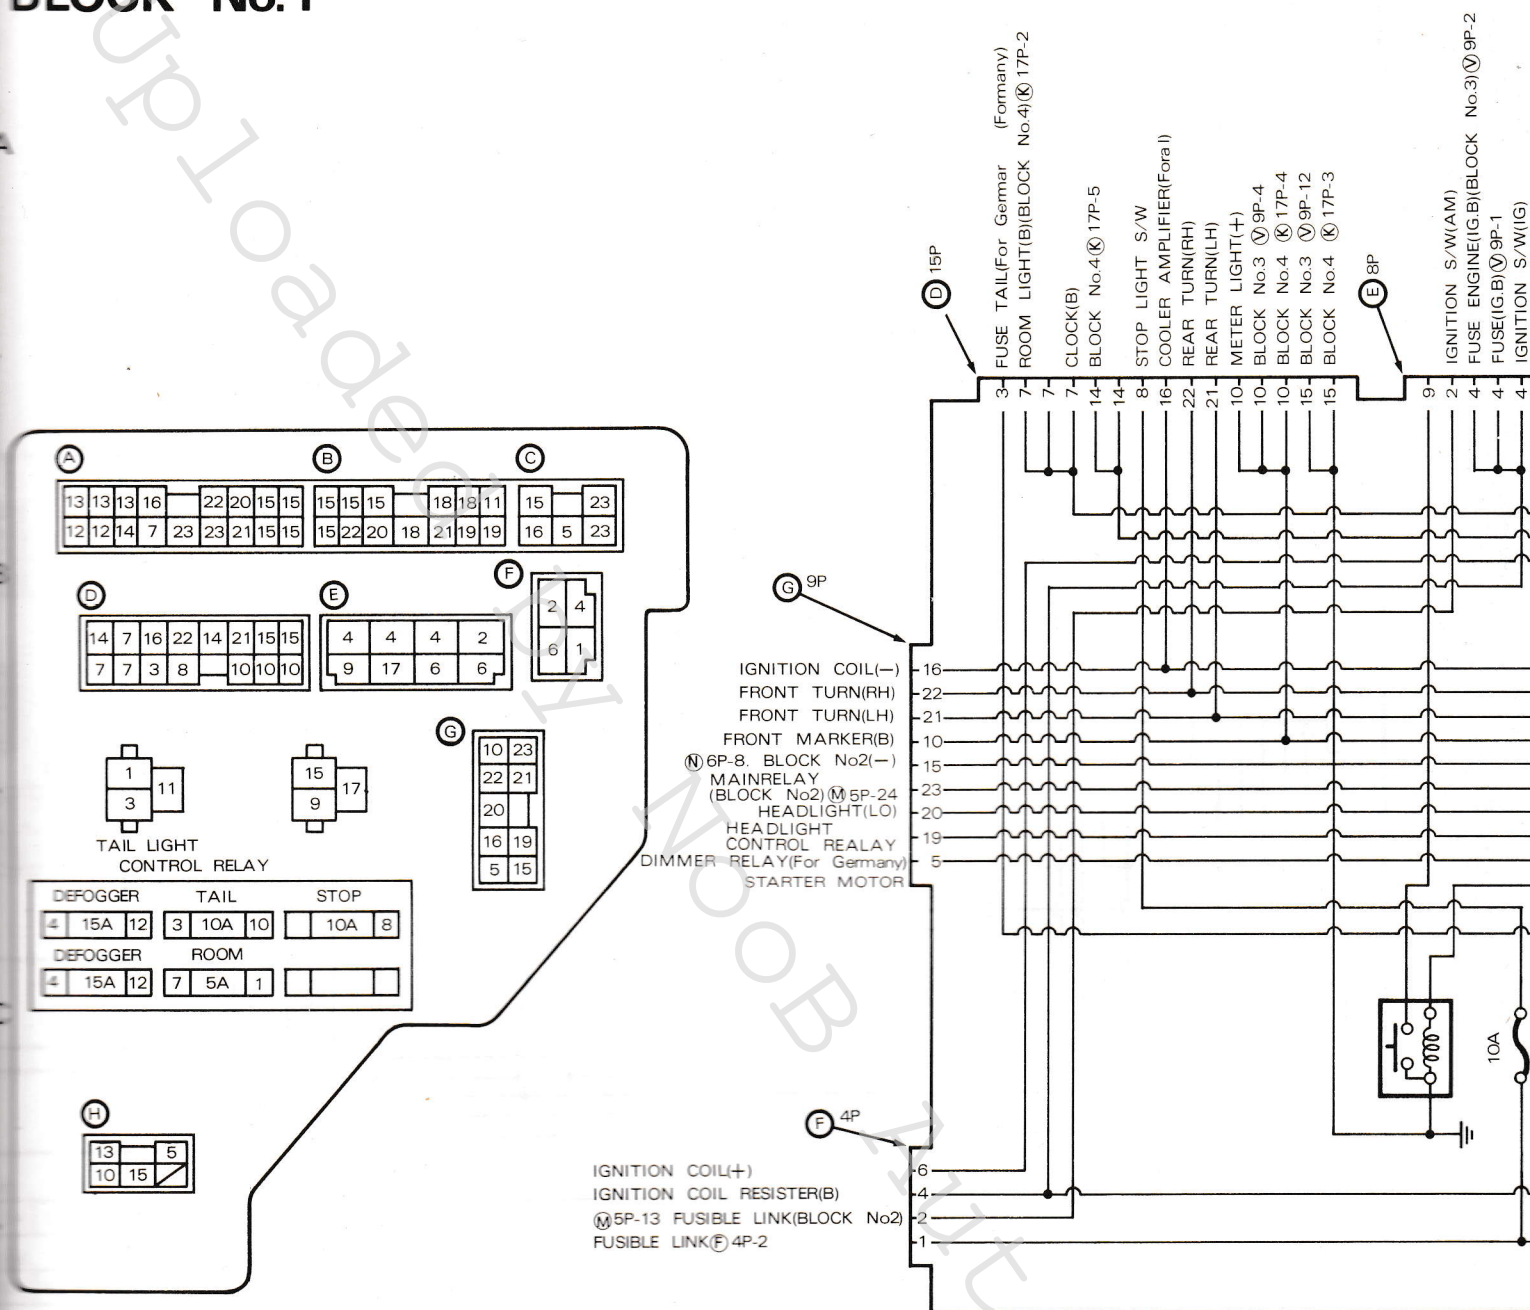


liftback, Coupe & Wagon) ELECTRICAL WIRING DIAGRAM— 1

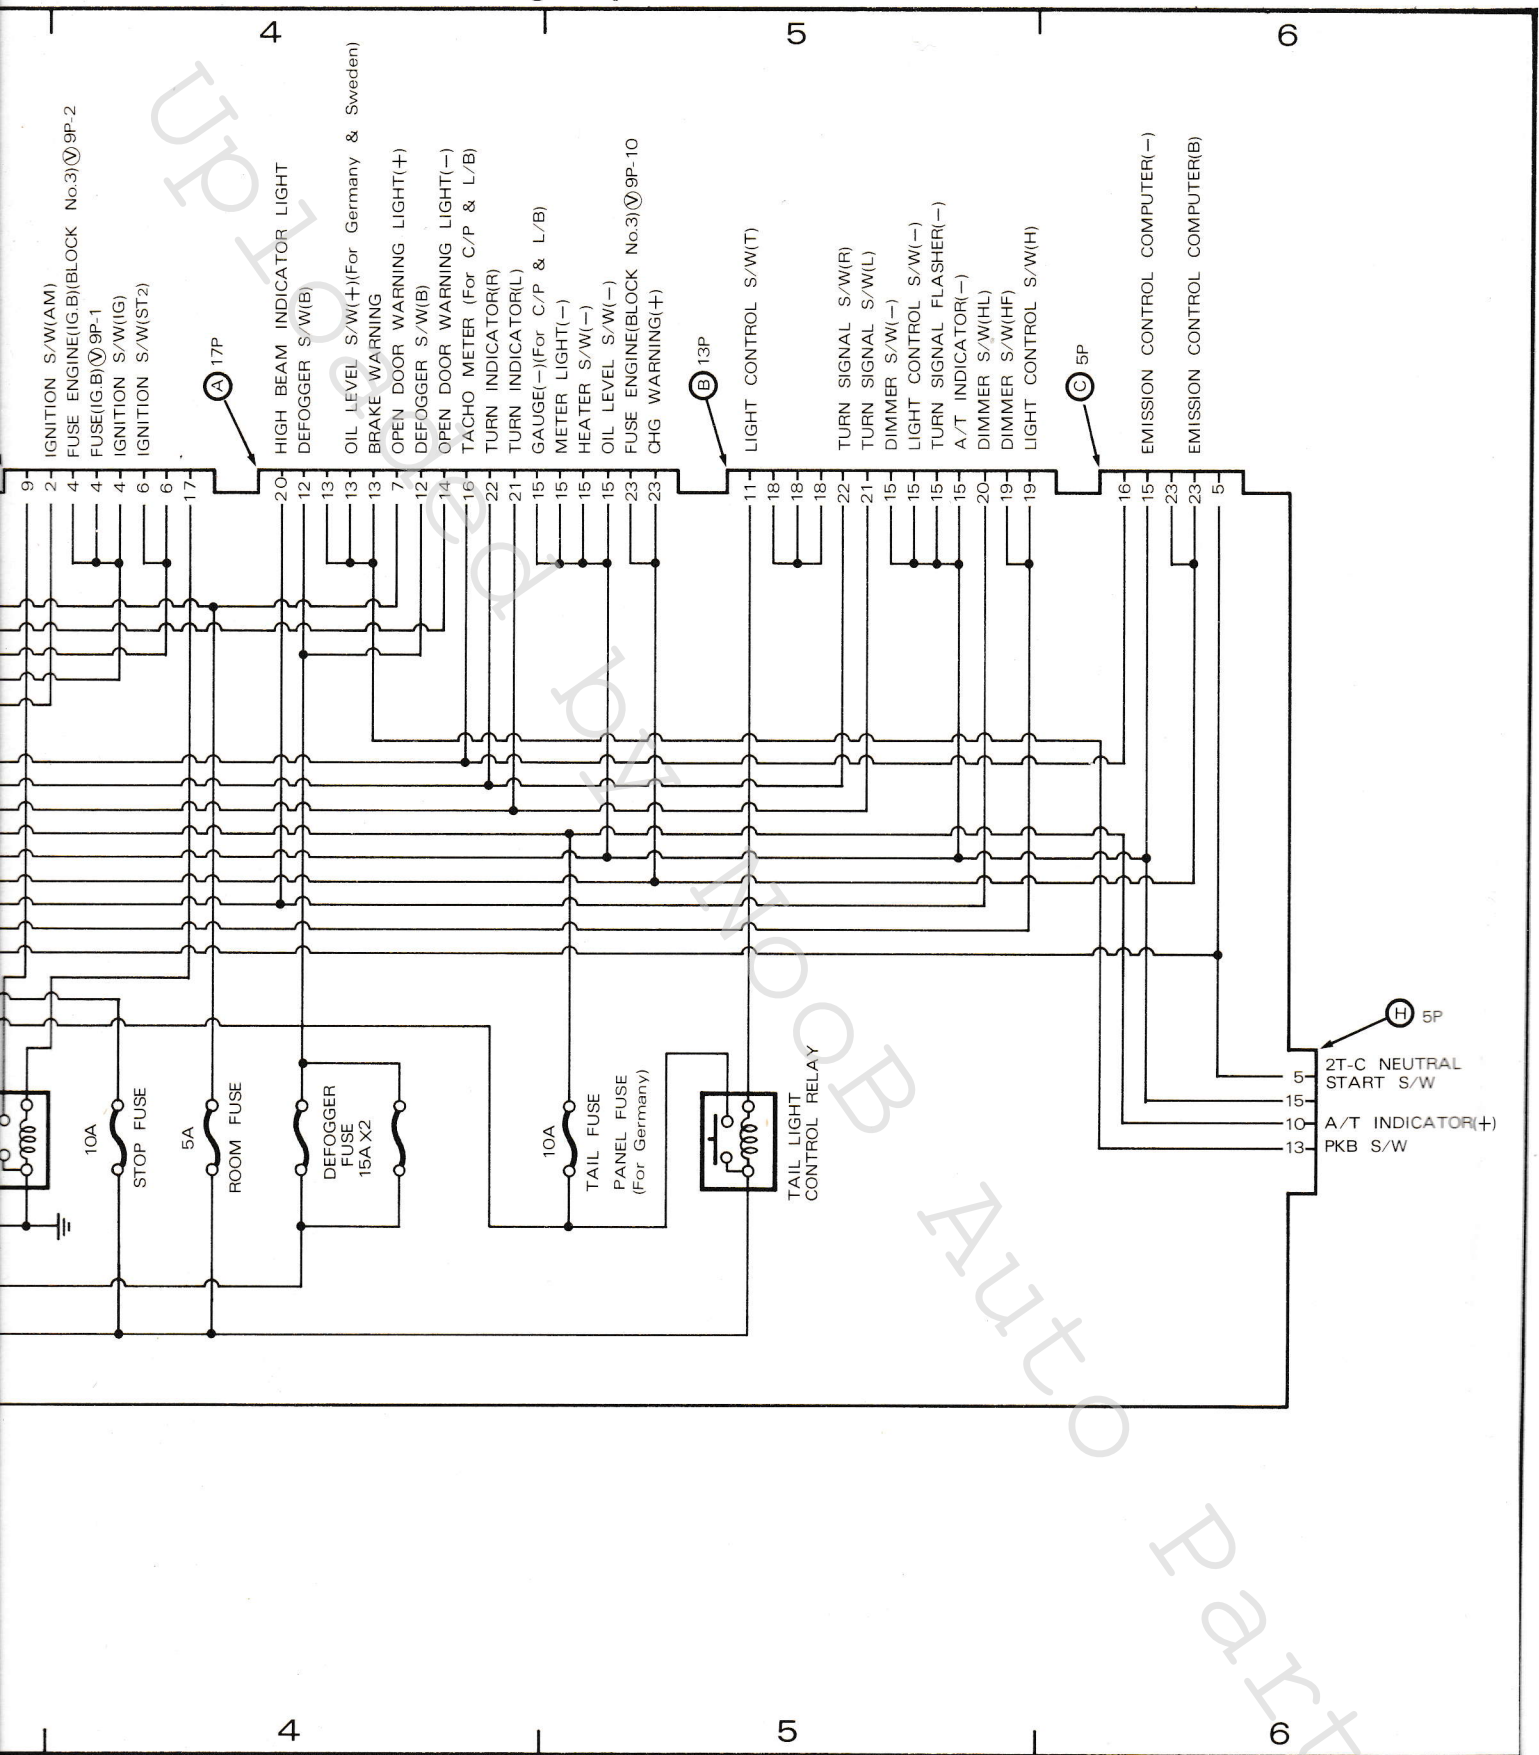

GRAM — 1980 PRODUCTION VEHICLE

BLOCK No.4

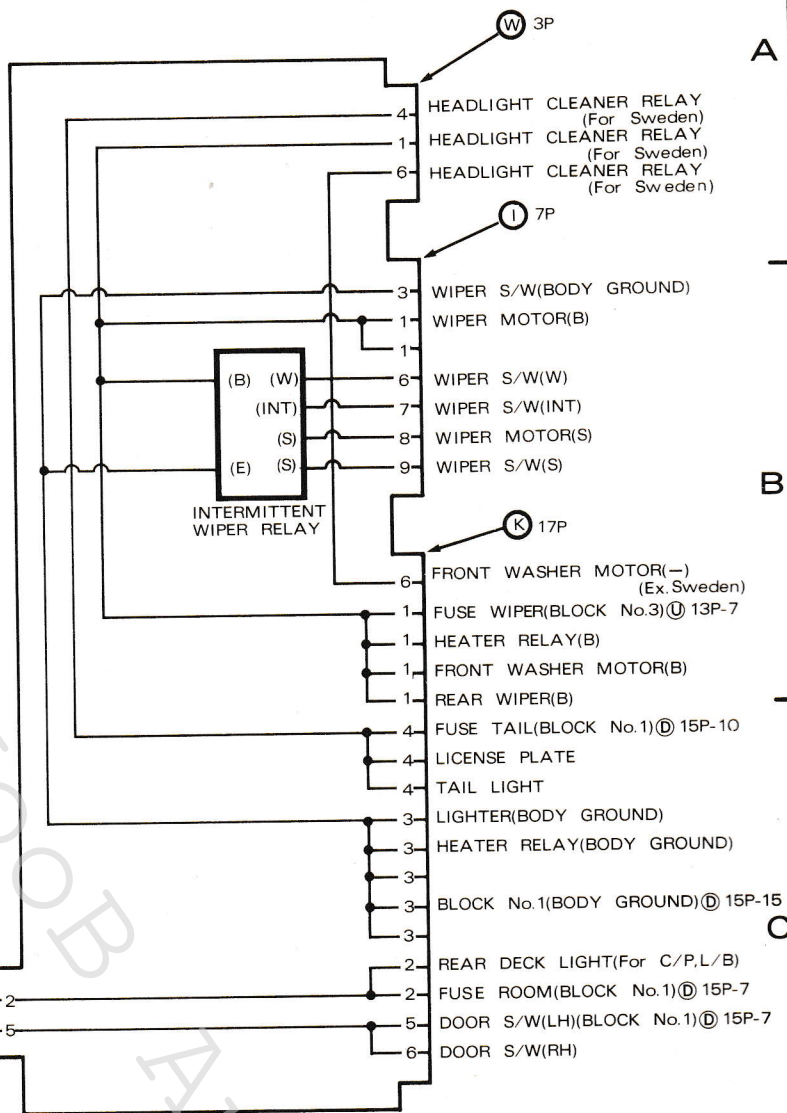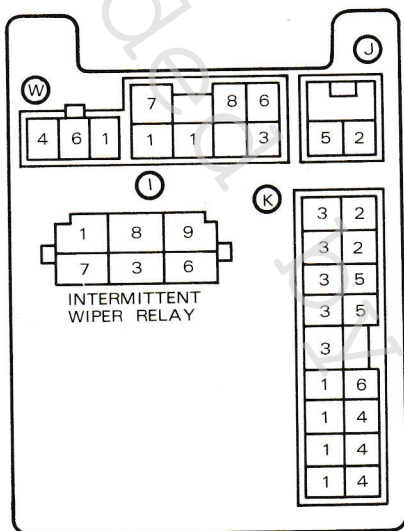

T-C NEUTRAL
START S/W

INTERIOR LIGHT(+)
INTERIOR LIGHT(-)

HEADLIGHT CLEANER RELAY
(For Sweden)

WIPER S/W(BODY GROUND)

WIPER S/W(W)
WIPER S/W(INT)
WIPER MOTOR(S)
WIPER S/W(S)

FRONT WASHER MOTOR(-)
(Ex. Sweden)

FUSE WIPER(BLOCK No.3) 13P-7

HEATER RELAY(B)

FRONT WASHER MOTOR(B)

REAR WIPER(B)

FUSE TAIL(BLOCK No.1) 15P-10

LICENSE PLATE

TAIL LIGHT

LIGHTER(BODY GROUND)

HEATER RELAY(BODY GROUND)

BLOCK No.1(BODY GROUND) 15P-15

REAR DECK LIGHT(For C/P,L/B)


FUSE ROOM(BLOCK No.1) 15P-7

DOOR S/W(LH)(BLOCK No.1) 15P-7


DOOR S/W(RH)

LHD, Fuse & Relay Block for COROLLA No.2,3 (Sedan, Liftback)


BLOCK No.2

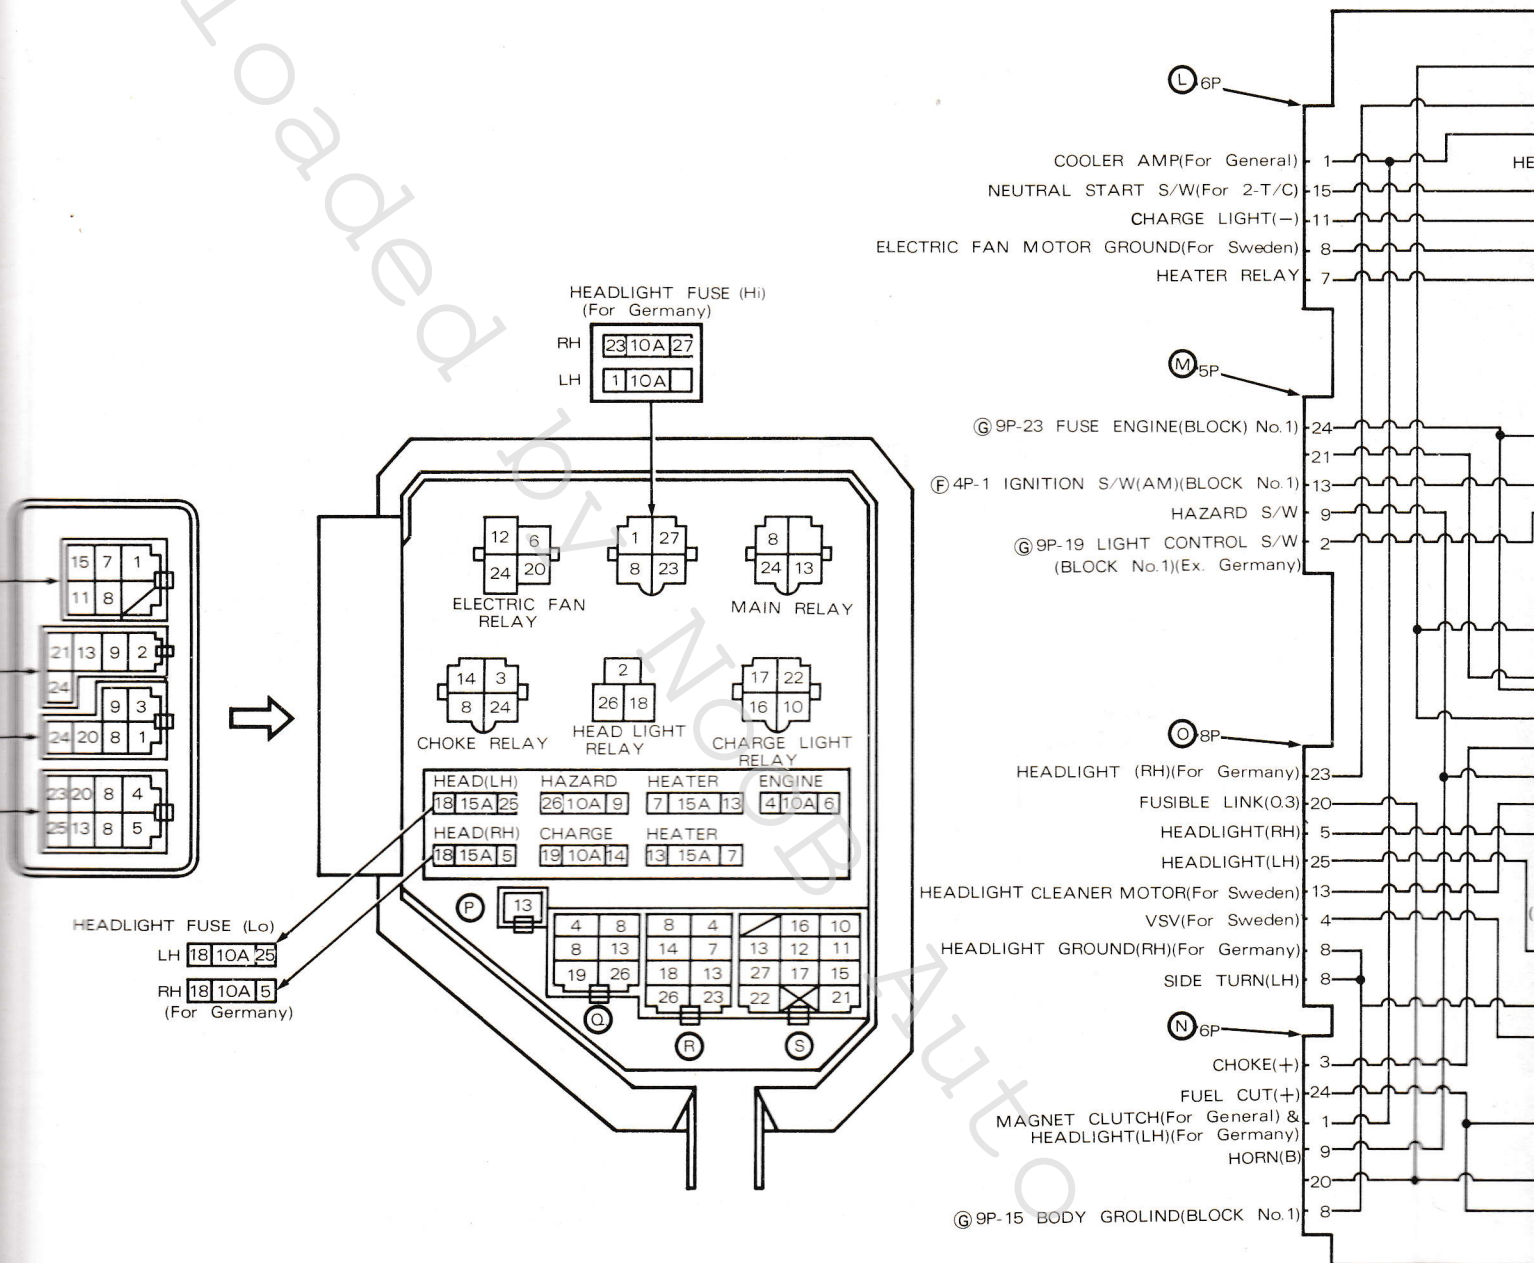

liftback, Coupe & Wagon) ELECTRICAL WIRING DIAGRAM —

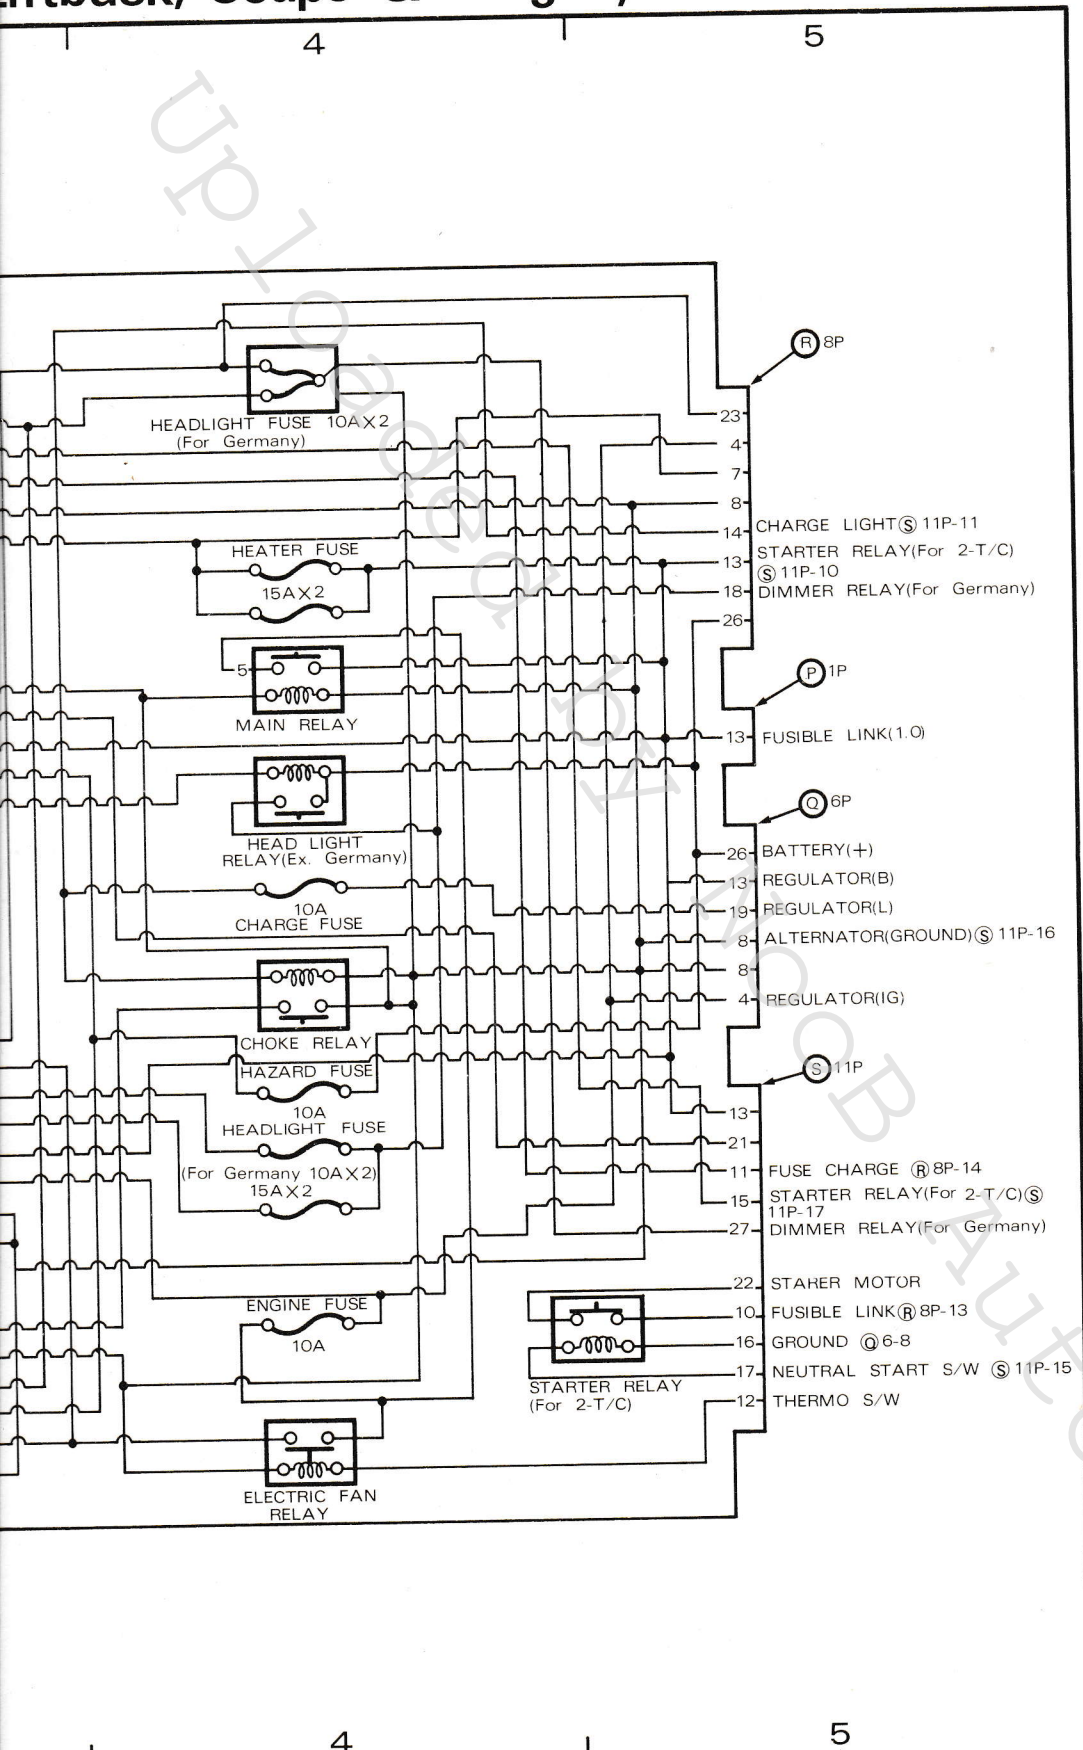


BLOCK No.3

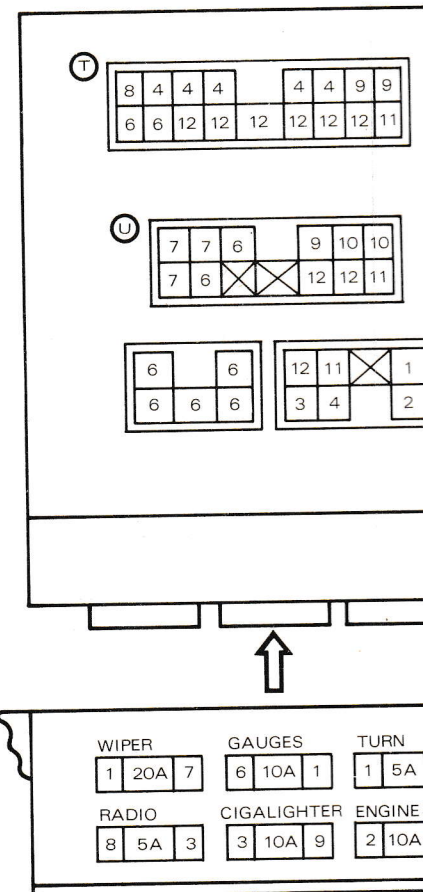



GRAM — 1980 PRODUCTION VEHICLE

No.3

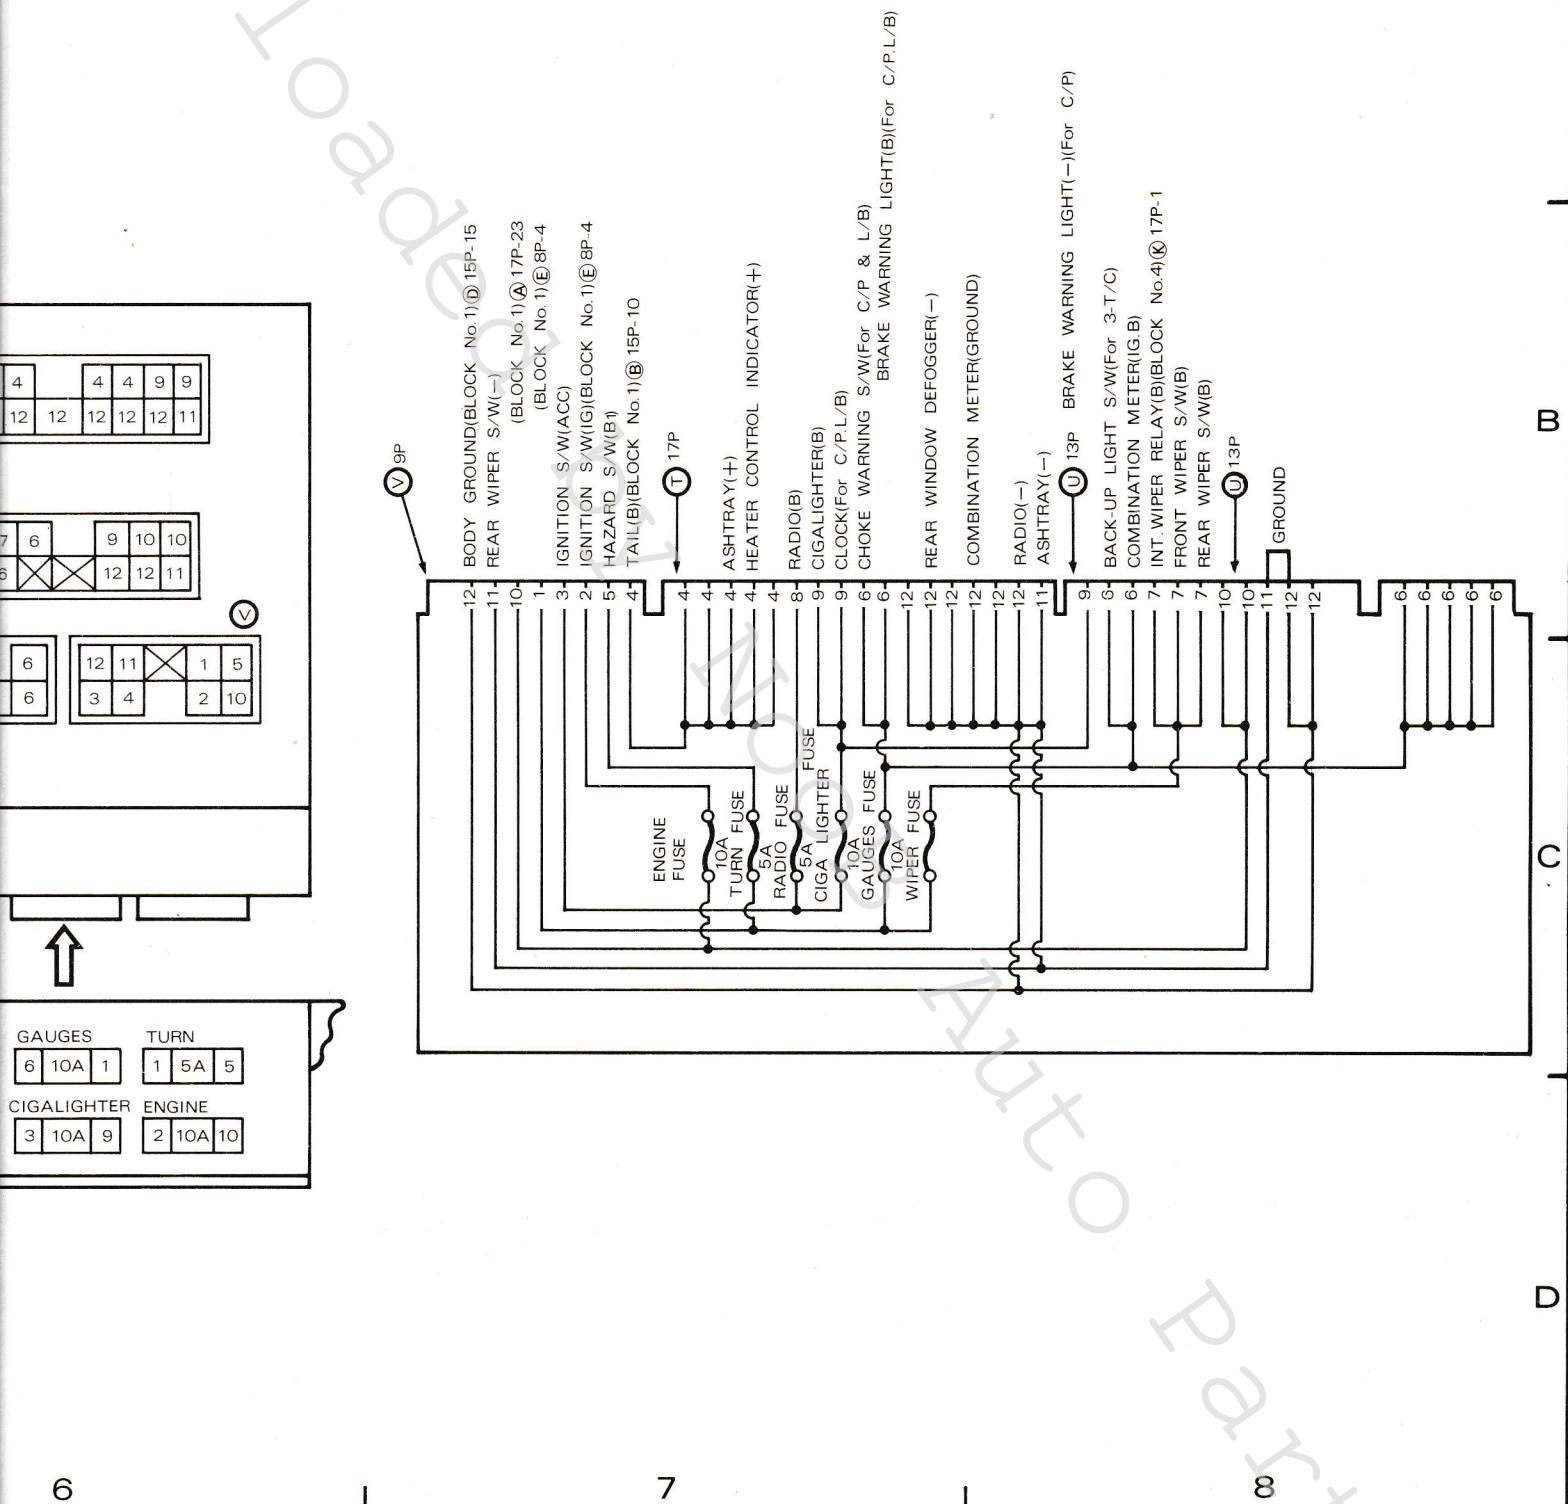


RHD, Fuse & Relay Block for COROLLA No.1,4 (Sedan, Liftback

BLOCK No. 1

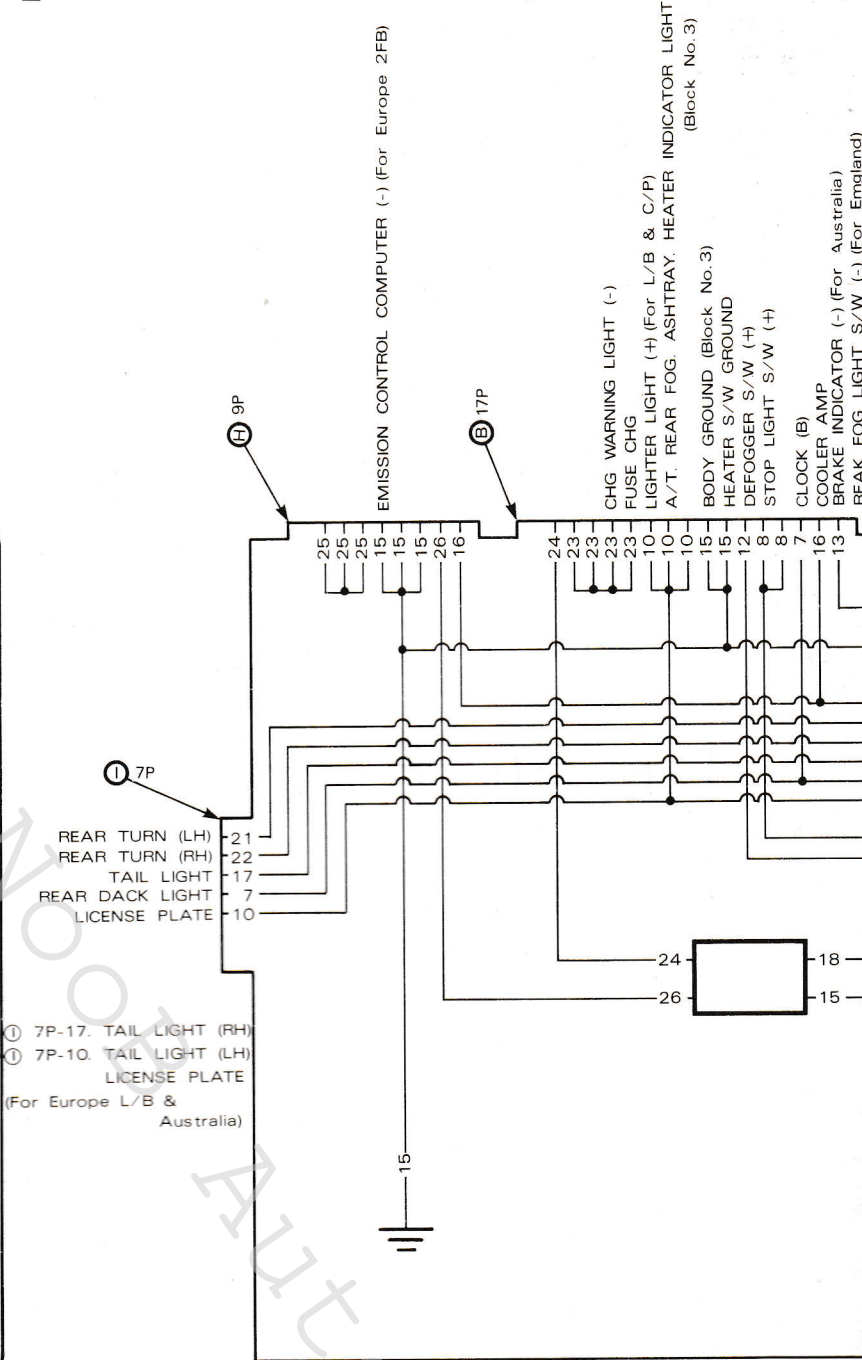
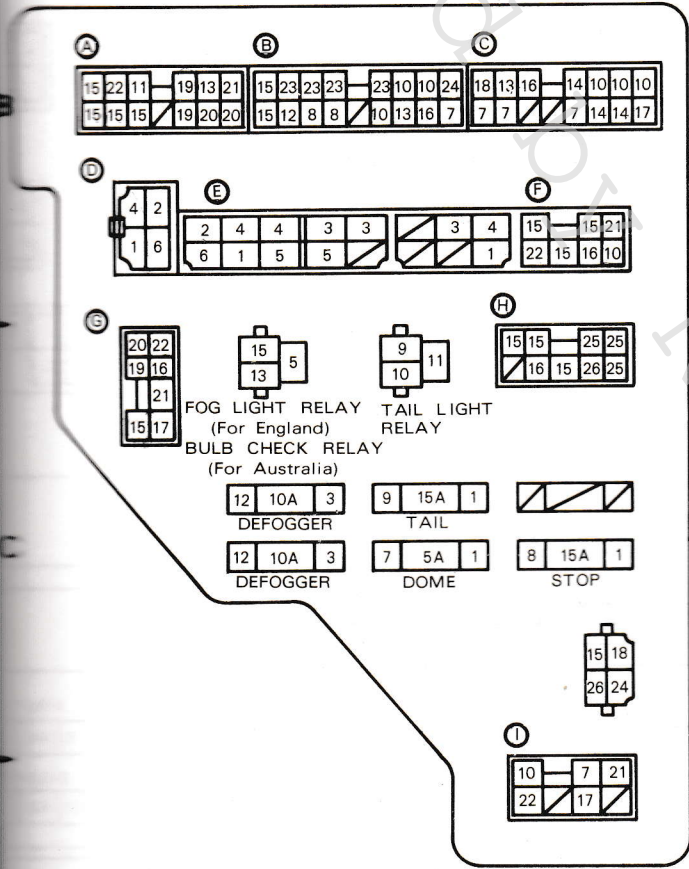


h, Liftback, Coupe & Wagon) ELECTRICAL WIRING DIAGRAM -

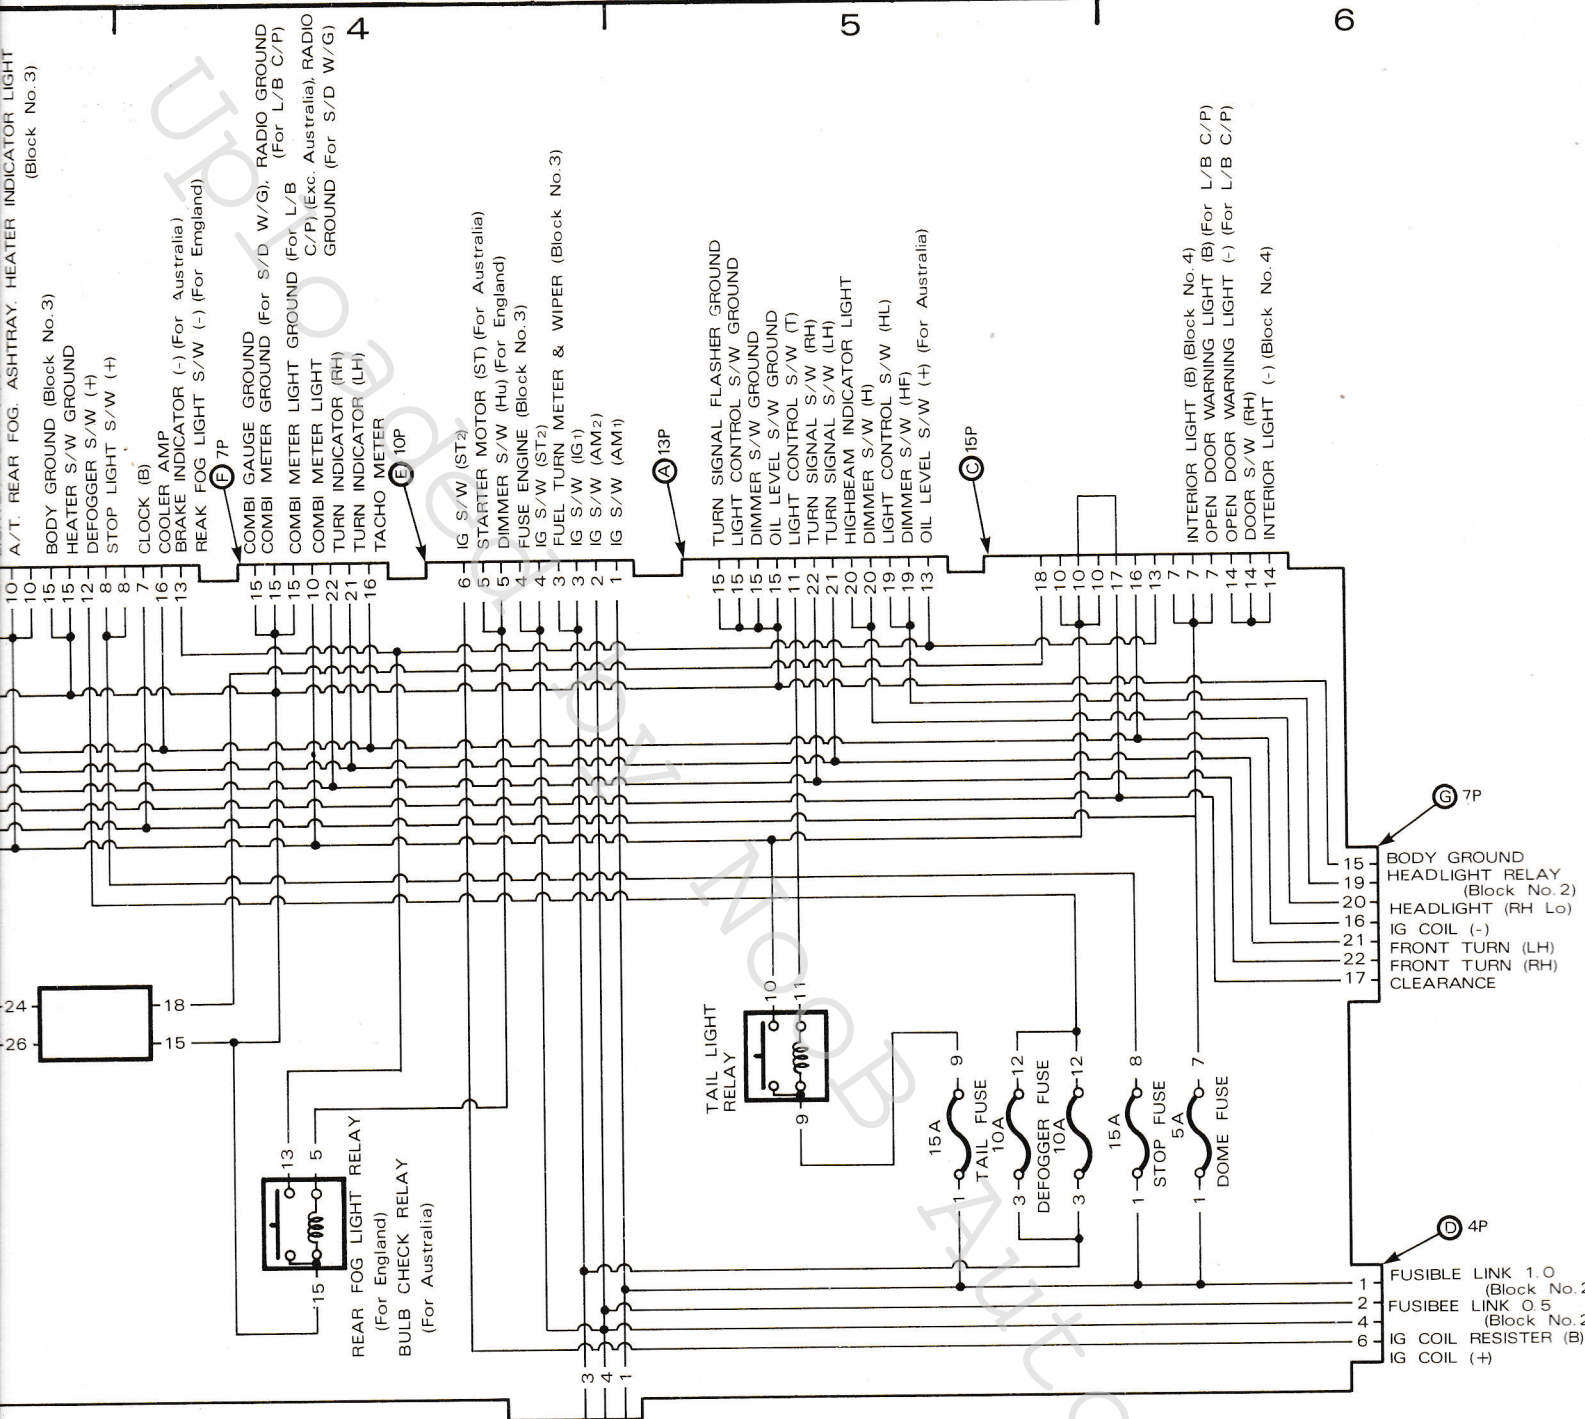

GRAM — 1980 PRODUCTION VEHICLE

BLOCK No. 4

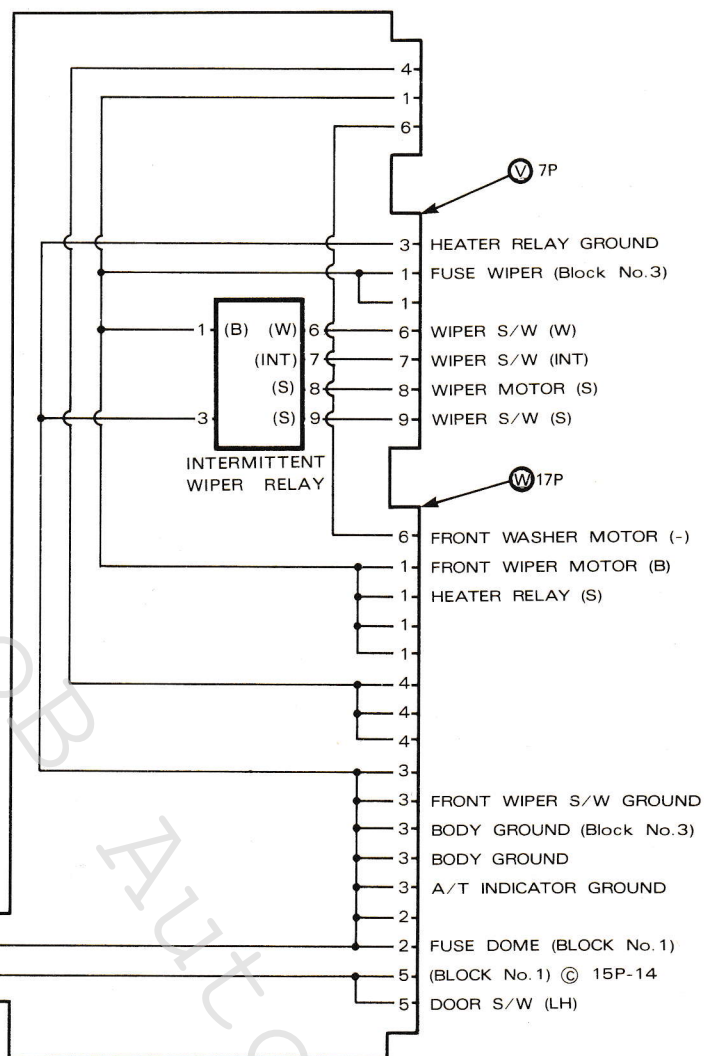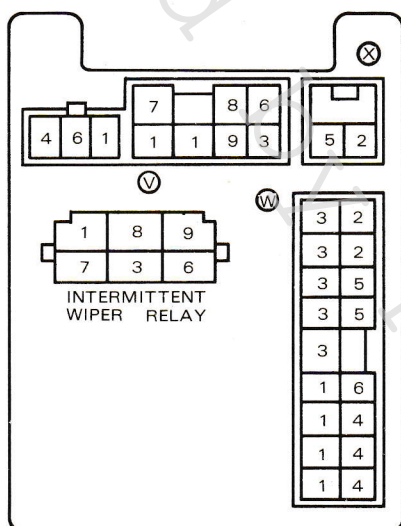

G 7P
 BODY GROUND
 ADLIGHT RELAY
 (Block No.2)
 ADLIGHT (RH Lo)
 COIL (-)
 ONT TURN (LH)
 ONT TURN (RH)
 EARANCE

D 4P
 SIBLE LINK 1.0
 (Block No.2)
 BEE LINK 0.5
 (Block No.2)
 COIL RESISTER (B)
 COIL (+)

X 2P
 INTERIOR
 INTERIOR

RHD, Fuse & Relay Block for COROLLA No.2,3 (Sedan, Liftback)



BLOCK No. 2

A

B

C

D

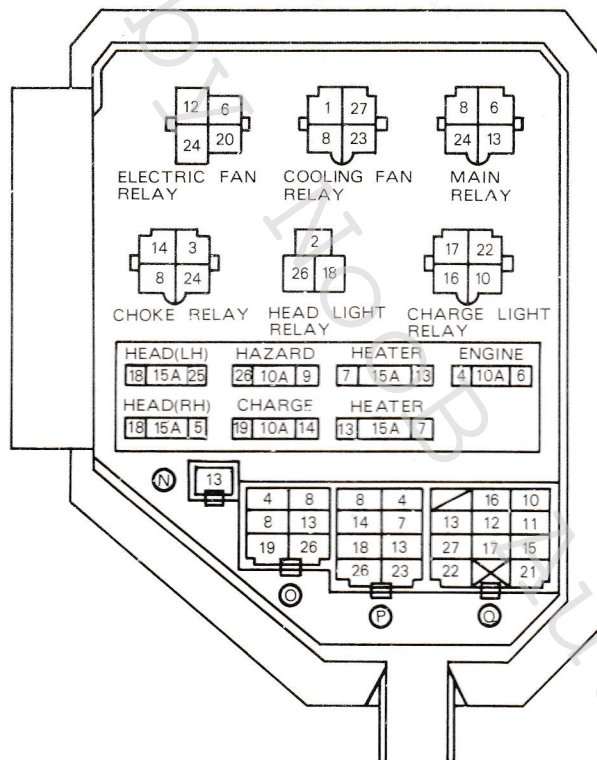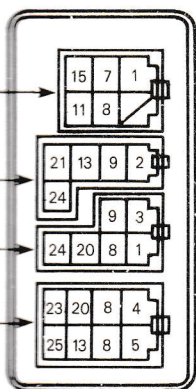

6P →

- COOLER AMP 1
- NEUTRAL START S/W (For A/T), IG S/W (ST) 15
- CHARGE LIGHT (-) 11
- BODY GROUND (Block No.4) 8
- HEATER RELAY 7

5P →

- FUSE ENGINE (BLOCK No.3) 24
- IG S/W (AM2) (BLOCK No.1) 21
- IGNITION S/W (AM1) (BLOCK No.1) 13
- HAZARD S/W 9
- LIGHT CONTROL S/W (BLOCK No.1) 2

8P →

- FUSIBLE LINK (No.3) 23
- HEADLIGHT (RH) 20
- HEADLIGHT (LH) 5

6P →



- FRONT TURN (LH) 13
- CHOKE (+) 4
- FUEL CUT (+) 8
- MAGNET CLUTCH 8
- HORN (B) 1
- CLEARANCE (LH) GROUND 9

1

2


3

n, Liftback, Coupe & Wagon) ELECTRICAL WIRING DIAGRAM

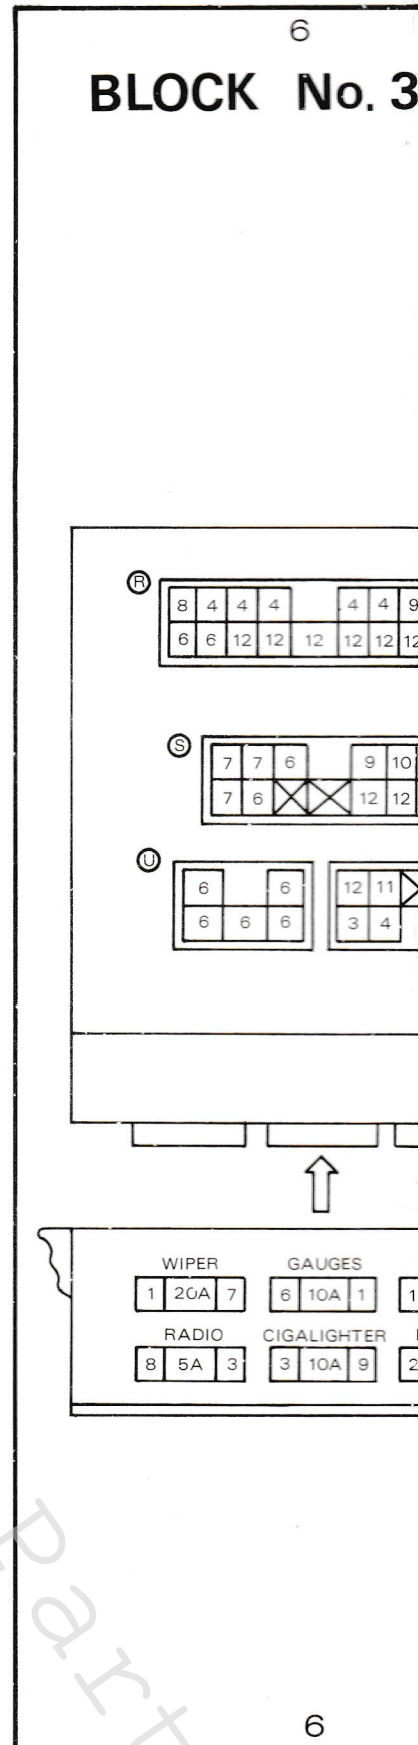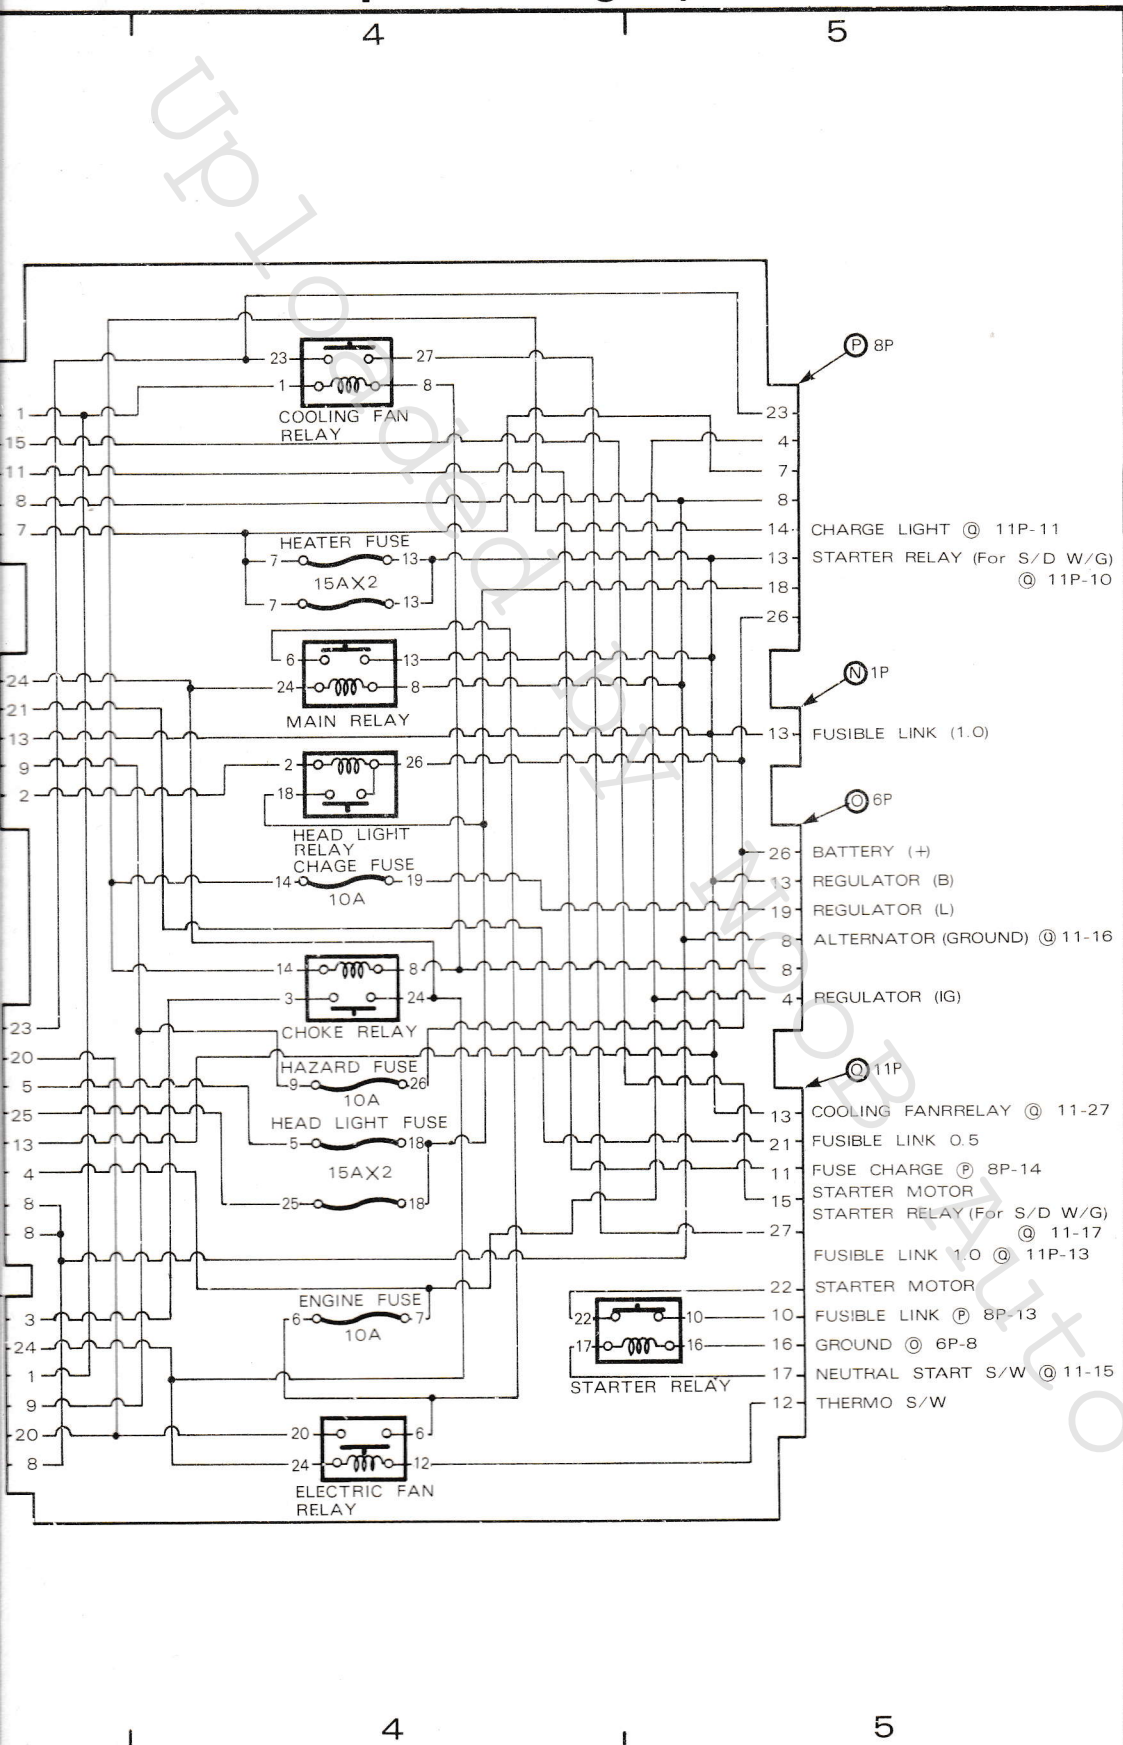

GRAM — 1980 PRODUCTION VEHICLE

K No. 3

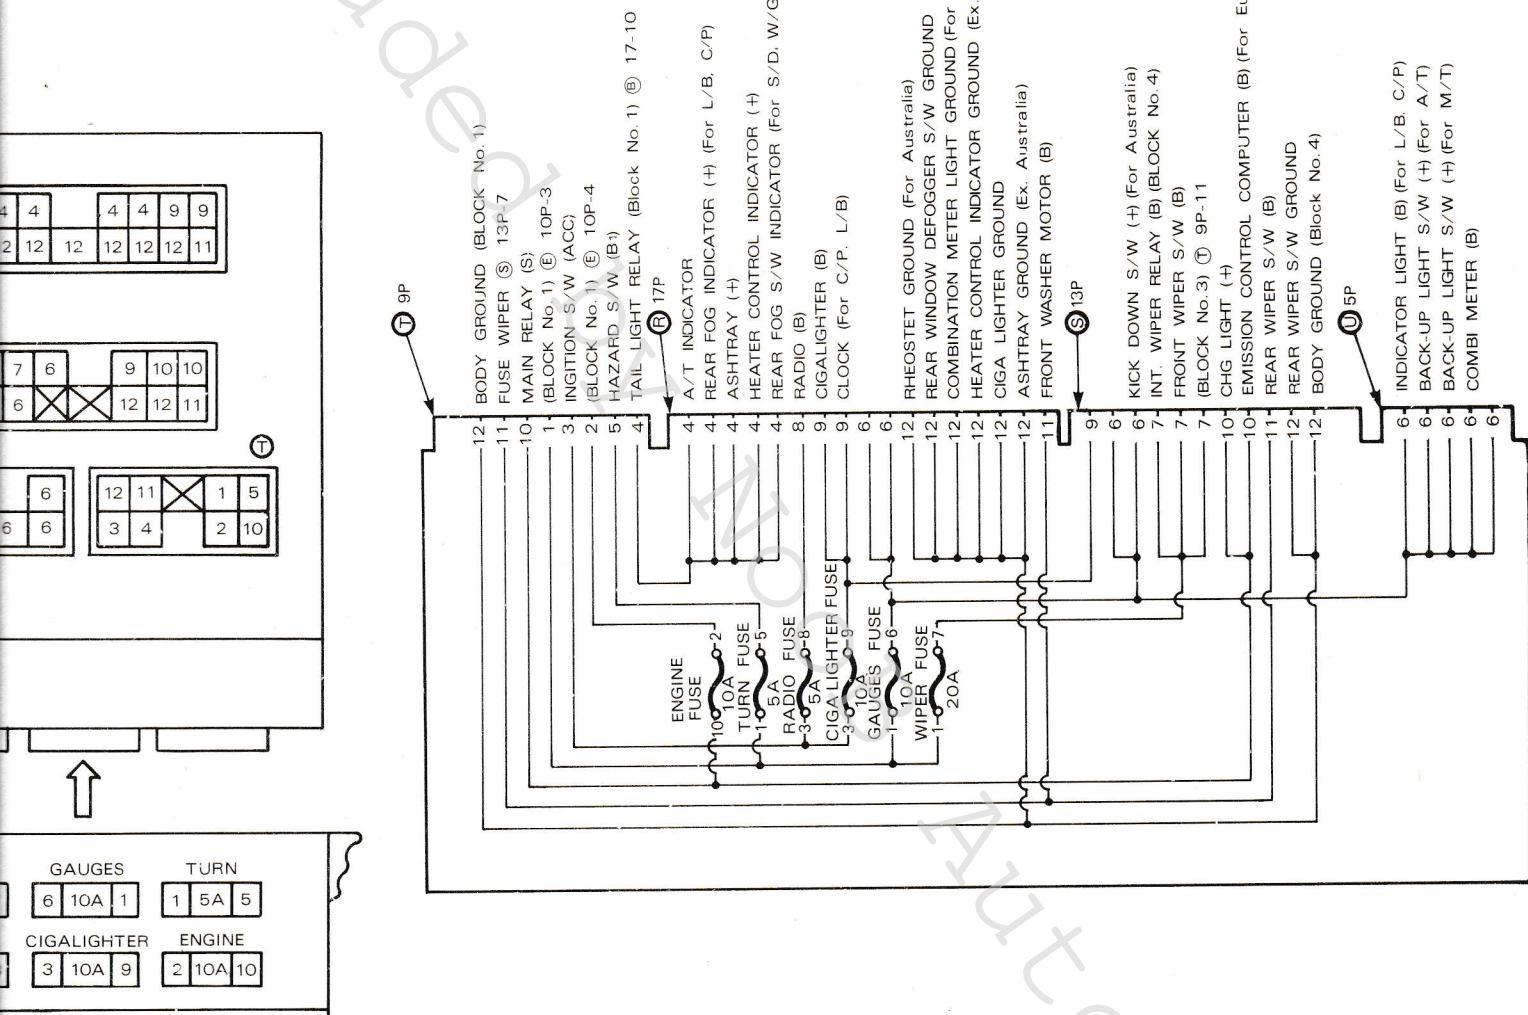

INDEX


CARINA ELECTRICAL WIRING DIAGRAM — 1980 PRODUCTION VEHICLE

NUMBER	GRID LOCATION	COMPONENTS	NUMBER	GRID LOCATION	COMPONENTS
1	B-2	A/C AMPLIFIER	61	C-5	WIPER, FRONT
2	C-1	ALTERNATOR	62	C-5	WIPER, REAR (For Wagon)
3	B-1	BATTERY 12V	63	B-3	OIL PRESSURE GAUGE
4	D-3	BRAKE OIL SENSOR (For 3T-C)	64	B-3	OIL PRESSURE SENDER
5	D-2	CHOKE HEATER COIL	65	B-8	RADIO
6	B-7	CIGARETTE LIGHTER	66	C-4	REAR WINDOW DEFOGGER
7	B-4	CIRCUIT BREAKER (For LHD)	67	C-1	REGULATOR
8	D-7	CLOCK			
9	B-2	CONDENSER			
10	C-7	DIGITAL CLOCK	68	D-1	RELAYS:
11	B-2	DISTRIBUTOR	69	B-4	CHOKE HEATER
12	D-2	EMISSION CONTROL COMPUTER	70	B-6	DEFOGGER
13	D-2	FUEL CUT SOLENOID	71	B-4	DIMMER
14	C-3	FUEL GAUGE	72	B-4	FLASHER (For LHD)
15	C-3	FUEL LEVEL SENDER	73	B-6	FLASHER (For RHD)
16	A-2	FUSE BOX	74	B-5	HEADLIGHT
17	C-2	FUSE CHARGE 5A	75	B-2	HEADLIGHT CLEANER
18	B-1	FUSIBLE LINK	76	B-6	(For LHD)
19	B-2	HEATER RESISTOR	77	B-6	HEATER
20	C-4	HORN	78	B-5	TAIL LIGHT (For LHD)
21	B-2	IGNITION COIL	79	C-8	TAIL LIGHT (For RHD)
			80	D-2	WINDSHIELD WIPER
			81	B-8	(Intermittent)
22	D-6	LIGHTS:			
23	D-4	A/T INDICATOR	82	B-2	SPEAKER
24	D-4	BACK-UP, LH	83	D-4	SPEED SENSOR
25	C-3	BACK-UP, RH	84	C-3	STEREO
26	B-3	BRAKE WARNING			
27	C-3	CHARGE WARNING	85	D-8	SWITCHES:
28	C-6	CHOKE WARNING	86	B-4	A/C
29	C-5	CIGARETTE LIGHTER	87	C-3	BACK-UP LIGHT
30	C-6	CLEARANCE, LH	88	B-7	CHOKE WARNING LIGHT
31	D-6	CLEARANCE, RH	89	D-8	DECK ROOM LIGHT
32	D-8	CLOCK	90	D-8	(For Wagon)
33	D-8	DECK ROOM (For Wagon)	91	D-8	DEFROGGER
34	D-7	DOOR COURTESY	92	D-8	DIFFERENTIAL
35	C-3	FOG, REAR (For RHD)	93	D-7	DIMMER
36	C-6	FUEL WARNING	94	C-3	DOOR COURTESY, FRONT, LH
37	B-7	GLOVE BOX	95	C-6	DOOR COURTESY, FRONT, RH
38	B-8	HEAD, LH	96	B-4	DOOR COURTESY, REAR, LH
39	D-6	HEAD, RH	97	C-3	DOOR COURTESY, REAR, RH
40	D-7	HEATER CONTROL	98	D-4	FOG LIGHT, REAR (For RHD)
41	C-8	HIGH BEAM INDICATOR	99	A-1	FUEL WARNING LIGHT
42	C-5	INTERIOR	100	C-8	GLOVE BOX LIGHT
43	D-6	LICENSE PLATE	101	B-6	HAZARD
44	C-4	METER	102	B-2	HEATER BLOWER MOTOR
45	D-4	RED INDICATOR	103	B-1	HORN
46	D-4	STOP, LH	104	C-3	IGNITION
47	C-5	STOP, RH	105	D-4	INTERIOR LIGHT
48	C-6	TAIL, LH	106	D-3	LIGHT CONTROL
49	D-4	TAIL, RH	107	B-4	LOW PRESSURE
50	D-5	TURN SIGNAL, FRONT, LH	108	D-2	NEUTRAL START (For A/T)
51	D-4	TURN SIGNAL, FRONT, RH	109	D-2	P.K.B.
52	D-5	TURN SIGNAL, INDICATOR, LH	110	D-3	STOP LIGHT
53	D-4	TURN SIGNAL, INDICATOR, RH	111	B-5	TOP (For 3T ENG. M/T)
54	D-5	TURN SIGNAL, REAR, LH	112	B-5	TURN SIGNAL
			113	D-5	VACUUM
			114	D-5	WATER TEMP
55	C-2	MAGNET CLUTCH			(For 3T ENG. A/T)
					WATER TEMP
					(For 3T ENG. M/T)
56	B-5	MOTORS:			WINDSHIELD WASHER
57	B-2	HEADLIGHT CLEANER			WINDSHIELD WIPER
58	B-1	(For LHD)			WASHER, REAR (For Wagon)
59	C-5	HEATER BLOWER			WIPER, REAR (For Wagon)
60	C-5	STARTER			
			115	B-3	TACHOMETER
			116	D-2	V.S.V. (For 3T ENG. A/T)
			117	D-3	V.S.V. (For 3T ENG. M/T)
			118	B-3	WATER TEMP GAUGE
			119	B-3	WATER TEMP SENDER


DIAGRAMME DE CABLAGE ELECTRIQUE

Nombre	Réperage sur le plan	Composants
6	B-7	Allumage
2	C-1	Alternateur
1	B-2	Amplificateur A/C
3	B-1	Batterie 12V
21	B-2	Bobine d'allumage
5	D-2	Bobine d'allumage
80	D-2	Capteur de pression
9	B-2	Condenseur
18	B-1	Connecteur fusible
7	B-4	Coupe-circuit (pour)
66	C-4	Dégivreur rétroviseur
11	B-2	Distributeur
55	C-2	Embrayage magnétique
64	B-3	Emission de pression d'
119	B-3	Emission temp eau
17	C-2	Fusible CHARGE 5A
79	C-8	Haut-parleur
93	D-7	Intermittent
82	B-2	Antidémarrage, (For RHD)
101	B-6	A/C condition
106	D-3	Commande d'éc
102	B-2	Commutateur sup
99	A-1	Transmission
86	B-4	Coureur base p
87	C-3	Dégivreur
100	C-8	Differential
91	D-8	Eclairage intérieur
92	D-8	Eclairage intérieur
89	D-8	Eclairage intérieur
90	D-8	Eclairage intérieur
114	D-5	Eclairage, arrière
112	B-5	Eclairage, arrière
88	B-7	Eclairage pare-b
98	D-4	Globoire
94	C-3	Klaxon
107	B-4	Lampe d'avertisse
84	C-3	Lampe d'avertisse
113	D-5	Lampe d'avertisse
111	B-5	Lampe d'avertisse
85	D-8	Lumière ambiante
95	C-6	Lumière boîte à
105	D-4	Lumière d'arrêt
103	B-1	Lumière éclairag
97	C-3	bagages
83	D-4	Moteur ventilate
109	D-2	Projecteur arrière
110	D-3	Température (pour
108	D-2	Température (pour
104	C-3	Vide
96	B-4	Voyant avertisse
		main
		Voyant d'effort
14	C-3	Jauge d'essence
118	B-3	Jauge temp eau
20	C-4	Klaxon
28	C-6	Lampes:
34	D-7	Allume-cigare
25	C-3	Antidémarrage
35	C-3	Avertisseur de fr
36	C-6	Avertisseur d'ess
		Boîte à gants

CARINA ELECTRICAL WIRING DIAGRAM — 1980 PRODUCT

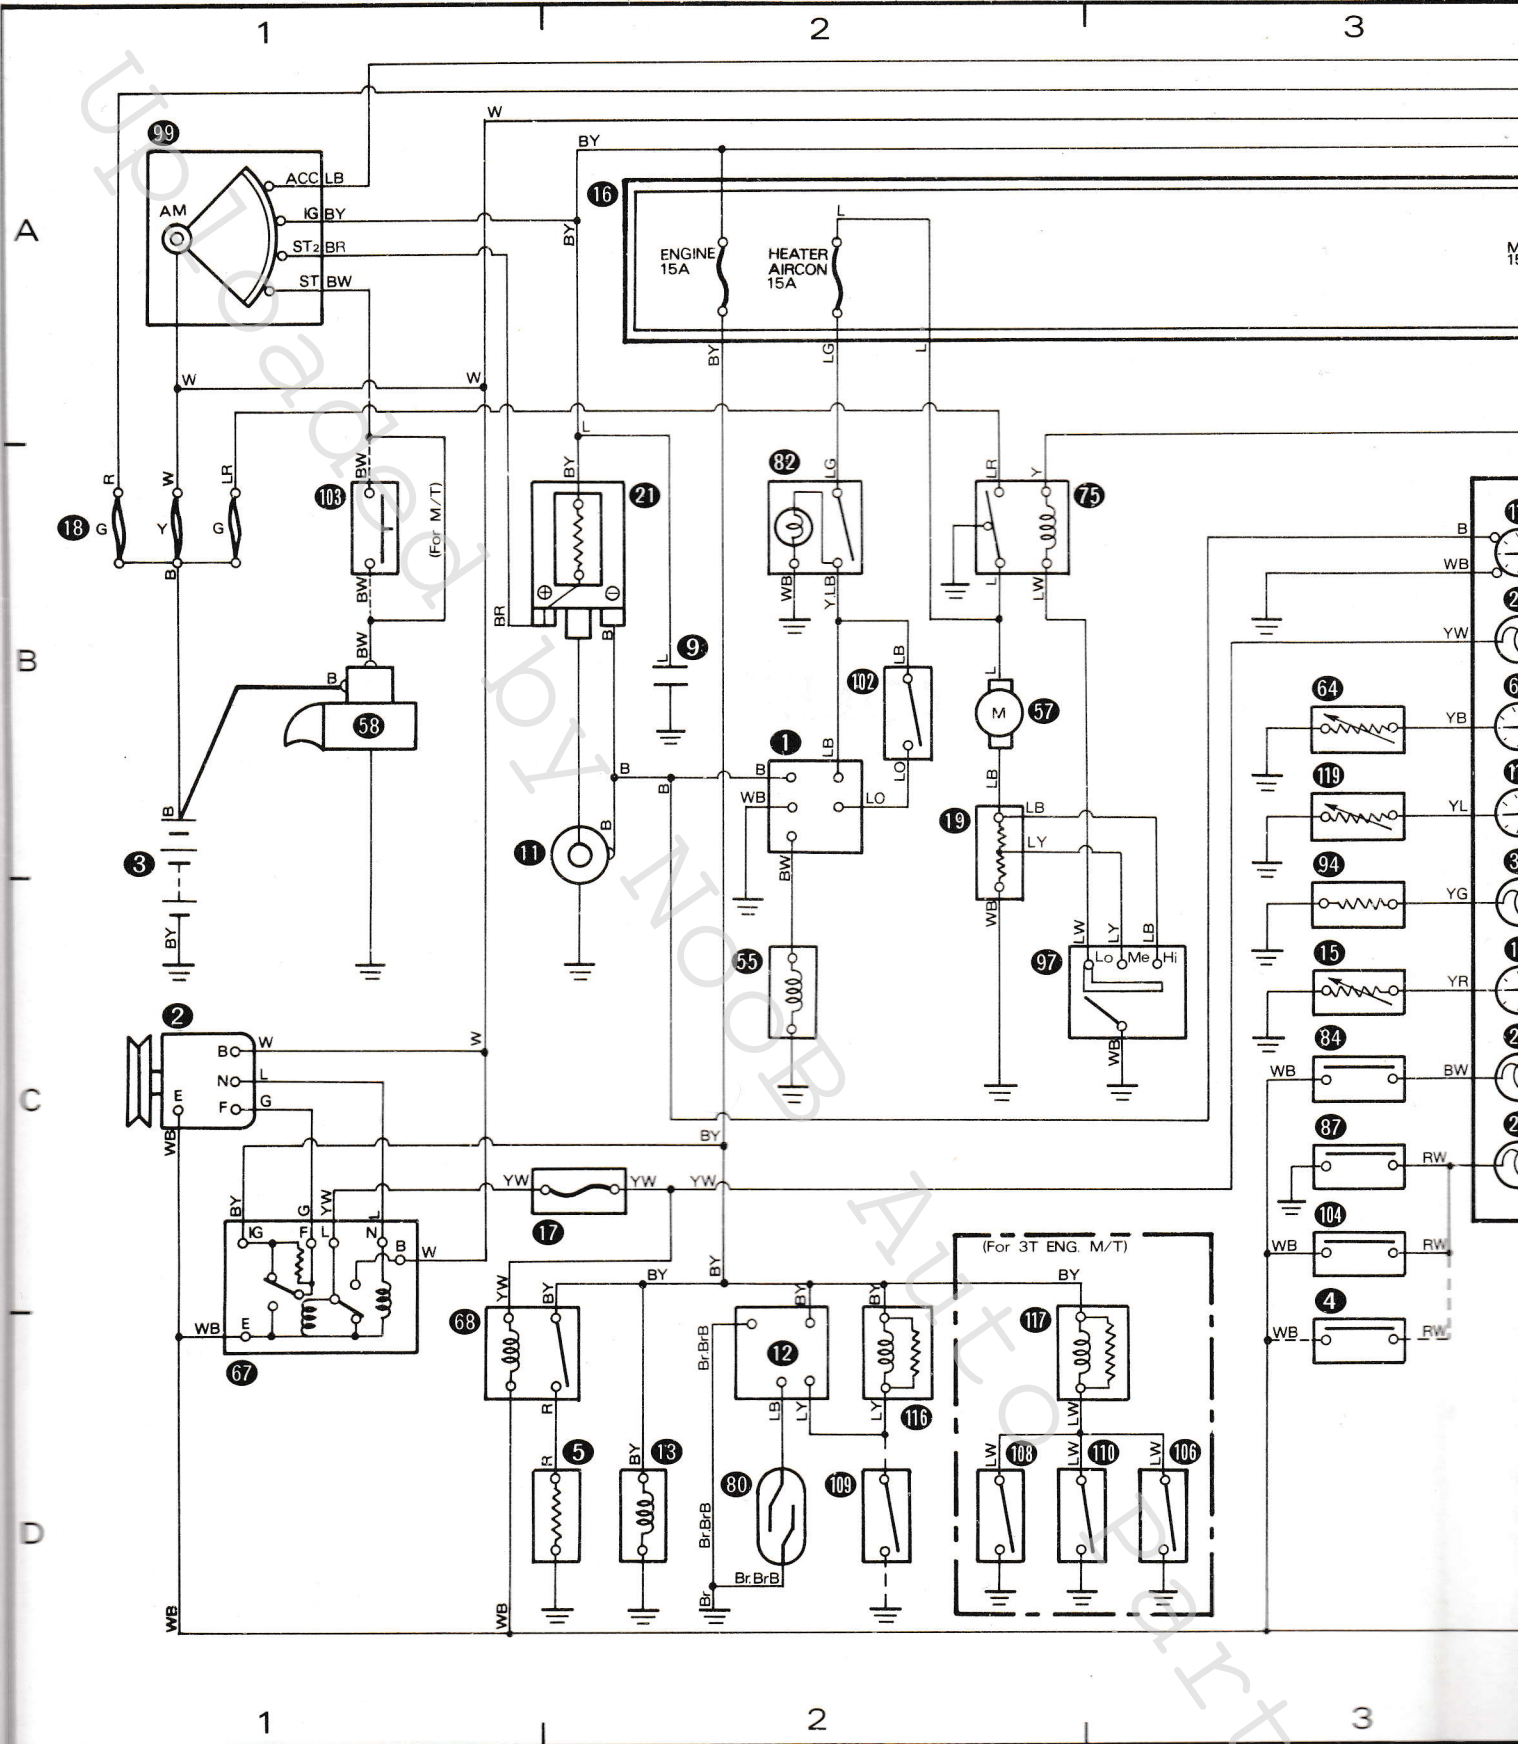

[illegible]

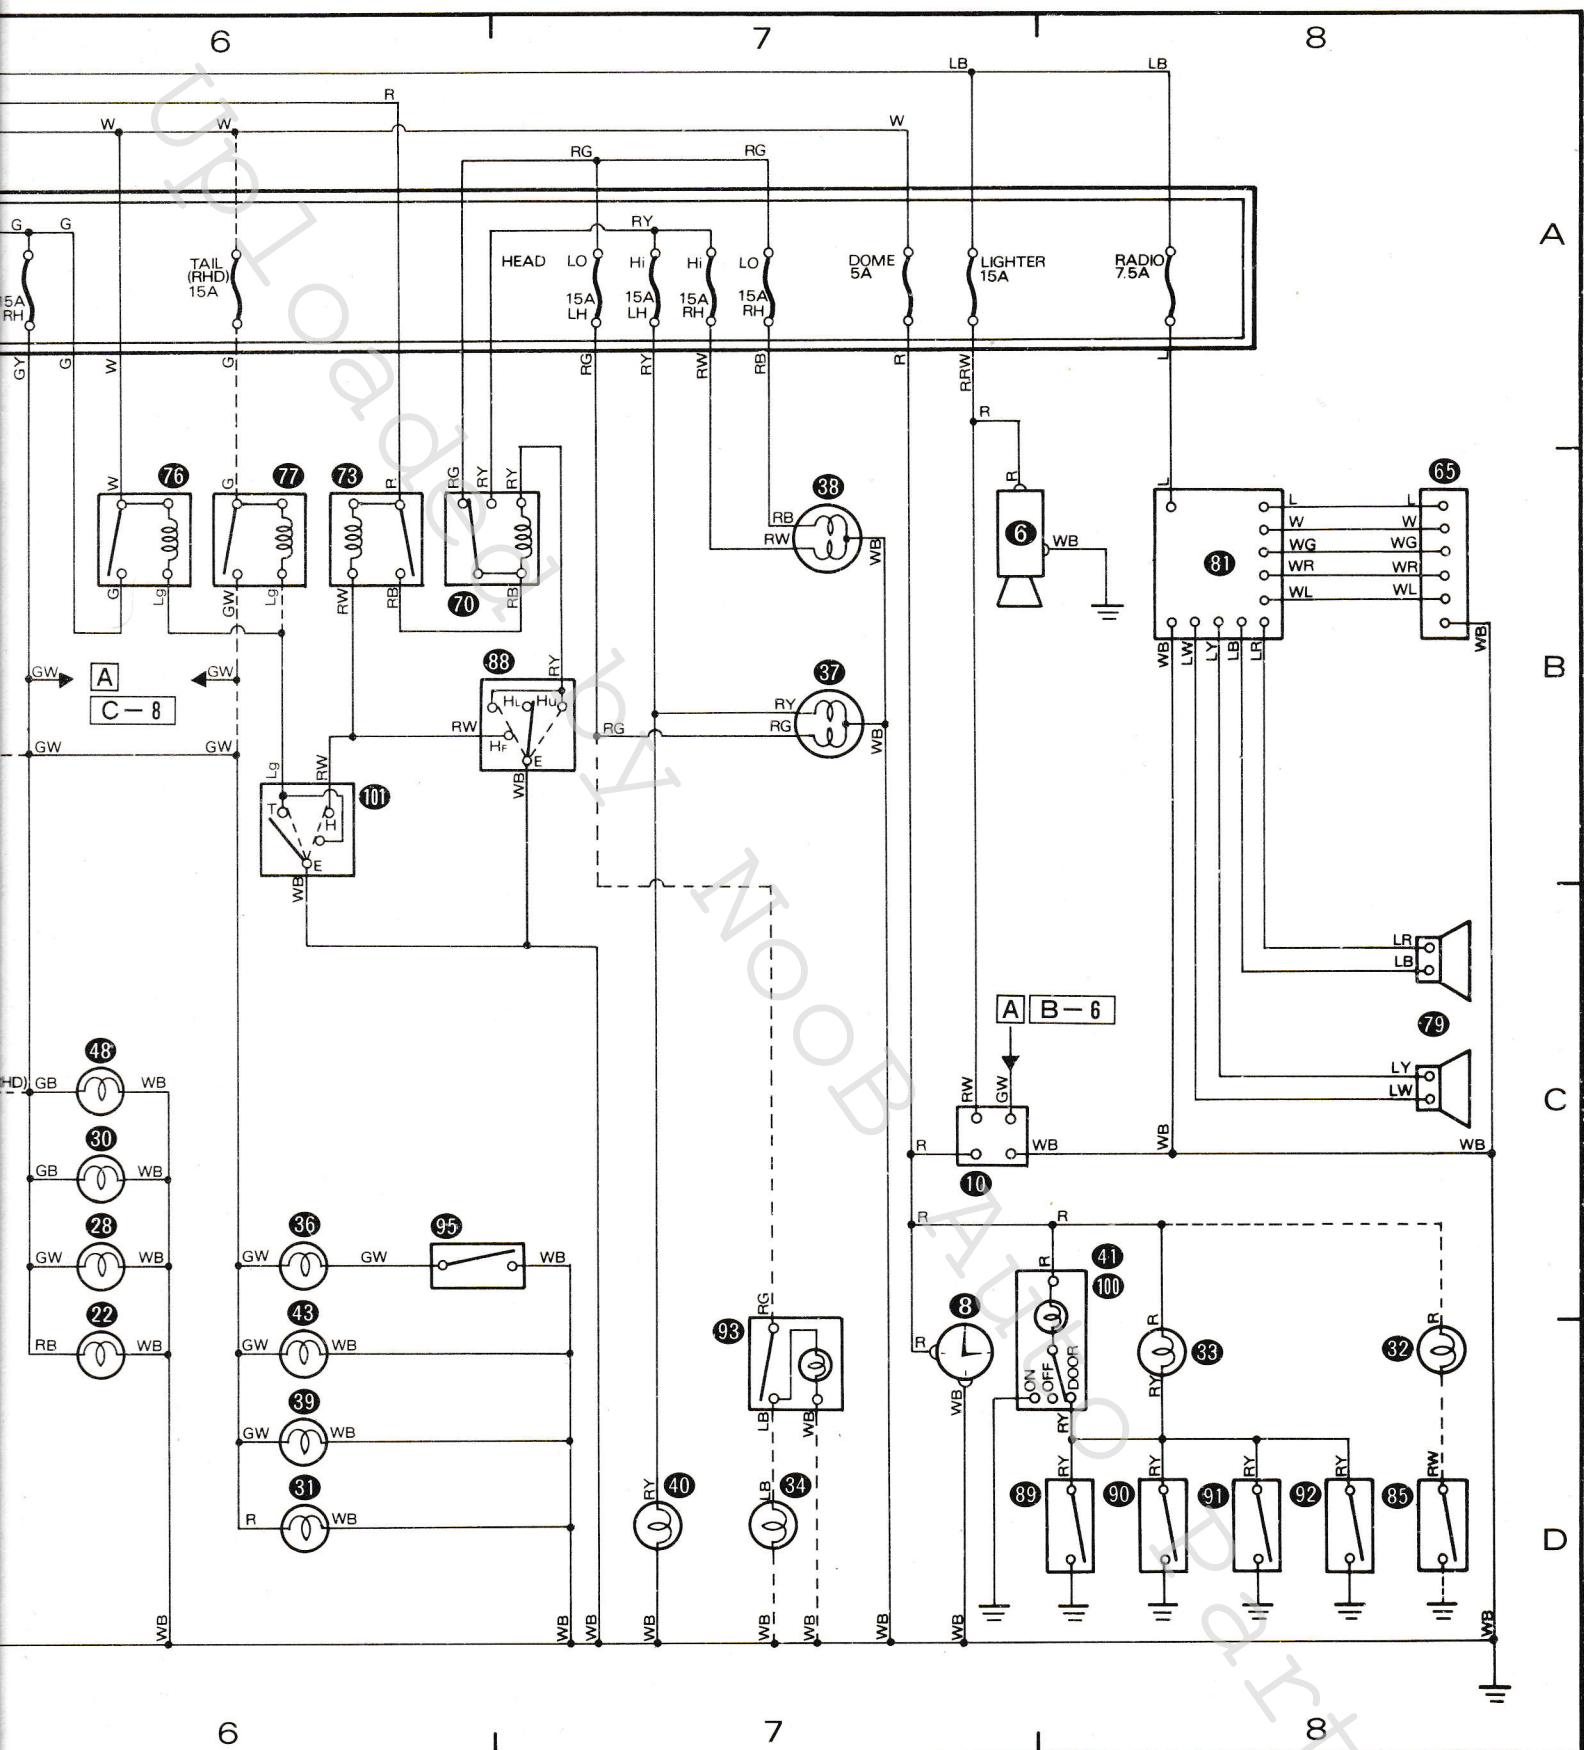

CELICA

INDEX


CELICA ELECTRICAL WIRING DIAGRAM — 1980 PRODUCTION VEHICLE

NUMBER	GRID LOCATION			COMPONENTS	NUMBER	GRID LOCATION			COMPONENTS
	Fig. 1	Fig. 2	Fig. 3			Fig. 1	Fig. 2	Fig. 3	
1	B-2	C-5	C-5	A/C AMPLIFIER	81	C-2	A-2	A-2	MAGNET CLUTCH (For 2T & 18R)
2	C-1	D-2	D-2	ALTERNATOR	82	C-2	C-2	C-2	MAGNET CLUTCH (For 18R-G)
3	D-1	—	D-2	ALTERNATOR (with IC Regulator)	83	—	C-6	C-6	METER (+B)
4	D-3	B-3	B-3	AUTOMATIC CHOKE (For 2T)	84	—	C-6	C-6	METER GROUND
5	D-1	D-2	C-3	AUTOMATIC CHOKE (For 18R)	85	B-8	B-7	A-7	MOTORES:
6	B-1	C-2	C-3	BATTERY 12V	86	B-8	A-8	A-8	ANTENNA (For Coupe)
7	B-7	C-6	C-7	CIGARETTE LIGHTER	87	B-5	A-3	—	ANTENNA (For Liftback)
8	B-4	B-7	—	CIRCUIT BREAKER (For LHD)	88	B-2	A-5	D-5	HEADLIGHT CLEANER
9	D-7	B-6	D-7	CLOCK	89	B-1	D-2	D-2	HEATER BLOWER
10	B-2	A-3	A-3	CONDENSER	90	B-1	A-3	B-2	STARTER (For 2T)
11	C-7	B-6	D-7	DIGITAL CLOCK (OPT)	91	C-5	A-3	A-3	STARTER (For 18R & 18R-G)
12	B-2	B-3	B-3	DISTRIBUTOR (For 2T)	92	C-5	A-4	C-4	WASHER, FRONT (For 18R)
13	B-2	A-3	B-2	DISTRIBUTOR (For 18R)	93	C-5	A-8	A-8	WASHER, FRONT (For 2T & 18R-G)
14	B-2	B-2	B-2	DISTRIBUTOR (For 18R-G)	94	C-5	B-4	C-4	WASHER, REAR (For Liftback)
15	D-2	A-4	D-4	EMISSION CONTROL COMPUTER (For 18R & 2T)	95	C-5	C-8	C-8	WIPER, FRONT
16	D-2	B-3	B-3	FUEL CUT SOLENOID (For 2T)	96	B-3	A-6	C-7	WIPER, REAR (For Liftback)
17	D-2	C-3	C-3	FUEL CUT SOLENOID (For 18R)	97	B-3	B-3	A-3	OIL PRESSURE GAUGE
18	D-2	B-2	B-2	FUEL CUT SOLENOID (For 18R-G)	98	B-3	B-2	B-2	OIL PRESSURE SENDER (For 2T)
19	C-3	B-6	C-6	FUEL GAUGE	99	B-8	B-6	C-6	OIL PRESSURE SENDER (For 18R & 18R-G)
20	C-3	B-7	B-7	FUEL LEVEL SENDER (For Coupe)	100	C-4	C-7	B-7	RADIO
21	C-3	B-8	C-8	FUEL LEVEL SENDER (For Liftback)	101	C-4	C-8	C-8	REAR WINDOW DEFOGGER (For Coupe)
22	C-2	—	—	FUSE CHARGE SA	102	C-1	C-3	C-3	REAR WINDOW DEFOGGER (For Liftback)
23	A-2	B-2	B-2	FUSE BOX	103	D-3	—	B-5	REGULATOR
24	B-1	C-2	C-2	FUSIBLE LINK	104	D-2	—	B-6	RELAYS:
25	—	B-6	C-6	GAUGE (+B)	105	D-2	A-6	B-5	BULB CHECK (Ex. ECE)
26	—	B-6	C-6	GAUGE GROUND	106	D-2	A-6	B-5	CHARGE LIGHT (For ECE)
27	B-2	C-4	C-5	HEATER RESISTOR	107	D-2	—	D-3	CHOKE CONTROL (Ex. ECE)
28	C-4	D-1	D-1	HORN, LH	108	B-4	A-6	B-5	CHOKE CONTROL (For ECE)
29	C-4	A-1	A-1	HORN, RH	109	B-6	A-7	B-5	CHOKE CONTROL (For ECE with IC Regulator)
30	C-2	—	C-3	IDLE-UP V.S.V. (For RHD)	110	B-4	D-5	—	DEFOGGER
31	B-2	A-3	A-3	IGNITION COIL	111	B-4	—	B-4	DIMMER
32	D-6	B-3	B-4	LIGHTS:	112	B-6	A-6	B-5	FLASHER (For LHD)
33	D-4	C-7	B-8	A/T INDICATOR	113	B-5	A-6	—	FLASHER (For RHD)
34	D-4	C-8	D-8	BACK-UP, LH (For Coupe)	114	B-2	A-5	D-5	HEADLIGHT
35	D-4	A-7	D-7	BACK-UP, LH (For Liftback)	115	D-2	C-5	B-4	HEADLIGHT CLEANER
36	D-4	A-8	B-8	BACK-UP, RH (For Coupe)	116	B-6	A-6	—	HEATER
37	C-3	C-3	B-3	BACK-UP, RH (For Liftback)	117	B-6	—	B-5	INTERIOR LIGHT CONTROL
38	B-3	B-6	D-6	BRAKE WARNING	118	B-5	A-6	B-5	TAIL LIGHT (For LHD)
39	C-3	C-3	B-3	BRAKE WARNING	119	C-6	C-3	B-4	TAIL LIGHT (For RHD)
40	D-6	C-6	C-7	CHARGE WARNING	120	C-8	C-4	D-5	WINDSHIELD WIPER (Intermittent)
41	C-5	D-1	D-1	CIGARETTE LIGHTER	121	C-8	B-4	A-5	RHEOSTAT
42	C-6	A-1	A-1	CLEARANCE, LH	122	C-8	B-4	A-5	SPEAKER, LH
43	D-6	D-7	D-7	CLEARANCE, RH	123	D-2	B-6	D-6	SPEAKER, RH
44	D-8	A-8	A-8	CLOCK	124	B-8	B-6	C-7	SPEED SENSOR (For Coupe)
45	D-8	C-5	C-6	DOOR COURTESY, LH	125	B-2	C-6	B-6	STEREO
46	D-8	B-5	B-4	DOOR COURTESY, RH	126	D-4	A-2	A-3	SWITCHES:
47	D-7	—	B-7	FOG, REAR (For Coupe) (For RHD)	127	C-3	—	A-4	A/C
48	D-7	—	C-8	FOG, REAR (For Liftback) (For RHD)	128	C-3	D-4	—	ANTENNA MOTOR
49	C-3	—	—	FUEL WARNING	129	C-3	C-3	B-7	BACK-UP LIGHT
50	D-6	B-6	C-6	GAUGE	130	D-8	B-8	C-8	BRAKE WARNING LIGHT (For Australia)
51	C-6	B-5	C-6	GLOVE BOX	131	B-4	D-6	B-6	BRAKE WARNING LIGHT (For Sweden)
52	B-7	C-1	C-1	HEAD, LH	132	D-3	A-3	B-2	CHARGE WARNING LIGHT (For Liftback)
53	B-7	B-1	B-1	HEAD, RH	133	D-3	A-3	B-2	CHARGE WARNING LIGHT (For Liftback)
54	D-6	C-6	D-7	HEATER CONTROL	134	B-7	D-6	D-5	CHARGE WARNING LIGHT (For Liftback)
55	D-7	C-3	B-3	HIGH BEAM INDICATOR	135	D-8	D-5	B-4	CHARGE WARNING LIGHT (For Liftback)
56	C-6	A-4	C-4	INSPECTION (For 2T & 18R-G)	136	D-8	B-7	D-5	CHARGE WARNING LIGHT (For Liftback)
57	D-8	B-3	D-5	INTERIOR	137	D-8	A-5	B-6	CHARGE WARNING LIGHT (For Liftback)
58	C-6	B-8	B-7	LICENSE PLATE (For Coupe)	138	D-7	—	D-6	CHARGE WARNING LIGHT (For Liftback)
59	C-6	B-8	C-8	LICENSE PLATE (For Liftback)	139	C-3	B-7	B-7	CHARGE WARNING LIGHT (For Liftback)
60	C-6	C-6	C-6	METER	140	C-3	B-8	C-8	CHARGE WARNING LIGHT (For Liftback)
61	C-3	—	B-3	P.K.B. WARNING (Ex. ECE)	141	C-6	B-5	C-5	CHARGE WARNING LIGHT (For Liftback)
62	C-4	B-3	—	RED INDICATOR (For Germany & France)	142	B-4	D-7	D-5	CHARGE WARNING LIGHT (For Liftback)
63	D-4	C-7	D-7	STOP, LH (For Coupe)	143	C-3	C-7	D-7	CHARGE WARNING LIGHT (For Liftback)
64	D-4	C-8	D-8	STOP, LH (For Liftback)	144	D-4	D-6	D-6	CHARGE WARNING LIGHT (For Liftback)
65	D-4	A-7	B-8	STOP, RH (For Coupe)	145	A-1	D-6	C-6	CHARGE WARNING LIGHT (For Liftback)
66	D-4	A-8	B-8	STOP, RH (For Liftback)	146	C-6	D-4	C-4	CHARGE WARNING LIGHT (For Liftback)
67	C-5	C-7	D-7	TAIL, LH (For Coupe)	147	D-8	B-3	D-5	CHARGE WARNING LIGHT (For Liftback)
68	C-5	C-8	D-8	TAIL, LH (For Liftback)	148	B-6	D-6	D-6	CHARGE WARNING LIGHT (For Liftback)
69	C-6	A-7	B-8	TAIL, RH (For Coupe)	149	B-2	C-4	C-6	CHARGE WARNING LIGHT (For Liftback)
70	C-6	A-8	B-8	TAIL, RH (For Liftback)	150	B-1	A-2	A-2	CHARGE WARNING LIGHT (For Liftback)
71	C-4	C-1	D-1	TURN SIGNAL, FRONT, LH	151	D-3	B-3	C-4	CHARGE WARNING LIGHT (For Liftback)
72	C-5	B-1	B-1	TURN SIGNAL, FRONT, RH	152	C-3	—	C-4	CHARGE WARNING LIGHT (For Liftback)
73	D-4	C-6	C-6	TURN SIGNAL, INDICATOR, LH	153	D-4	D-6	B-4	CHARGE WARNING LIGHT (For Liftback)
74	D-5	C-6	C-6	TURN SIGNAL, INDICATOR, RH	154	B-4	D-6	D-6	CHARGE WARNING LIGHT (For Liftback)
75	D-4	C-7	D-7	TURN SIGNAL, REAR, LH (For Coupe)	155	B-5	D-6	D-5	CHARGE WARNING LIGHT (For Liftback)
76	D-4	C-8	D-8	TURN SIGNAL, REAR, LH (For Liftback)	156	B-5	D-6	D-5	CHARGE WARNING LIGHT (For Liftback)
77	D-5	A-7	B-8	TURN SIGNAL, REAR, RH (For Coupe)	157	C-5	C-6	D-7	CHARGE WARNING LIGHT (For Liftback)
78	D-5	A-8	B-8	TURN SIGNAL, REAR, RH (For Liftback)	158	C-5	C-6	D-7	CHARGE WARNING LIGHT (For Liftback)
79	D-4	D-1	D-1	TURN SIGNAL, SIDE, LH	159	B-3	C-6	C-6	TACHOMETER
80	D-5	A-1	A-1	TURN SIGNAL, SIDE, RH	160	B-3	A-6	C-7	VOLT METER
					161	D-3	B-3	B-3	V.S.V. (For 2T)
					162	D-3	D-3	C-3	V.S.V. (For 18R)
					163	B-3	B-6	C-6	WATER TEMP GAUGE
					164	B-3	C-2	D-2	WATER TEMP SENDER (For 2T)
					165	B-3	D-2	D-2	WATER TEMP SENDER (For 18R)
					166	B-3	B-2	B-2	WATER TEMP SENDER (For 18R-G)


DIAGRAMME DE CABLAGE ELECTRIQUE


Nombre	Référence sur le plan			COMPONENTS
	Fig. 1	Fig. 2	Fig. 3	
7	B-7	C-6	C-7	Allume-cigare
2	C-1	D-2	D-2	Alternateur
3	D-1	—	D-2	Alternateur (avec Amplificateur A)
1	B-2	C-5	C-5	Batterie 12V
6	B-1	C-2	C-3	Batterie 12V
31	B-2	A-3	A-3	Bobine allumage
122	D-2	B-6	D-6	Captur de vitesse
83	—	C-6	C-6	Compteur (+B)
160	B-3	A-6	C-7	Compteur voltm.
10	B-2	A-3	A-3	Condensateur
24	B-1	C-2	C-2	Connecteur fusible
8	B-4	B-7	—	Coupe-circuit (pc)
100	C-4	C-7	B-6	Dégivreur lunette
101	C-4	C-8	C-8	Dégivreur lunette
12	B-2	B-3	B-3	Distributeur (pour 2T)
13	B-2	A-3	B-2	Distributeur (pour 18R)
14	B-2	B-2	B-2	Distributeur (pour 18R-G)
97	B-3	B-3	A-3	Emission de pression
98	B-3	B-2	B-2	Emission de pression (pour 18R & 18R-G)
164	B-3	C-2	D-2	Emission de pression (pour 18R & 18R-G)
165	B-3	D-2	D-2	Emission de pression (pour 18R & 18R-G)
166	B-3	B-2	B-2	Emission de pression (pour 18R & 18R-G)
22	C-2	—	—	Fusible CHARGE
120	C-8	C-4	D-5	Haut-parleur, avant
121	C-8	B-4	A-5	Haut-parleur, avant
138	D-7	—	D-6	Interrupteurs:
124	B-2	C-6	B-6	Anti-brouillard
148	B-6	D-6	D-6	A/C (air conditionné)
149	B-2	C-4	C-5	Commande d'arrêt
145	A-1	D-6	C-6	Coupures basses
131	B-4	D-6	B-6	Dallumage
150	B-1	A-2	A-2	Dégivreur
130	D-3	A-2	B-2	Démarrage ne
132	D-3	A-3	B-2	Différentiel (p
147	D-8	B-3	D-5	Eclairage inté
136	D-8	B-7	D-5	Eclairage inté
137	D-8	A-5	B-6	Eclairage inté
158	C-5	C-6	D-7	Essuie-glace, a
156	B-5	D-6	D-5	Essuie-glace p
134	B-7	D-6	D-6	Gradateur
144	D-4	D-6	D-6	Klaxon
127	C-3	—	A-4	Lampe avertisse
128	C-3	D-4	—	Lampe avertisse
139	C-3	B-7	B-7	Lampe avertisse
140	C-3	B-8	C-8	Lampe avertisse
154	B-4	D-6	D-6	Lampe cligno
129	C-3	C-3	B-7	Lampe voyant
157	C-5	C-6	D-7	Lave-glace, ar
155	B-5	D-6	D-5	Lave-glace par
130	D-8	B-8	C-8	Lumière ambi
141	C-6	B-5	C-5	(pour Liftba
153	D-4	D-6	B-4	Lumière boîte
125	B-7	C-6	D-7	Lumière d'arr
143	C-3	C-7	D-7	Moteur anten
135	D-8	D-5	B-4	Moteur ventil
126	D-4	A-2	A-3	Porte
146	C-6	D-4	C-4	Projecteur arr
151	D-3	B-3	C-4	Raladeuse (p
152	C-3	—	C-4	Voyant avertis
142	B-4	D-7	D-5	Voyant avertis
25	—	B-6	C-6	Voyant détres
19	C-3	B-6	C-6	Jauge (+B)
163	B-3	B-6	C-6	Jauge d'essenc
28	C-4	D-1	D-1	Jauge temp eau
29	C-4	A-1	A-1	Klaxon, LH
40	D-6	C-6	C-7	Lampes:
47	D-7	—	B-7	Allume-cigare
48	D-7	—	C-8	Anti-brouillan
37	C-3	C-3	B-3	(pour RHD)
49	C-3	—	—	Anti-brouillan
51	C-6	B-5	C-6	(pour RHD)
75	D-4	C-7	D-7	Avertisseur d'
76	D-4	C-8	D-8	Avertisseur d'
77	D-5	A-7	B-8	Boîte à gants
78	D-5	A-8	B-8	Clignotant, ar
71	C-4	C-1	D-1	Clignotant, ar
72	C-5	B-1	B-1	Clignotant, av
79	D-4	D-1	D-1	Clignotant, lat
80	D-5	A-1	A-1	Clignotant, lat
73	D-4	C-6	C-6	Clignotant, vo
74	D-5	C-6	C-6	Clignotant, vo
60	C-6	C-6	C-6	Clignotant, vo
54	D-6	C-6	D-7	Combiné de co
57	D-8	B-3	D-5	Commande de
45	D-8	C-5	C-6	Eclairage inté
				Eclairage inté

CELICA ELECTRICAL WIRING DIAGRAM — 1980 PRODU

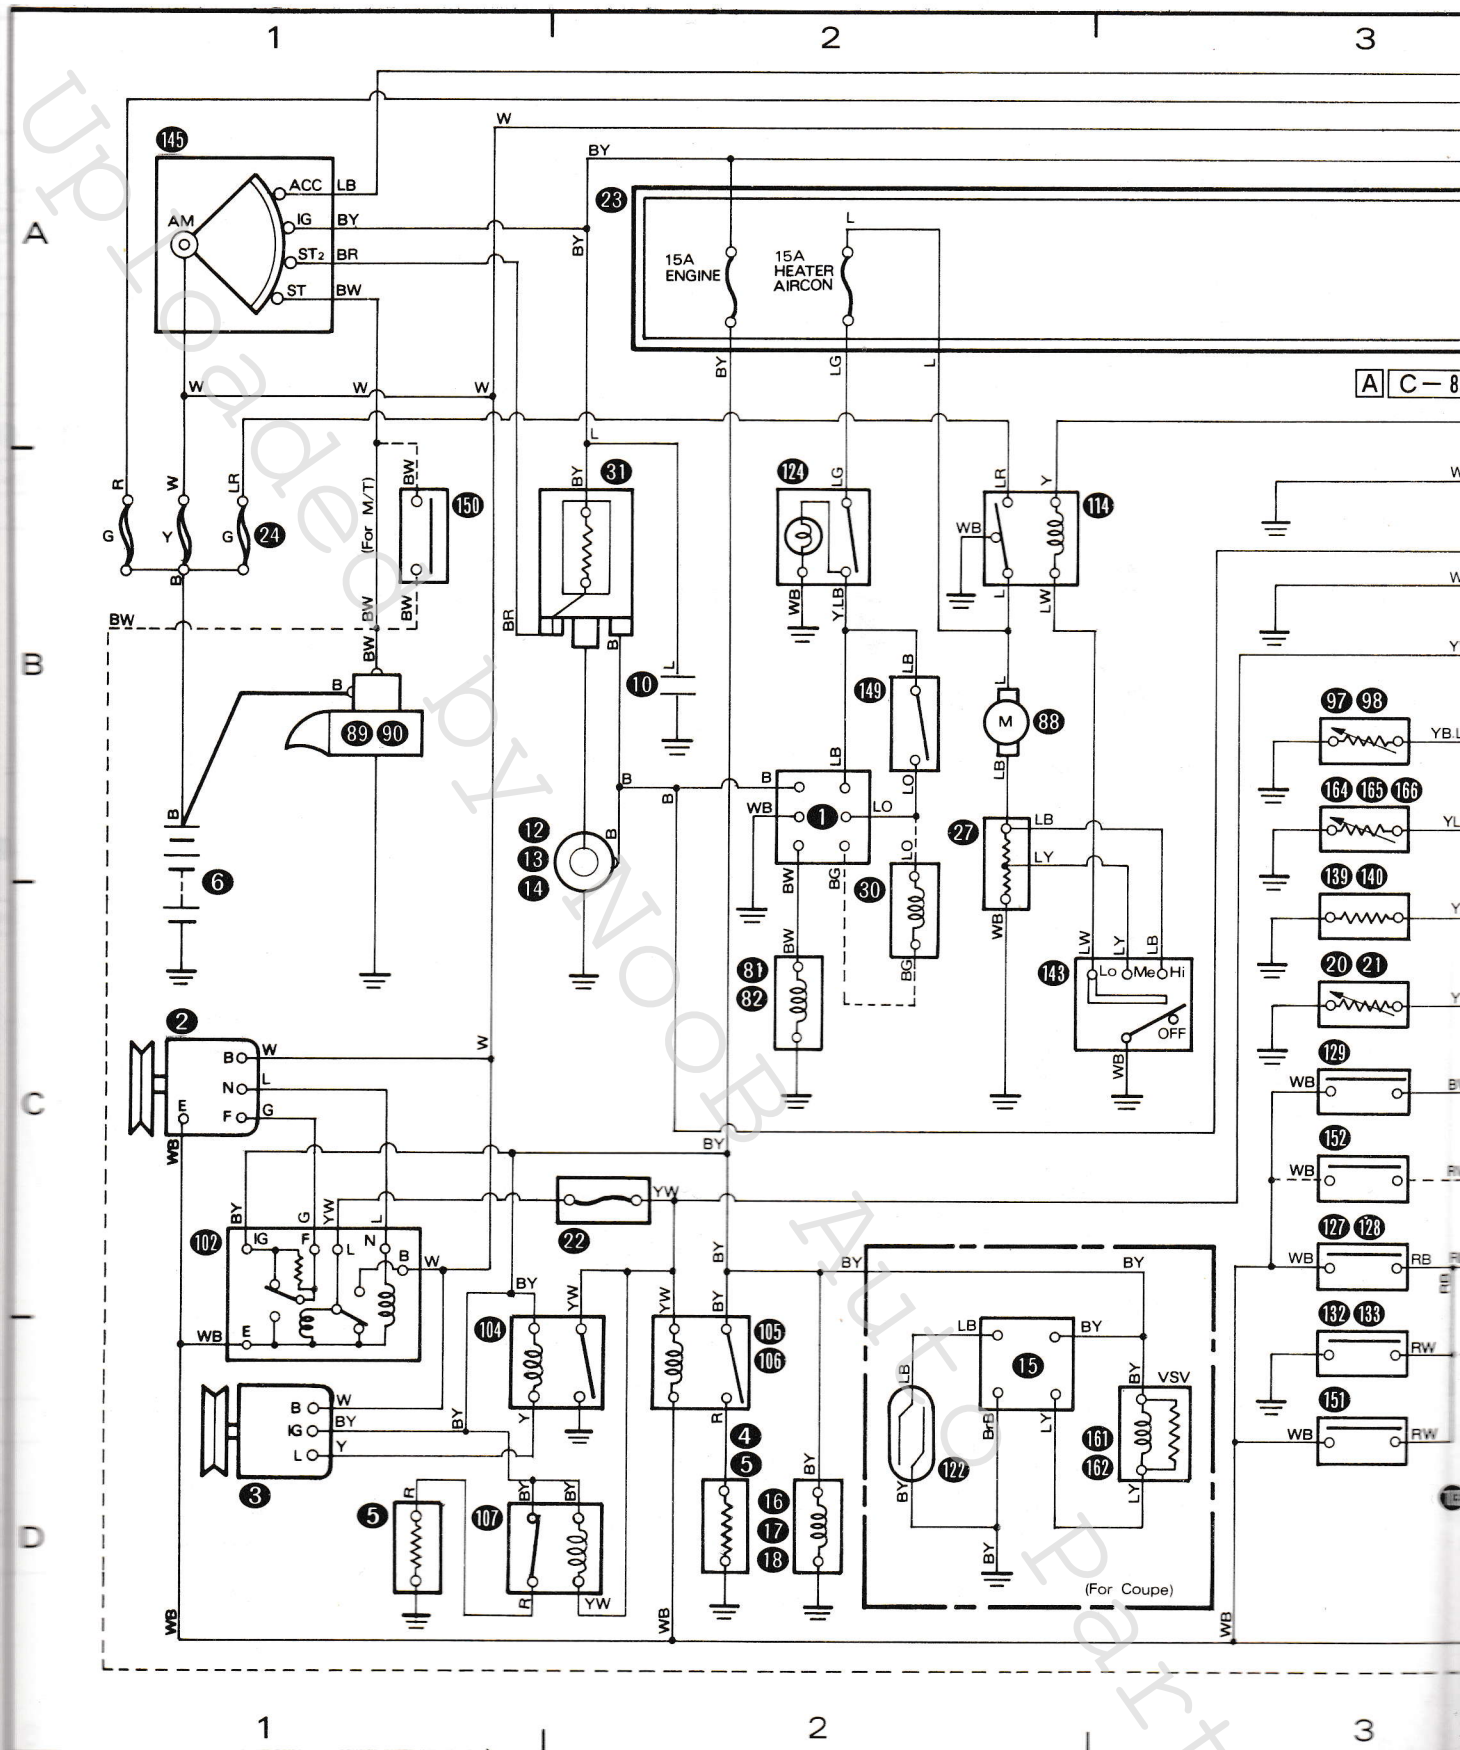


RODUCTION VEHICLE

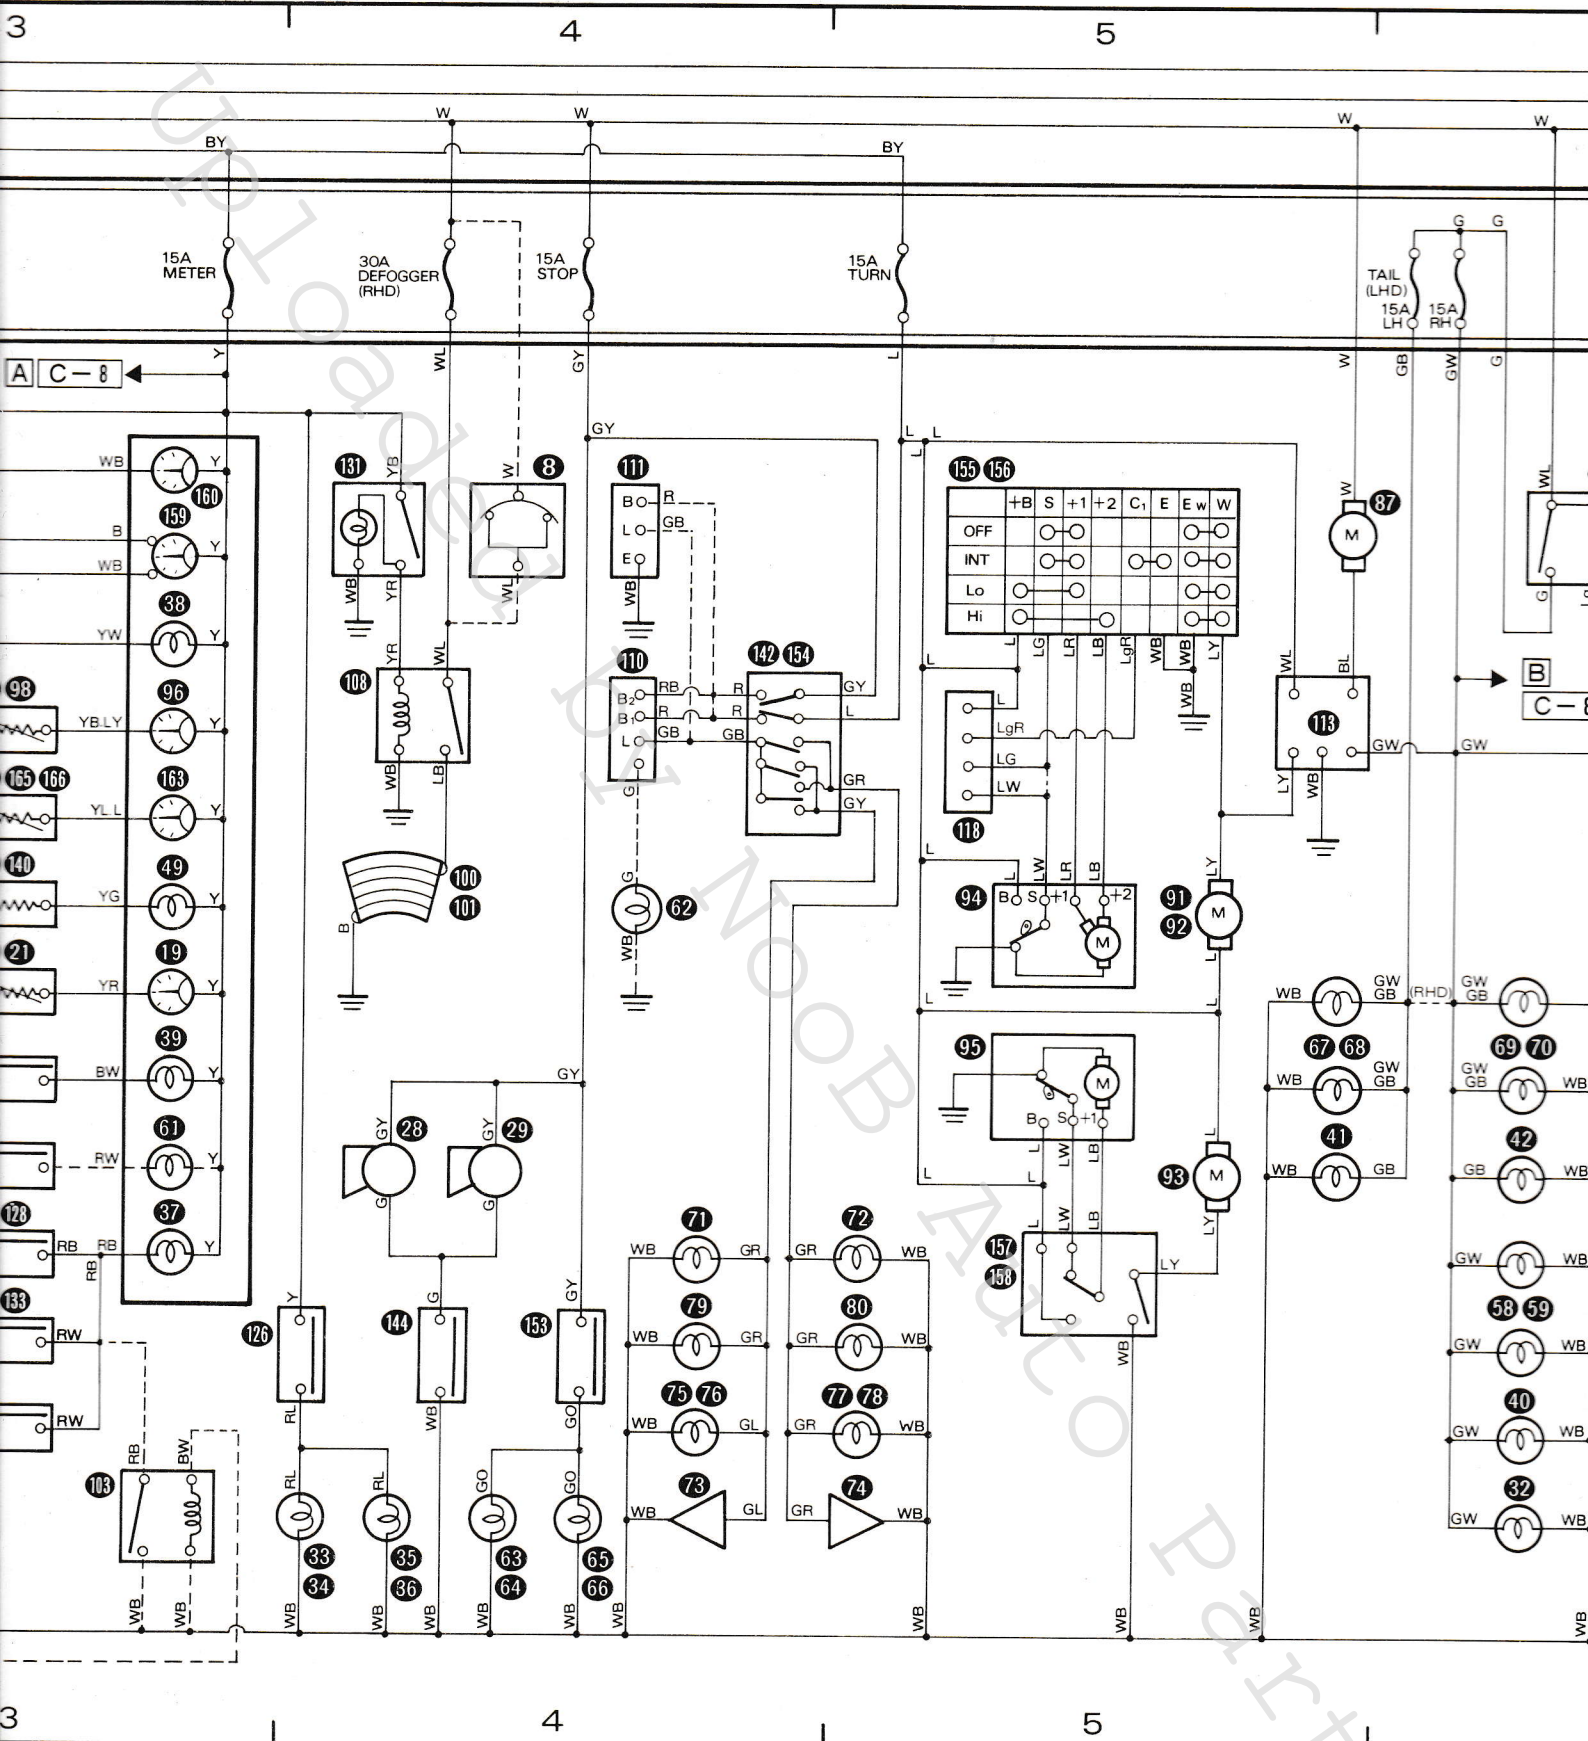


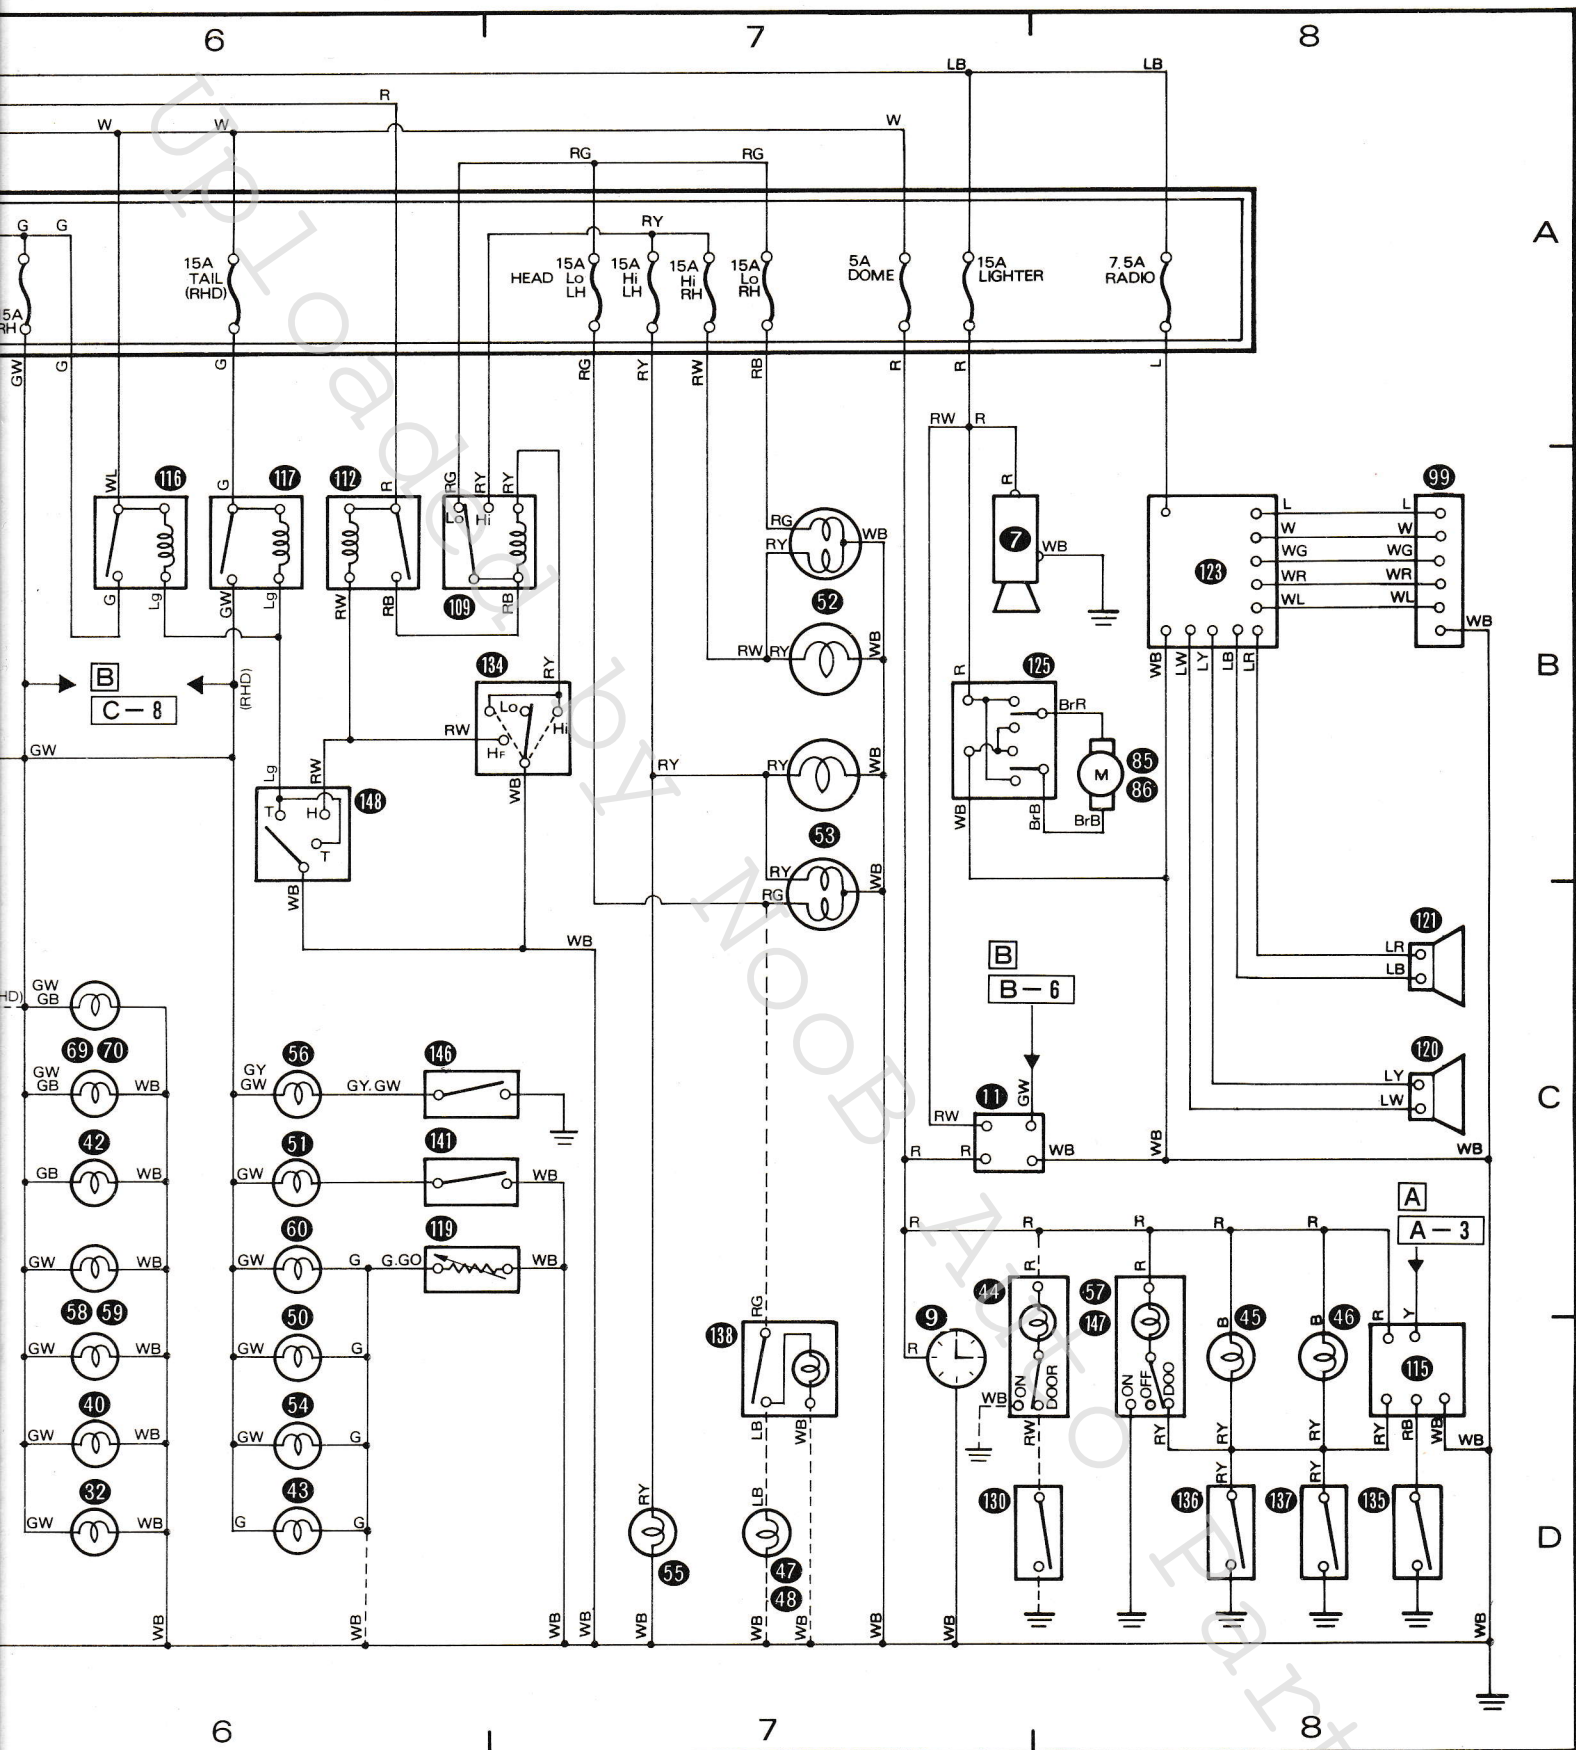


LHD, CELICA ELECTRICAL WIRING HARNESS — 1980 P

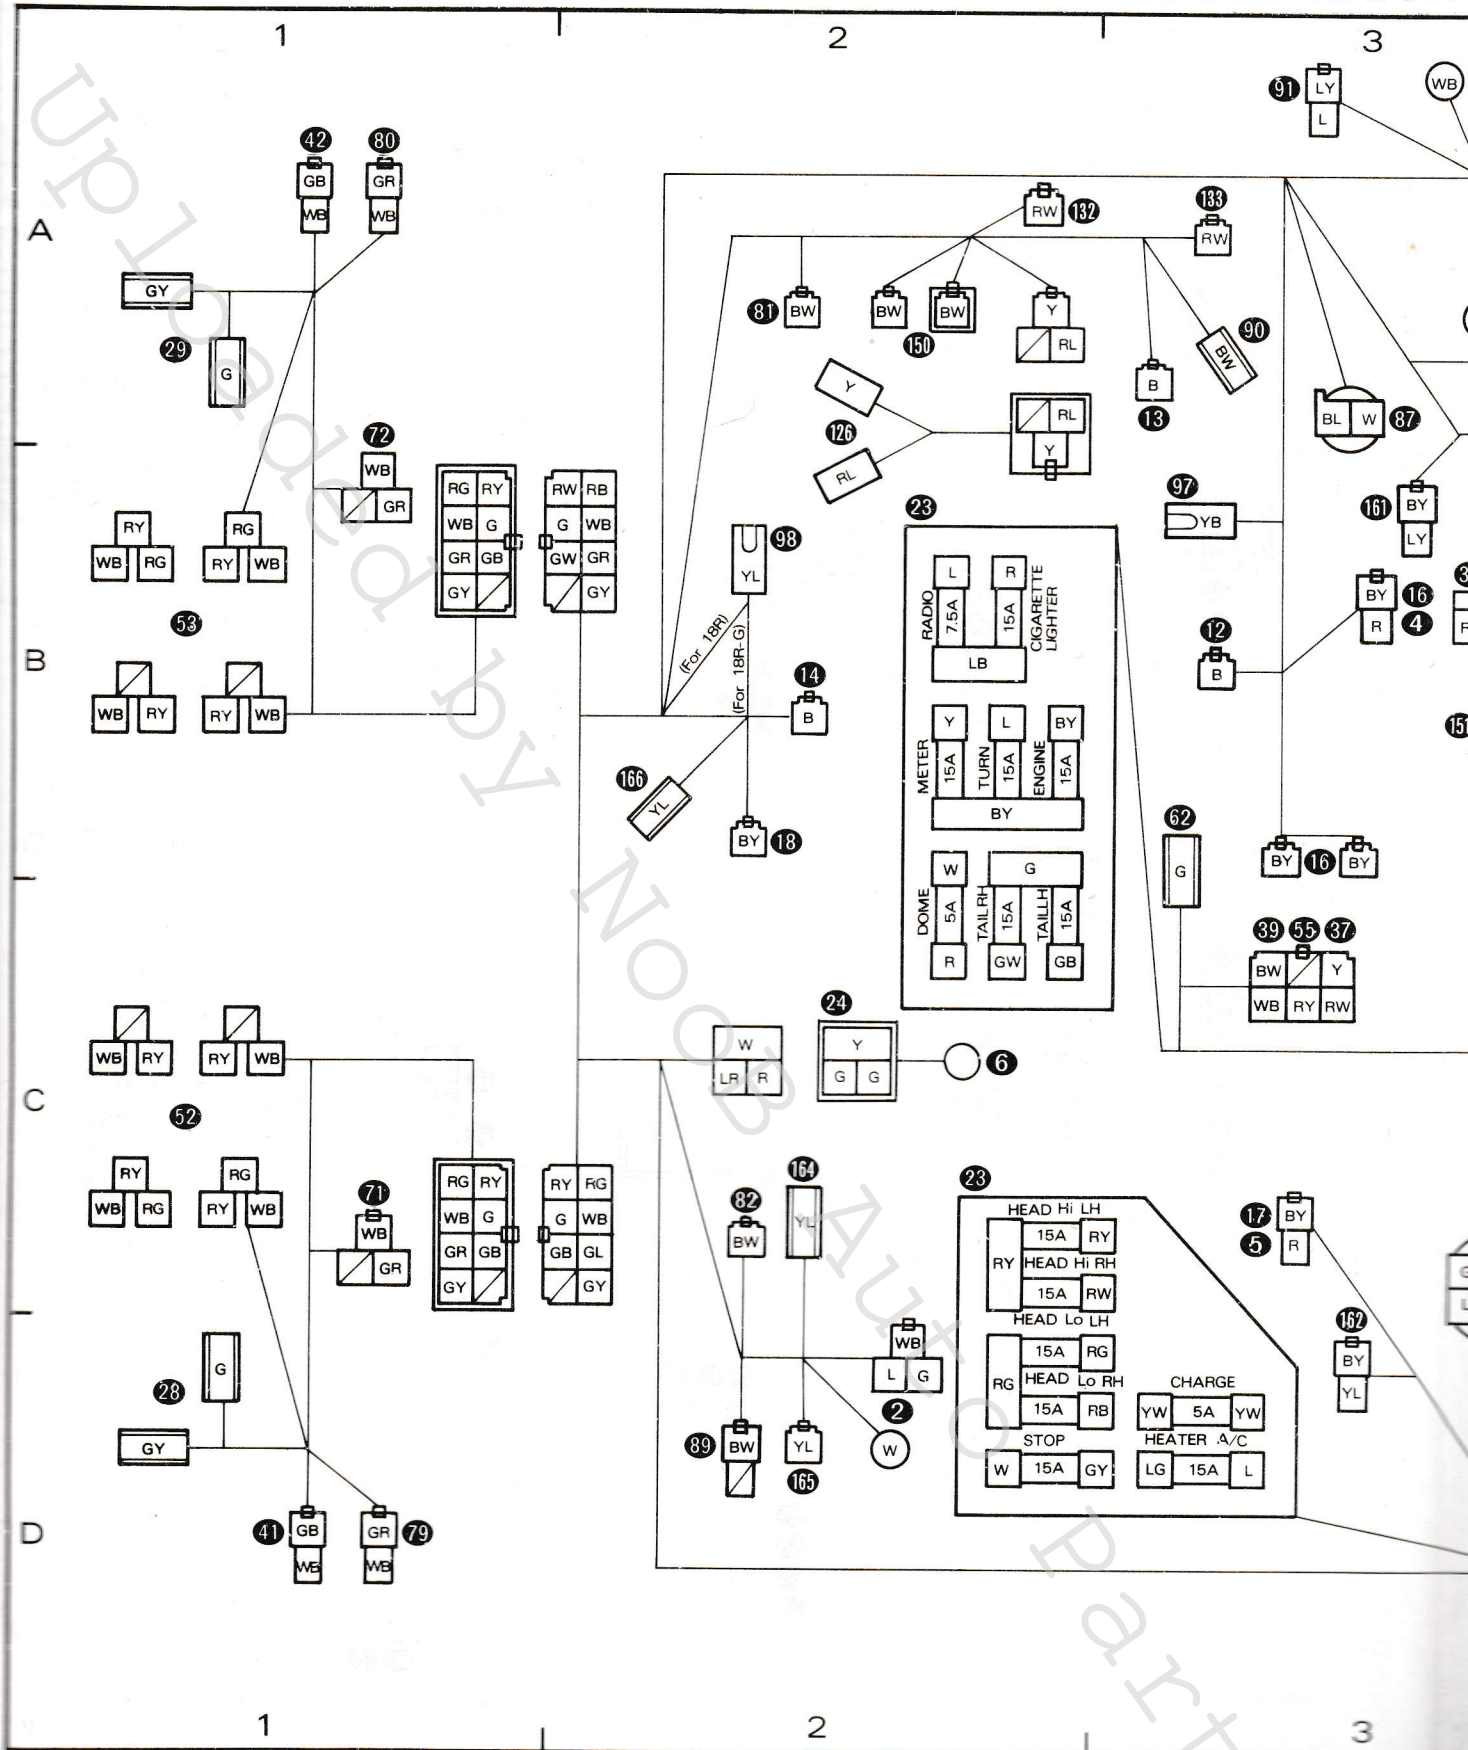


80 PRODUCTION VEHICLE

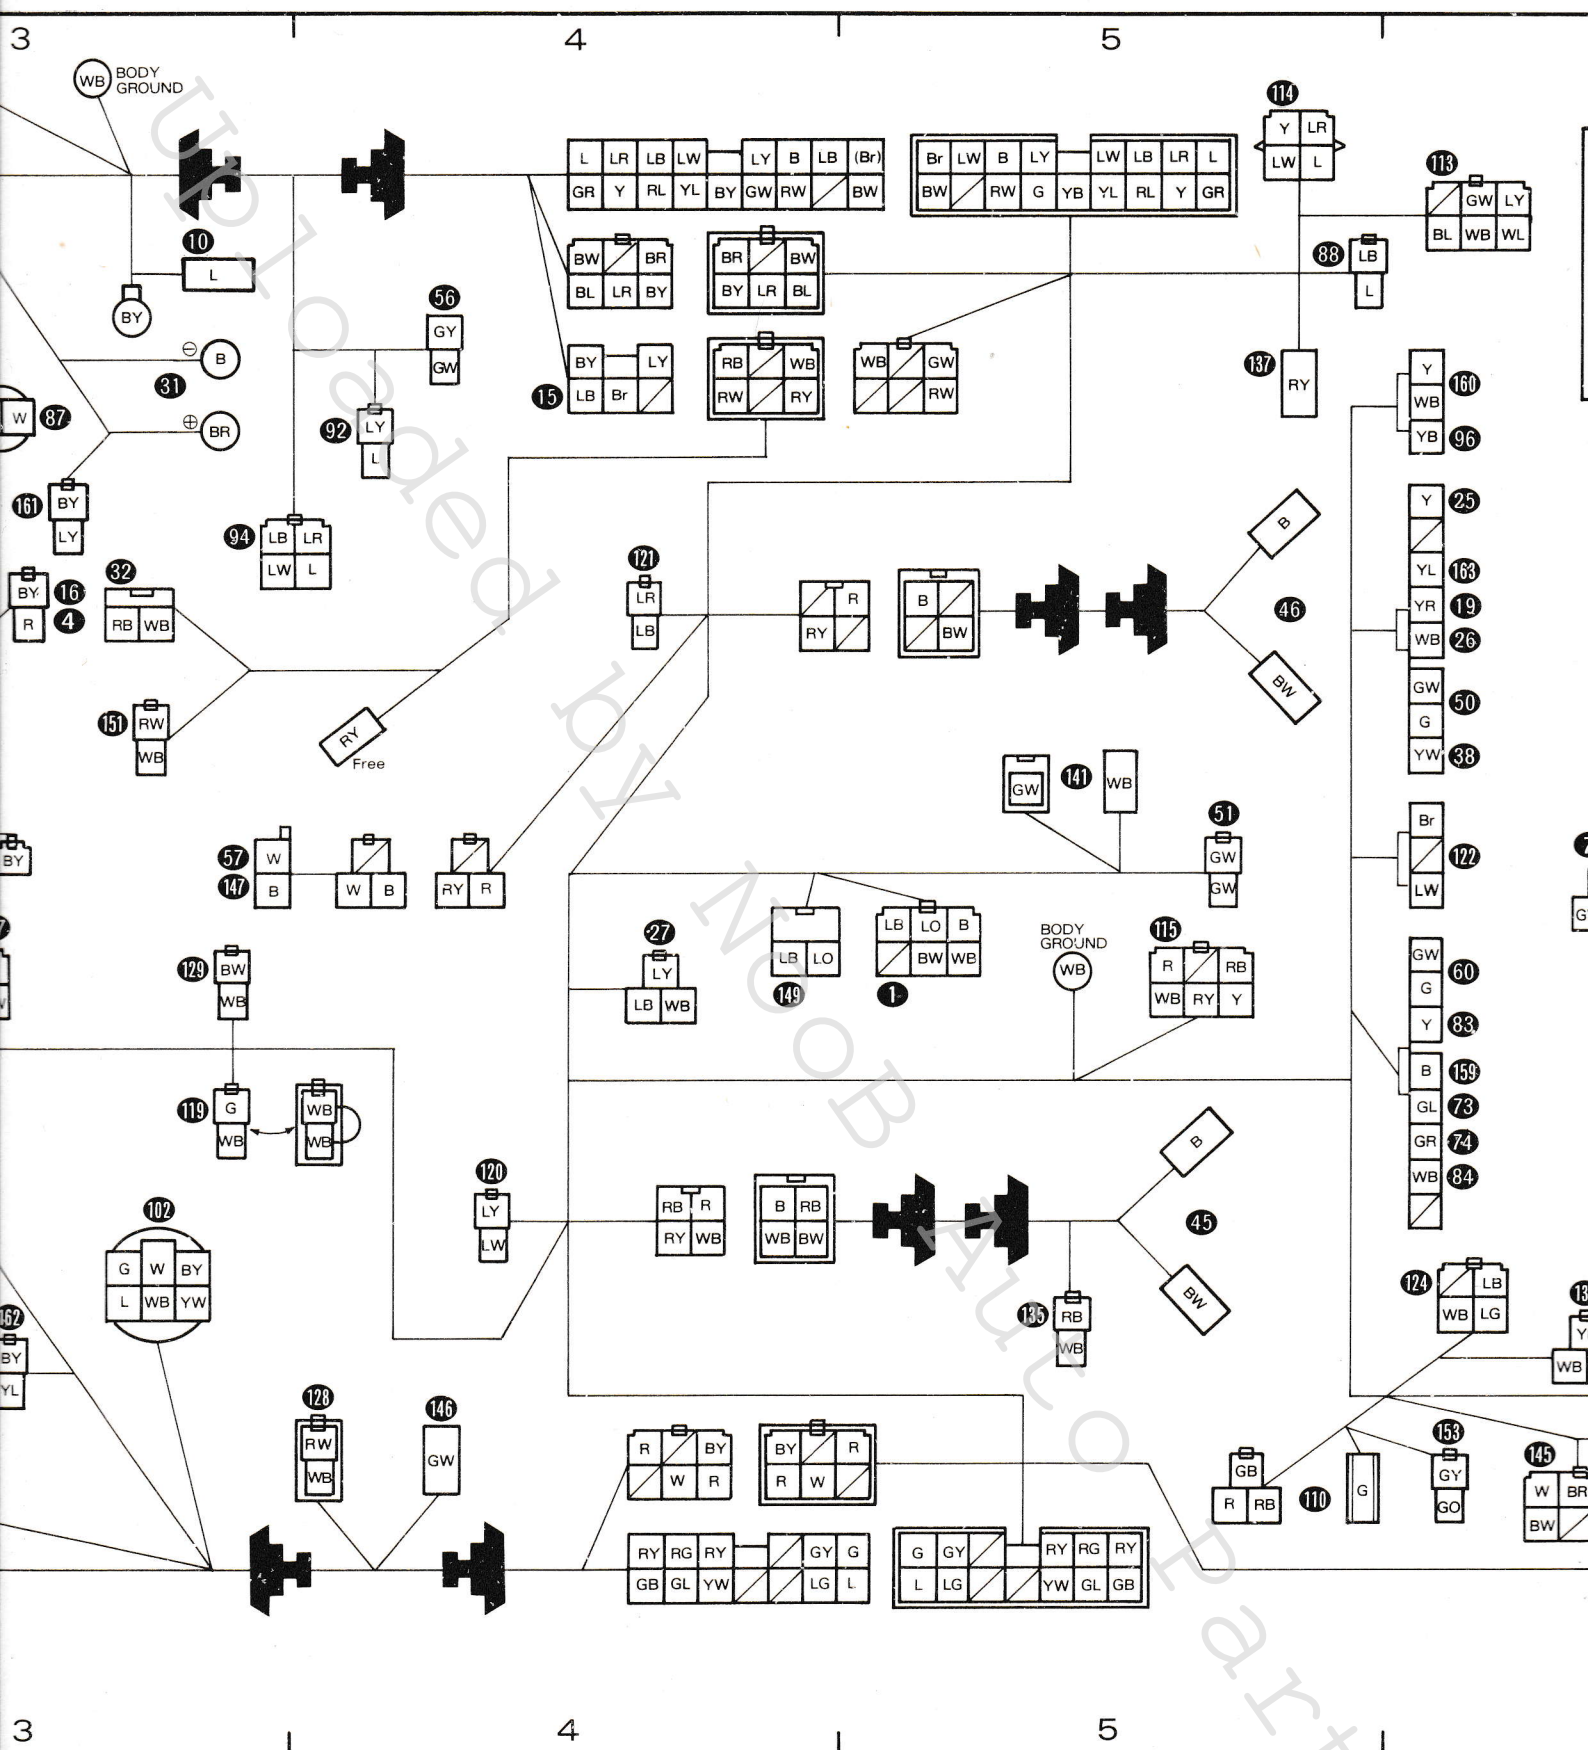


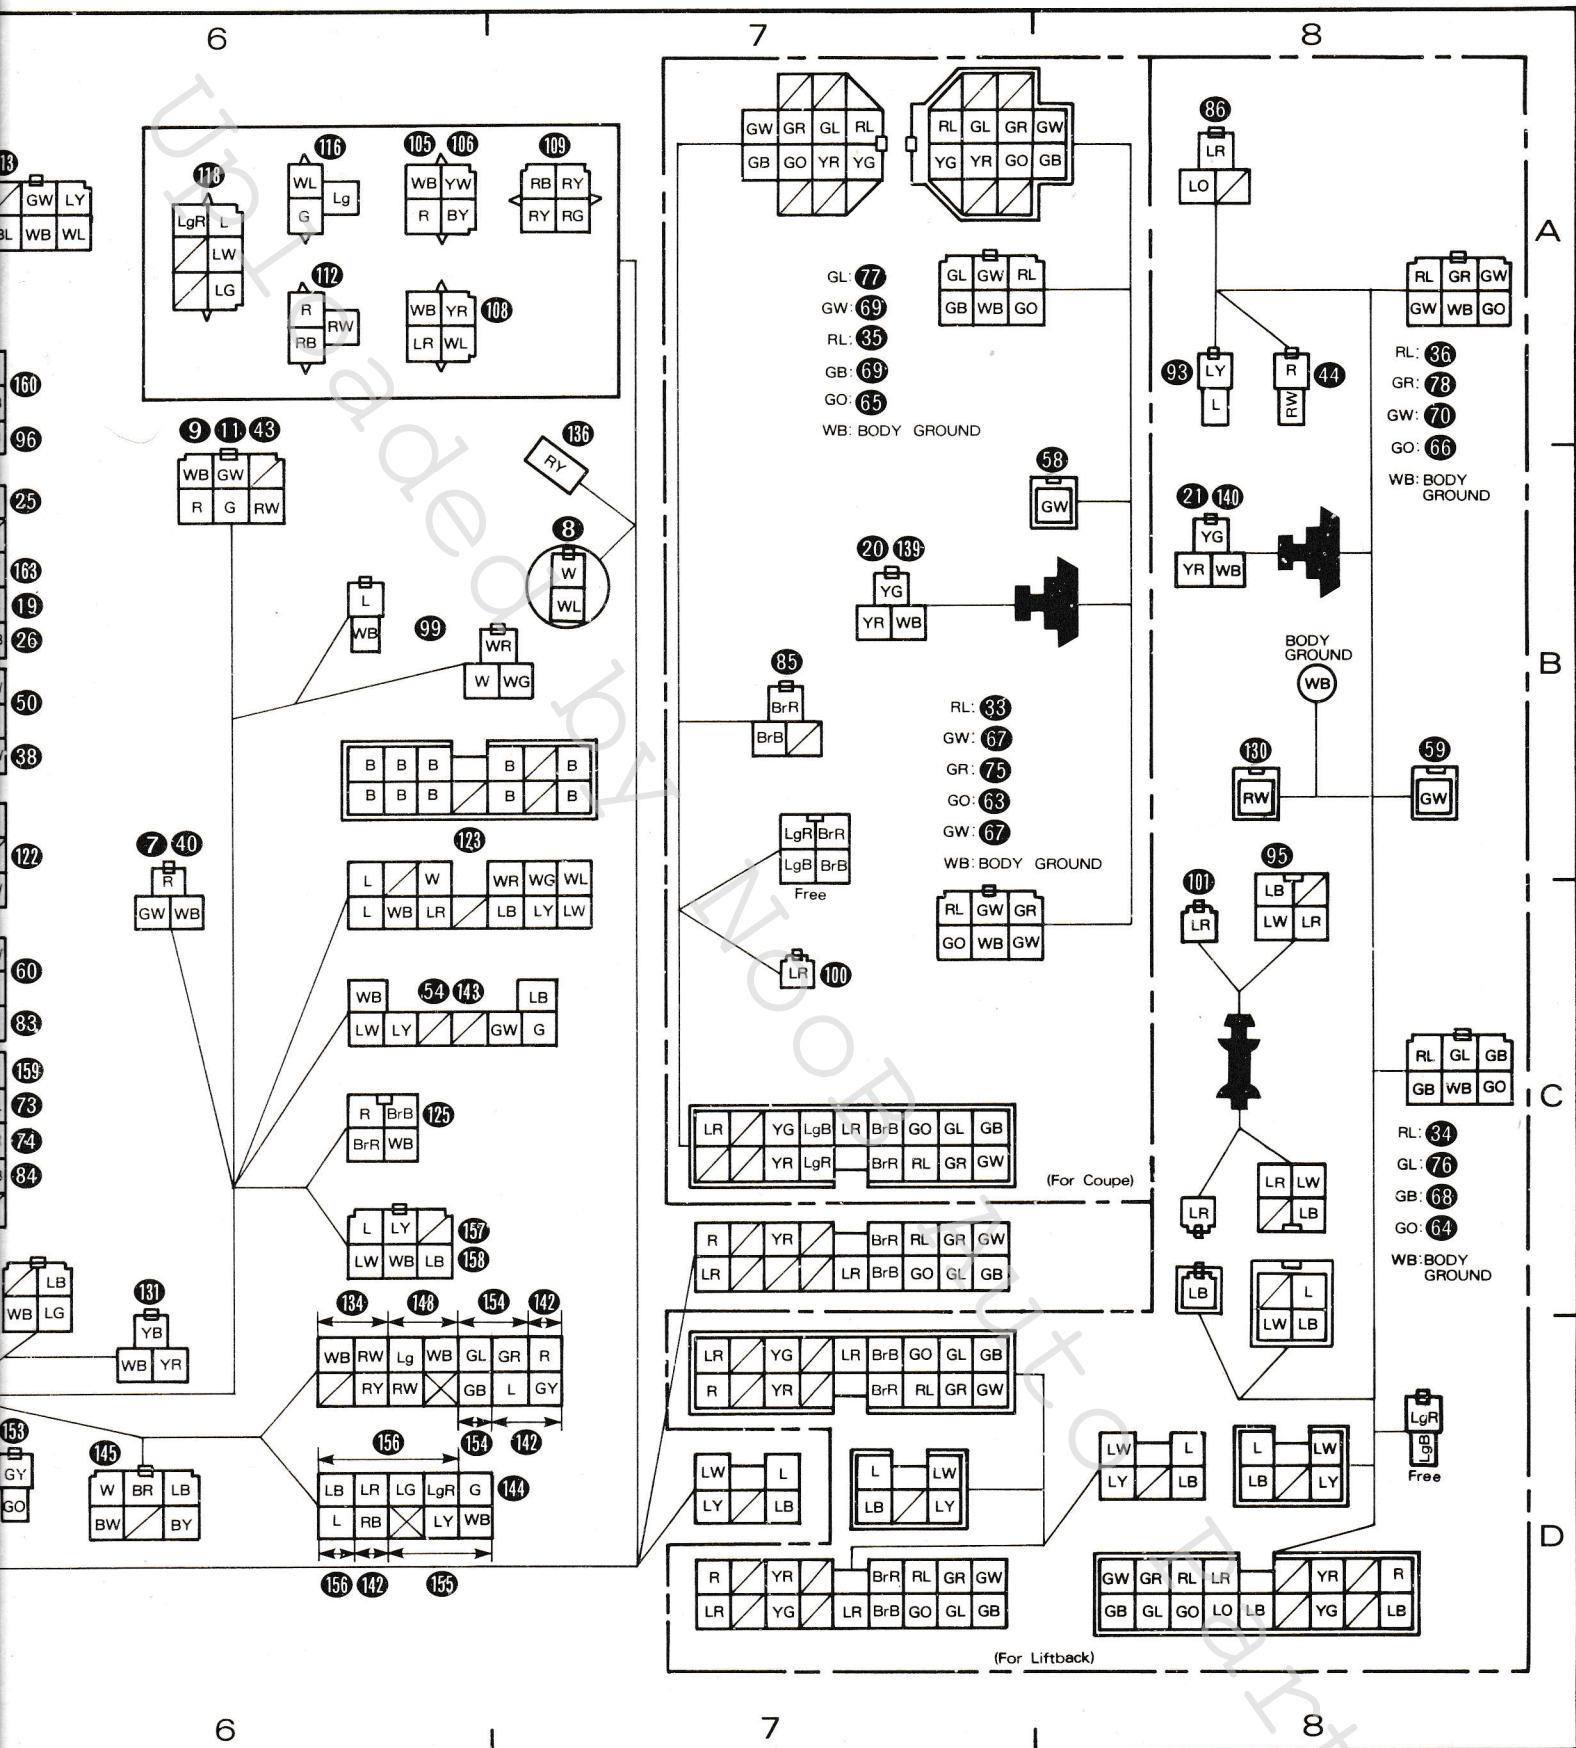


RHD, CELICA ELECTRICAL WIRING HARNESS — 1980 PR

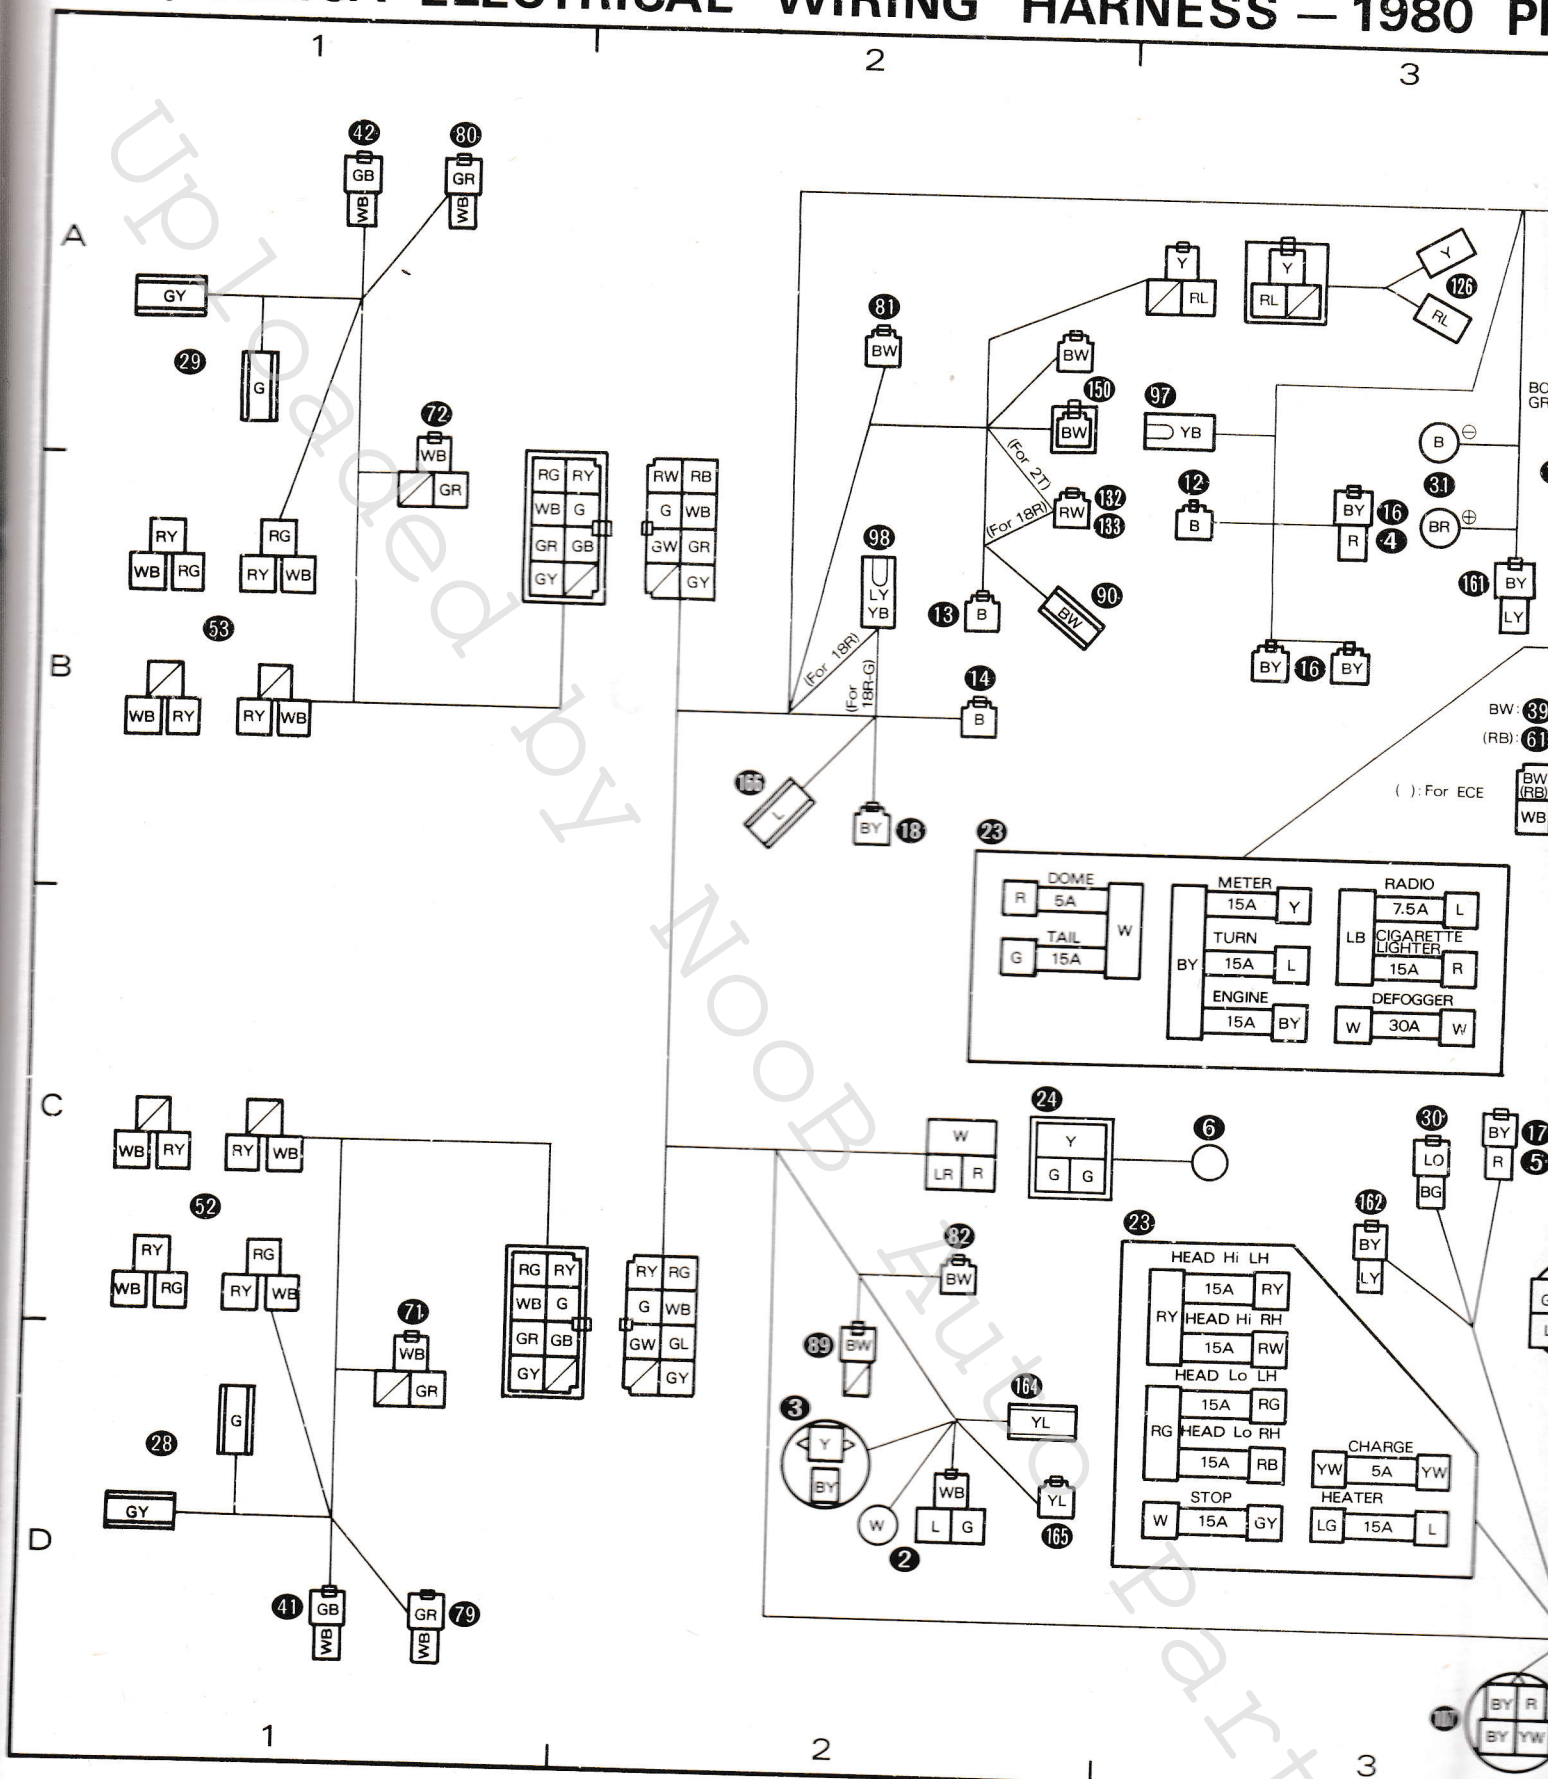

0 PRODUCTION VEHICLE

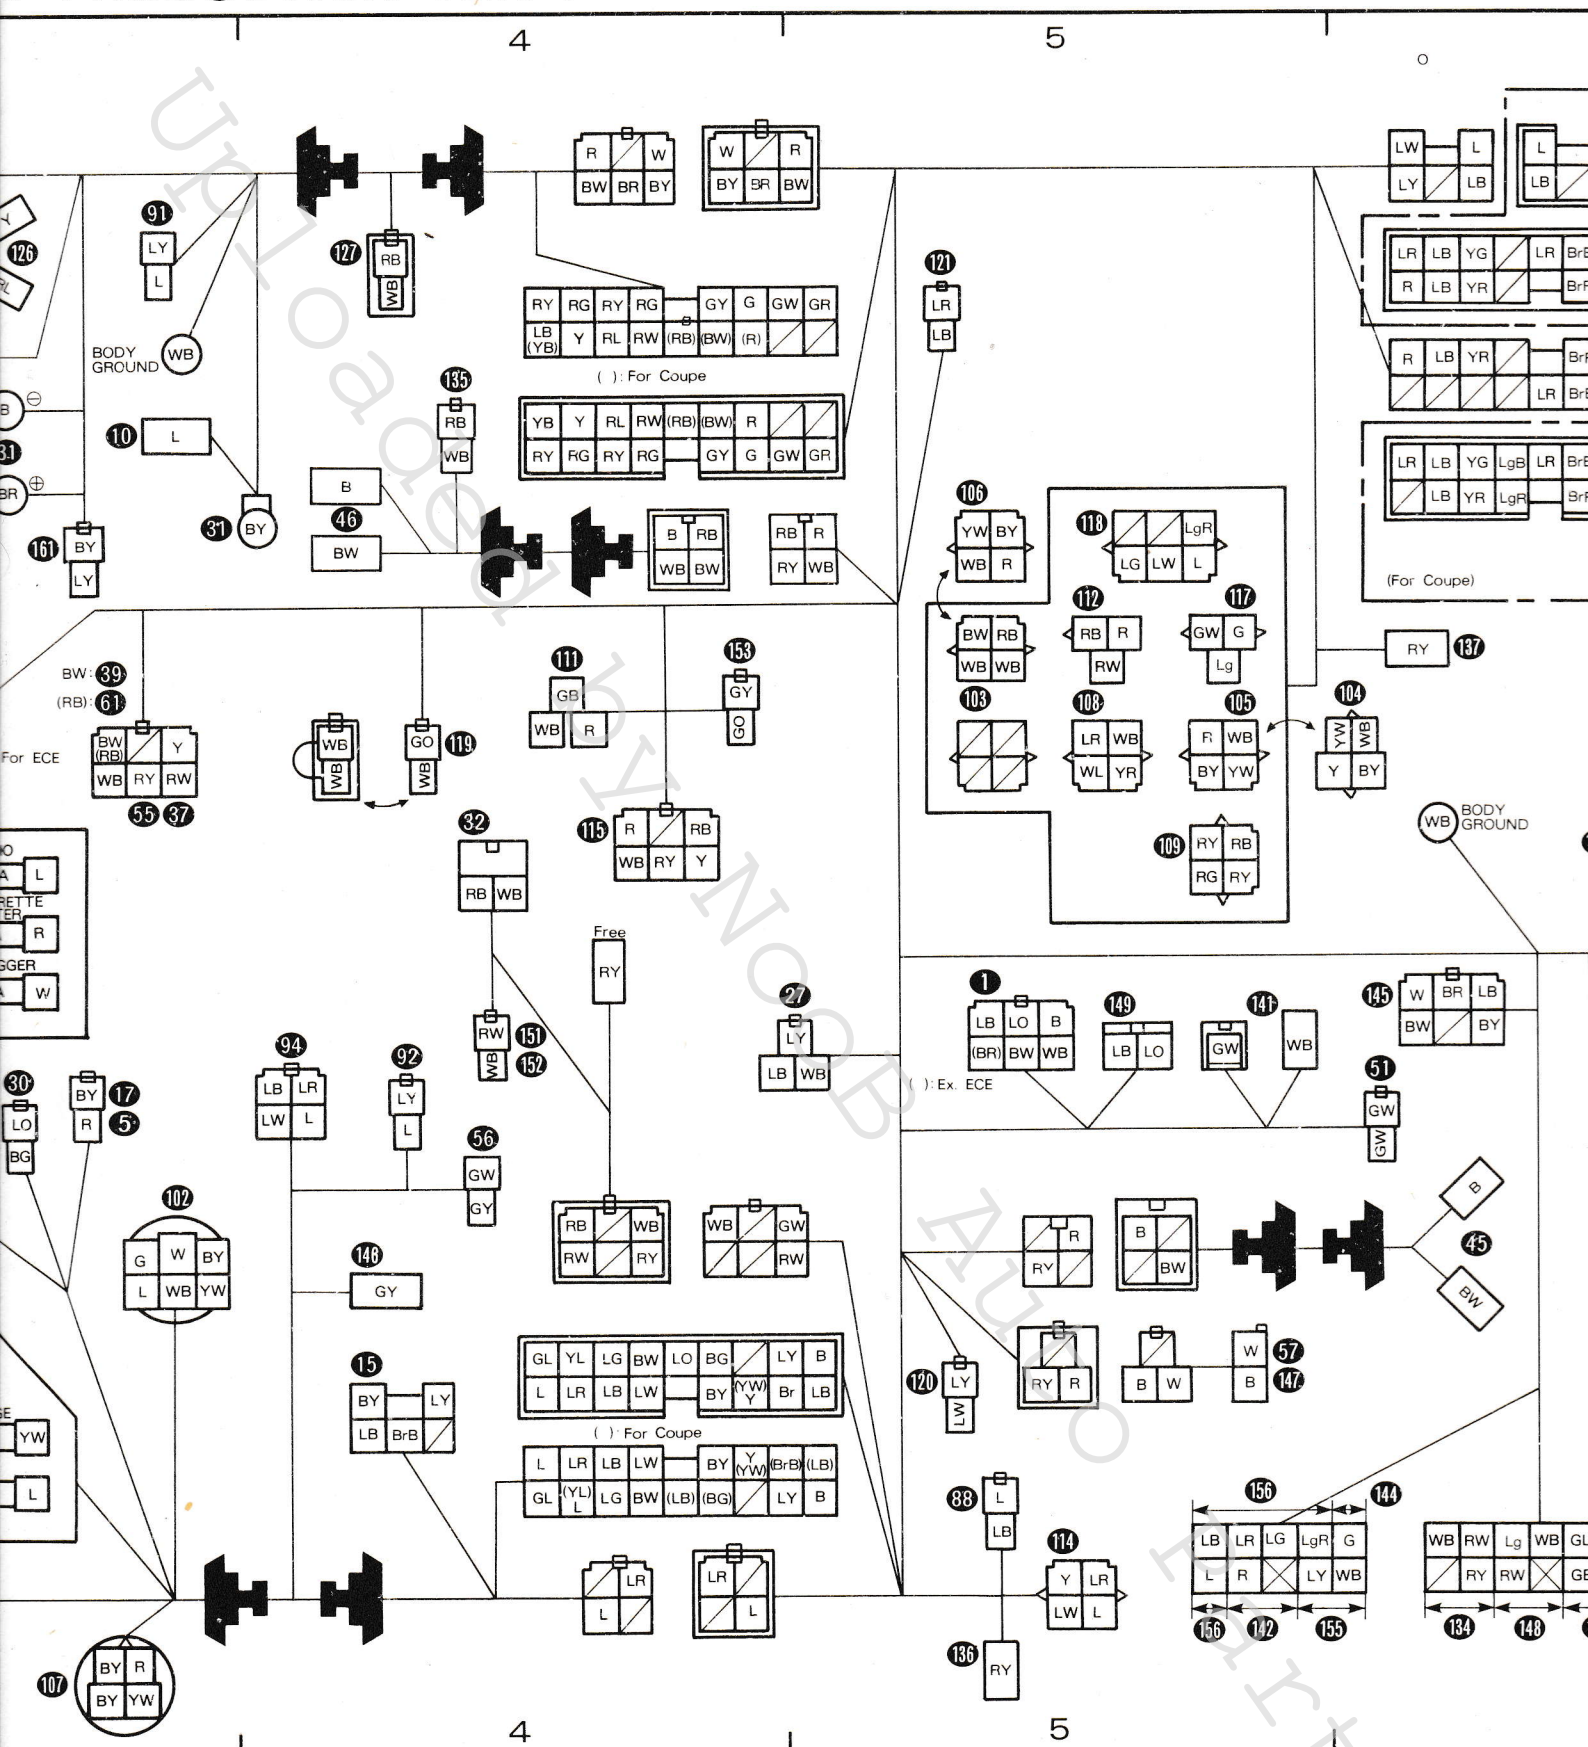

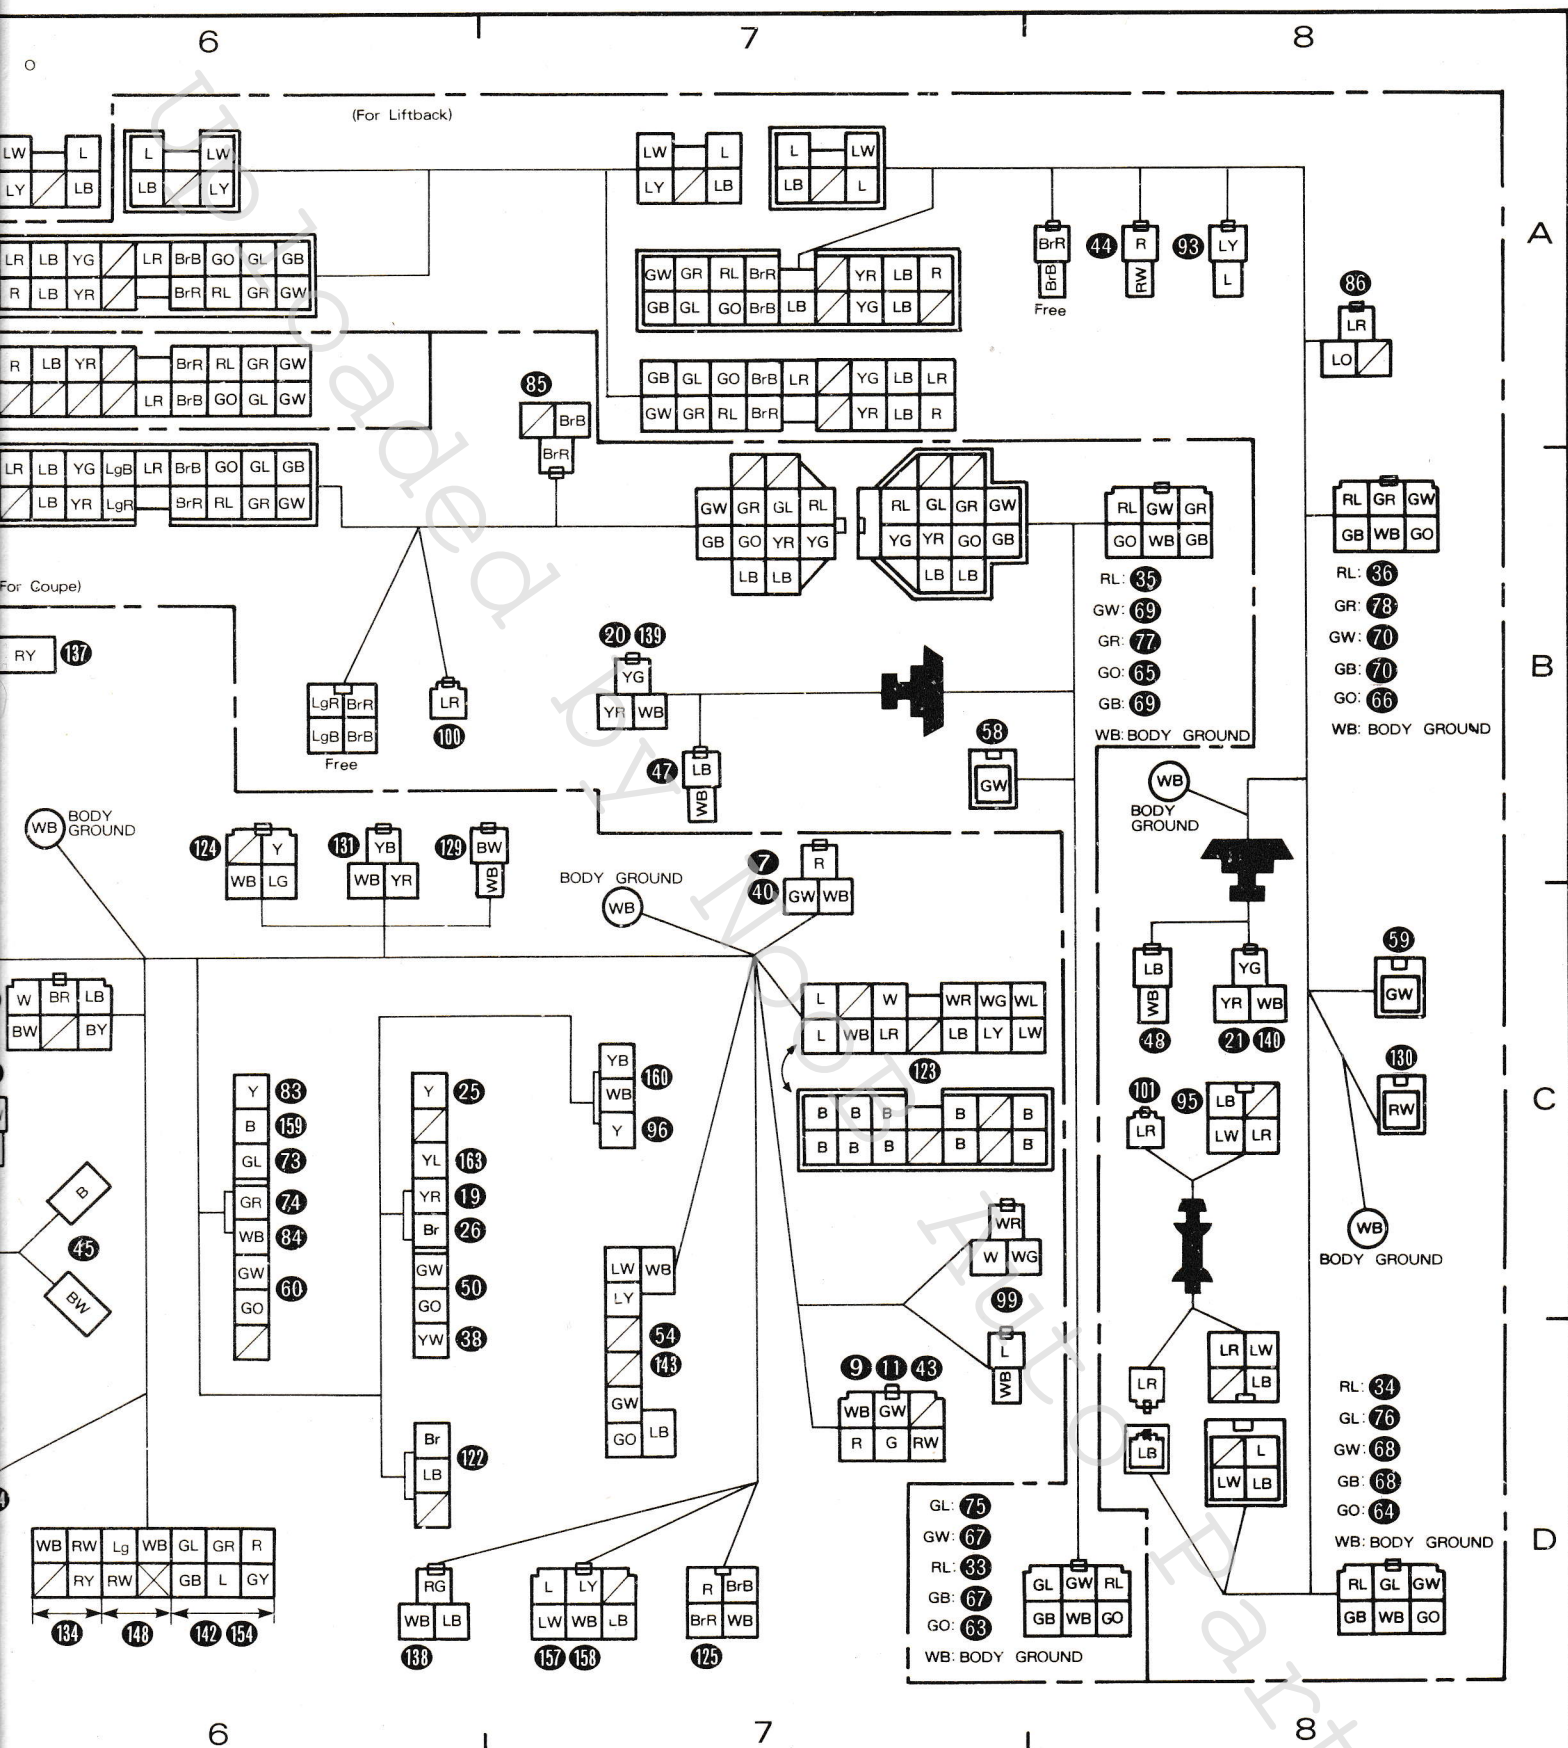

CORONA

INDEX


CORONA ELECTRICAL WIRING DIAGRAM - 1980 PRODUCTION VEHICLE

DIAGRAMME DE CABLAGE ELECTRIQUE

NUMBER	GRID LOCATION	COMPONENTS	NUMBER	GRID LOCATION	COMPONENTS
1	C-2	A/C AMPLIFIER	75	C-4	TURN SIGNAL, REAR, RH
2	C-2	A/C COMPRESSOR	76	D-4	TURN SIGNAL, SIDE, LH
3	C-1	ALTERNATOR	77	C-4	TURN SIGNAL, SIDE, RH
4	D-1	ALTERNATOR (with IC Regulator)			
5	D-2	AUTOMATIC CHOKE			
6	B-1	BATTERY 12V	78	C-8	MOTORES:
7	B-8	CIGARETTE LIGHTER	79	B-5	ANTENNA
8	B-3	CIRCUIT BREAKER (For LHD)	80	B-3	HEADLIGHT CLEANER
9	B-8	CLOCK	81	B-1	HEATER BLOWER
10	B-1	CONDENSER	82	B-5	STARTER
			83	D-5	WASHER, FRONT
11	B-8	DIGITAL CLOCK	84	C-5	WASHER, REAR
12	B-1	(For Australia & ECE)	85	D-4	WIPER, FRONT
		DISTRIBUTOR			WIPER, REAR
13	D-3	EMISSION CONTROL COMPUTER	86	B-3	OIL PRESSURE GAUGE
		(For Australia)	87	B-3	OIL PRESSURE SENDER
14	D-2	FUEL CUT SOLENOID (For LHD)	88	B-8	RADIO
15	C-3	FUEL GAUGE	89	C-4	REAR WINDOW DEFOGGER
16	C-3	FUEL SENDER	90	C-1	REGULATOR
17	C-3	FUEL LEVEL SENDER			
18	C-1	FUSE CHARGE 5A	91	D-3	RELAYS:
19	A-2	FUSE BOX	92	D-1	BULB CHECK
20	B-1	FUSIBLE LINK	93	D-2	CHARGE LIGHT
			94	B-4	CHOKE CONTROL
21	B-3	HEATER RESISTOR	95	C-7	DEFOGGER
22	A-4	HORN	96	B-5	DIMMER (For ECE)
23	B-4	HORN (For ECE)	97	C-7	FLASHER
			98	B-5	HEADLIGHT (Ex. ECE)
24	C-2	IDLE-UP V.S.V.	99	B-2	HEADLIGHT CLEANER
25	B-2	IDLE-UP V.S.V. (Ex. ECE LHD)	100	C-8	HEATER
26	B-1	IGNITION COIL			LIGHT REMINDER
			101	B-2	(For Australia & ECE)
27	C-5	LIGHTS:	102	B-4	MAIN
28	C-6	A/T INDICATOR (For LHD)	103	D-8	RED INDICATOR LIGHT
29	D-3	A/T INDICATOR (For RHD)			ROOM RETAINER
30	D-4	BACK-UP, LH	104	B-5	(For Australia & ECE)
31	C-3	BACK-UP, RH	105	B-6	TAIL LIGHT (For LHD)
32	B-3	BRAKE WARNING	106	C-5	TAIL LIGHT (For RHD)
		(For Australia)	107	C-5	WINDSHIELD WIPER
33	C-5	CHARGE WARNING	108	D-5	(Intermittent)
		CIGARETTE LIGHTER	109	D-6	WIPER, REAR
		(For LHD)			
34	C-6	CIGARETTE LIGHTER	110	D-2	RHEOSTAT (For LHD) (For ECE)
		(For RHD)			RHEOSTAT (For RHD)
35	C-5	CLEARANCE, LH (For LHD)			(For Australia & ECE)
36	B-6	CLEARANCE, LH (For RHD)	111	D-2	SOLENOID VALVE
		(For Australia & ECE)	112	B-8	SPEAKER, FRONT, LH
37	B-5	CLEARANCE, RH (For LHD)	113	B-8	SPEAKER, FRONT, RH
38	B-6	CLEARANCE, RH (For RHD)	114	B-8	SPEAKER, REAR, LH
		(For Australia & ECE)	115	D-2	SPEAKER, REAR, RH
39	D-5	CLOCK (For LHD)	116	B-8	SPEED SENSOR (For Australia)
40	D-6	CLOCK (For RHD)			STEREO
41	C-8	DOOR INDICATOR			
42	B-6	FOG, REAR (For ECE)	117	B-2	SWITCHES:
43	C-3	FUEL WARNING	118	C-8	A/C
44	C-6	GAUGE (For Australia)	119	D-4	ANTENNA MOTOR
45	C-5	GLOVE BOX (For LHD)	120	C-3	BACK-UP LIGHT
46	C-6	GLOVE BOX (For RHD)			BRAKE FLUID LEVEL
47	C-7	HEAD, LH (Ex. ECE)	121	C-3	(Ex. Australia)
48	B-7	HEAD, LH (For ECE)			BRAKE FLUID LEVEL
49	C-7	HEAD, RH (Ex. ECE)	122	B-4	(For Australia)
50	B-7	HEAD, RH (For ECE)	123	D-7	DEFOGGER
51	D-5	HEATER CONTROL (For LHD)	124	C-7	DIMMER (Ex. ECE)
52	D-6	HEATER CONTROL (For RHD)	125	D-8	DIMMER (For ECE)
53	D-6	HIGH BEAM INDICATOR	126	D-8	DOOR COURTESY, LH
		(Ex. ECE)	127	B-6	DOOR COURTESY, RH
54	B-7	HIGH BEAM INDICATOR	128	D-5	FOG LIGHT, REAR (For ECE)
		(For ECE)	129	D-6	GLOVE BOX LIGHT (For LHD)
55	C-8	INTERIOR	130	B-4	GLOVE BOX LIGHT (For RHD)
56	B-5	LICENSE PLATE (For LHD)	131	C-3	HAZARD WARNING
57	C-6	LICENSE PLATE (For RHD)	132	B-4	HEATER BLOWER MOTOR
58	C-8	LUGGAUGE COMPARTMENT	133	A-1	HORN
59	D-5	METER (For LHD)	134	C-8	IGNITION
60	D-6	METER (For RHD)	135	D-7	INTERIOR LIGHT
61	B-3	OIL WARNING	136	C-7	LIGHT CONTROL (Ex. ECE)
62	C-3	P.K.B. WARNING	137	B-2	LIGHT CONTROL (For ECE)
63	B-4	RED INDICATOR (For LHD)	138	D-8	LOW PRESSURE CUT
64	D-4	STOP, LH	139	B-1	LUGGAUGE COMPARTMENT
65	D-4	STOP, RH	140	B-3	NEUTRAL START LIGHT
66	B-5	TAIL, LH (For LHD)	141	C-3	OIL PRESSURE (For A/T)
67	B-6	TAIL, LH (For RHD)	142	D-3	P.K.B. WARNING (Ex. Australia)
68	B-5	TAIL, RH (For LHD)	143	D-4	P.K.B. WARNING (For Australia)
69	B-6	TAIL, RH (For RHD)	144	B-4	STOP LIGHT
70	C-4	TURN SIGNAL, FRONT, LH	145	B-5	TURN SIGNAL LIGHT
71	C-4	TURN SIGNAL, FRONT, RH	146	B-5	WINDSHIELD WASHER
72	D-4	TURN SIGNAL, INDICATOR, LH	147	D-5	WINDSHIELD WIPER
73	C-4	TURN SIGNAL, INDICATOR, RH	148	D-5	WASHER, REAR
74	D-4	TURN SIGNAL, REAR, LH			WIPER, REAR


Nombre	Réperage sur le plan	Comp
7	B-8	Allume-cigare
3	C-1	Alternateur
4	D-1	Alternateur (avec F)
1	C-2	Amplificateur A/C
6	B-1	Batterie 12V
26	B-1	Bobine allumage
115	D-2	Captur de vitesse
2	C-2	Compresseur A/C
10	B-1	Condenseur
20	B-1	Connecteur fusible
8	B-3	Coupe-circuit (pour)
89	C-4	Dégivreur lunette a
12	B-1	Distributeur
87	B-3	Emetteur pression
152	B-3	Emetteur temp eau
18	C-1	Fusible
113	B-8	Haut-parleur, arrière
114	B-8	Haut-parleur, arrière
111	B-8	Haut-parleur, avant
112	B-8	Haut-parleur, avant
127	B-6	Interrupteurs:
117	B-2	Anti-brouillard, (pour ECE)
135	D-7	A/C
136	C-7	Commande d'éc (sauf ECE)
137	B-2	Commande d'éc (pour ECE)
133	A-1	Coupures basse
122	B-4	Dallumage
139	B-1	Dégivreur
134	C-8	Démarrage neut
125	D-8	Eclairage intérie
126	D-8	Eclairage intérie
148	D-5	Essuie-glace, arr
146	B-5	Essuie-glace par
123	D-7	Gradateur (sauf
124	C-7	Gradateur (pour
144	B-4	Lampe clignotar
147	D-5	Lave-glace, arriè
145	B-5	Lave-glace pare-
128	D-5	Lumière boîte à
		(pour LHD)
129	D-6	Lumière boîte à
143	D-4	(pour RHD)
138	D-8	Lumière d'arrêt
132	B-4	Lumières éclaira
118	C-8	bagages
131	C-3	Klaxon
121	C-3	Moteur antenne
120	C-3	Moteur ventilat
140	B-3	Niveau de liqui
119	D-4	(pour l'Austr
141	C-3	Niveau de liqui
142	D-3	(sauf l'Austr
130	B-4	Niveau de liqui
		(sauf l'Austr
15	C-3	Pression huile
151	B-3	Projecteur arriè
22	A-4	Voyant avertisse
23	B-4	main (sauf l'
33	C-5	Voyant avertisse
34	C-6	main (pour l'
42	B-6	Voyant détresse
31	C-3	Jauge d'essence
43	C-3	Jauge temp eau
61	B-3	Klaxon
45	C-5	Klaxon (pour ECE)
46	C-6	Lampes:
74	D-4	Allume-cigare (p
75	C-4	Allume-cigare (p
70	C-4	Anti-brouillard,
71	C-4	(pour ECE)
76	D-4	Avertisseur de fr
77	C-4	(pour l'Austr
72	D-4	Avertisseur d'ess
73	C-4	Avertisseur d'hu
59	D-5	Boîte à gants (p
60	D-6	Boîte à gants (p
52	D-6	Clignotant, arriè
51	D-5	Clignotant, arriè
58	C-8	Clignotant, avan
55	C-8	Clignotant, latér
53	D-6	Clignotant, latér
54	B-7	Clignotant, voya
44	C-6	Clignotant, voya

CORONA ELECTRICAL WIRING DIAGRAM — 1980 PRODU

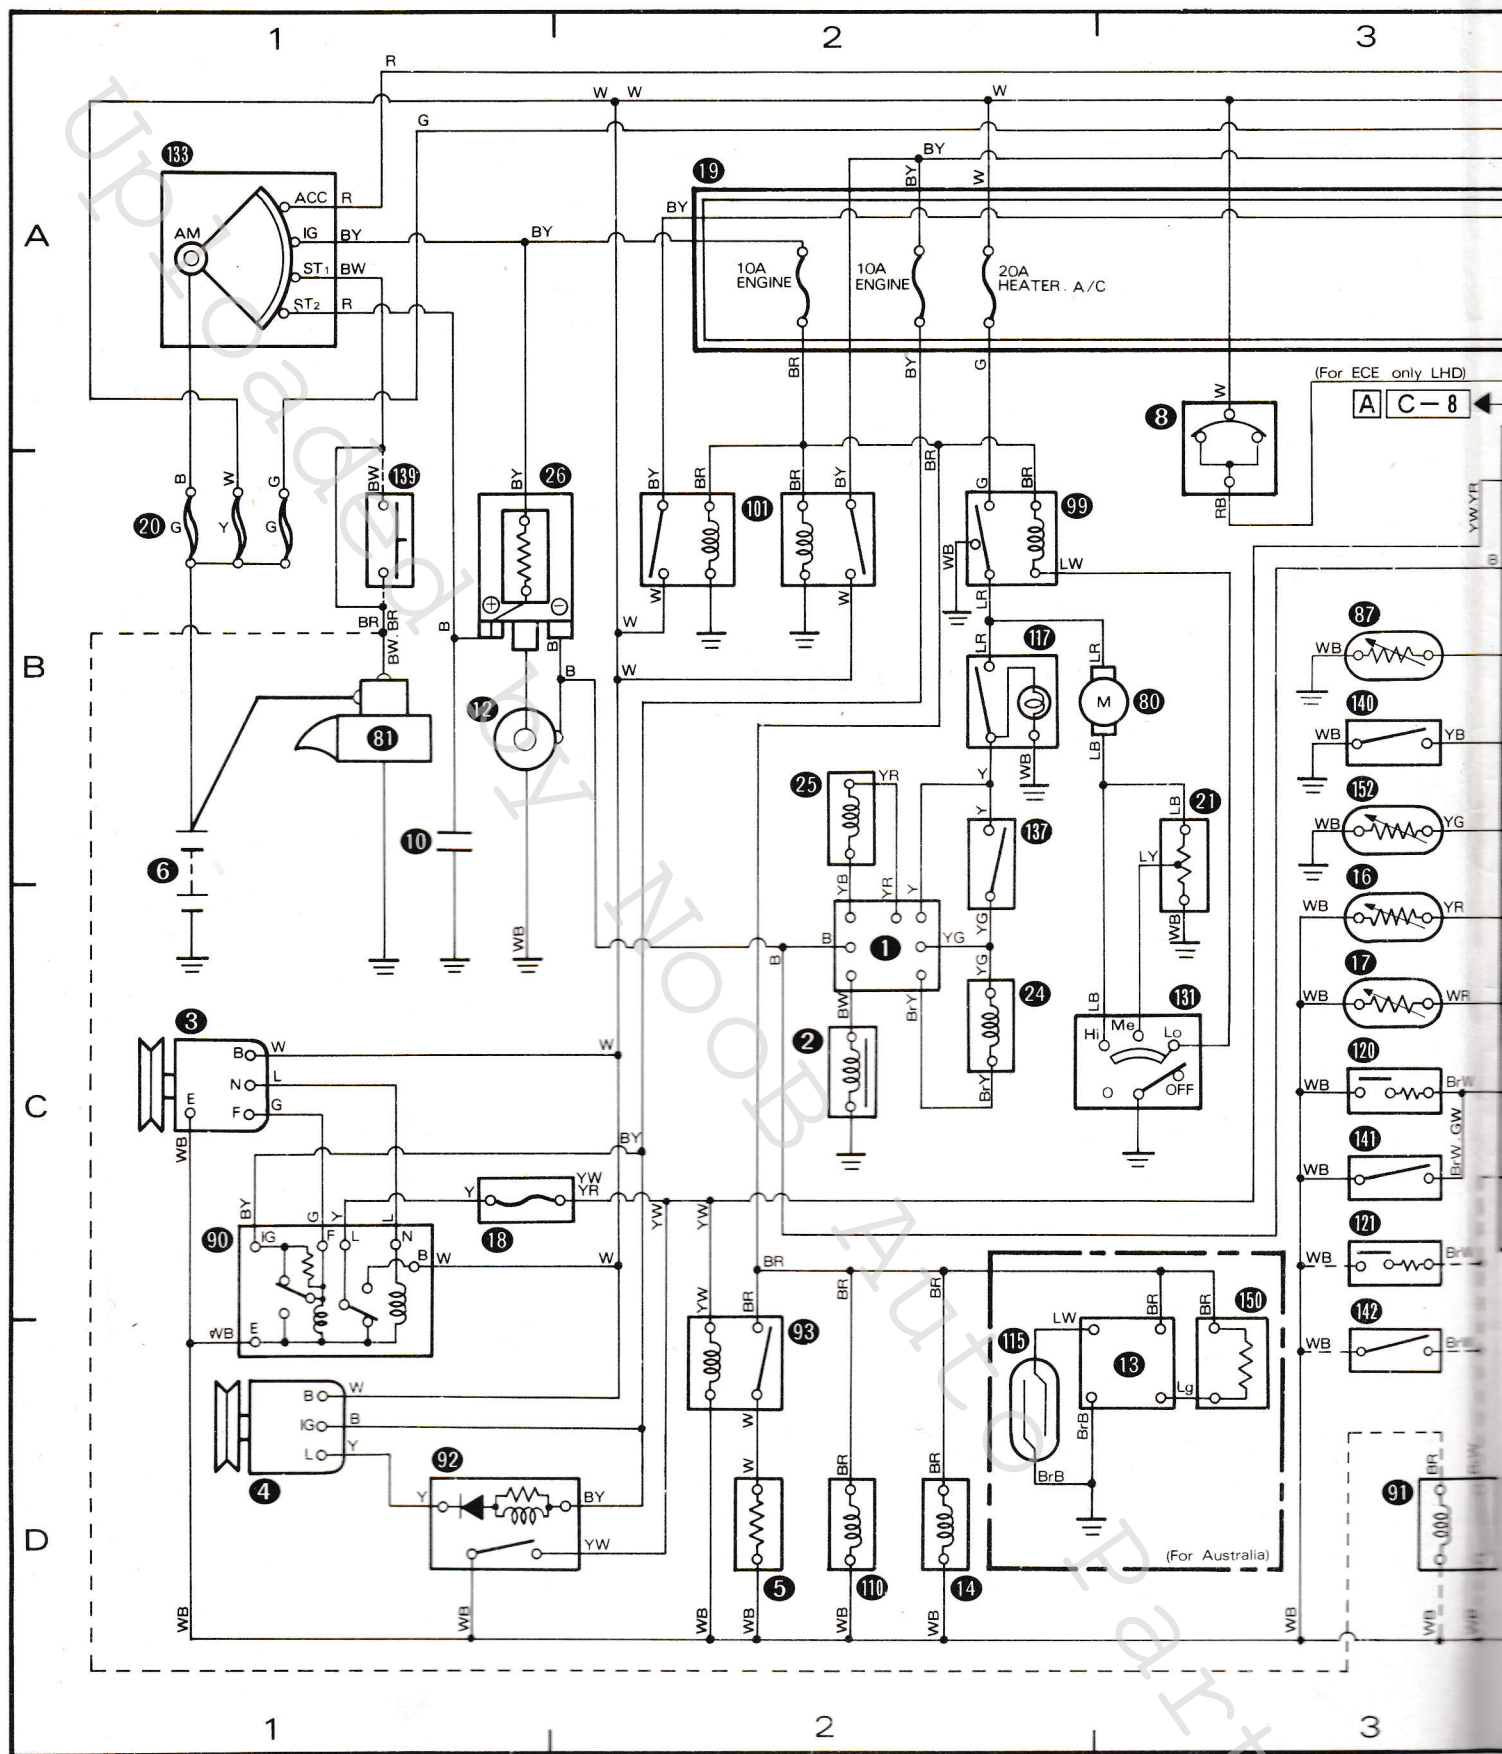

5



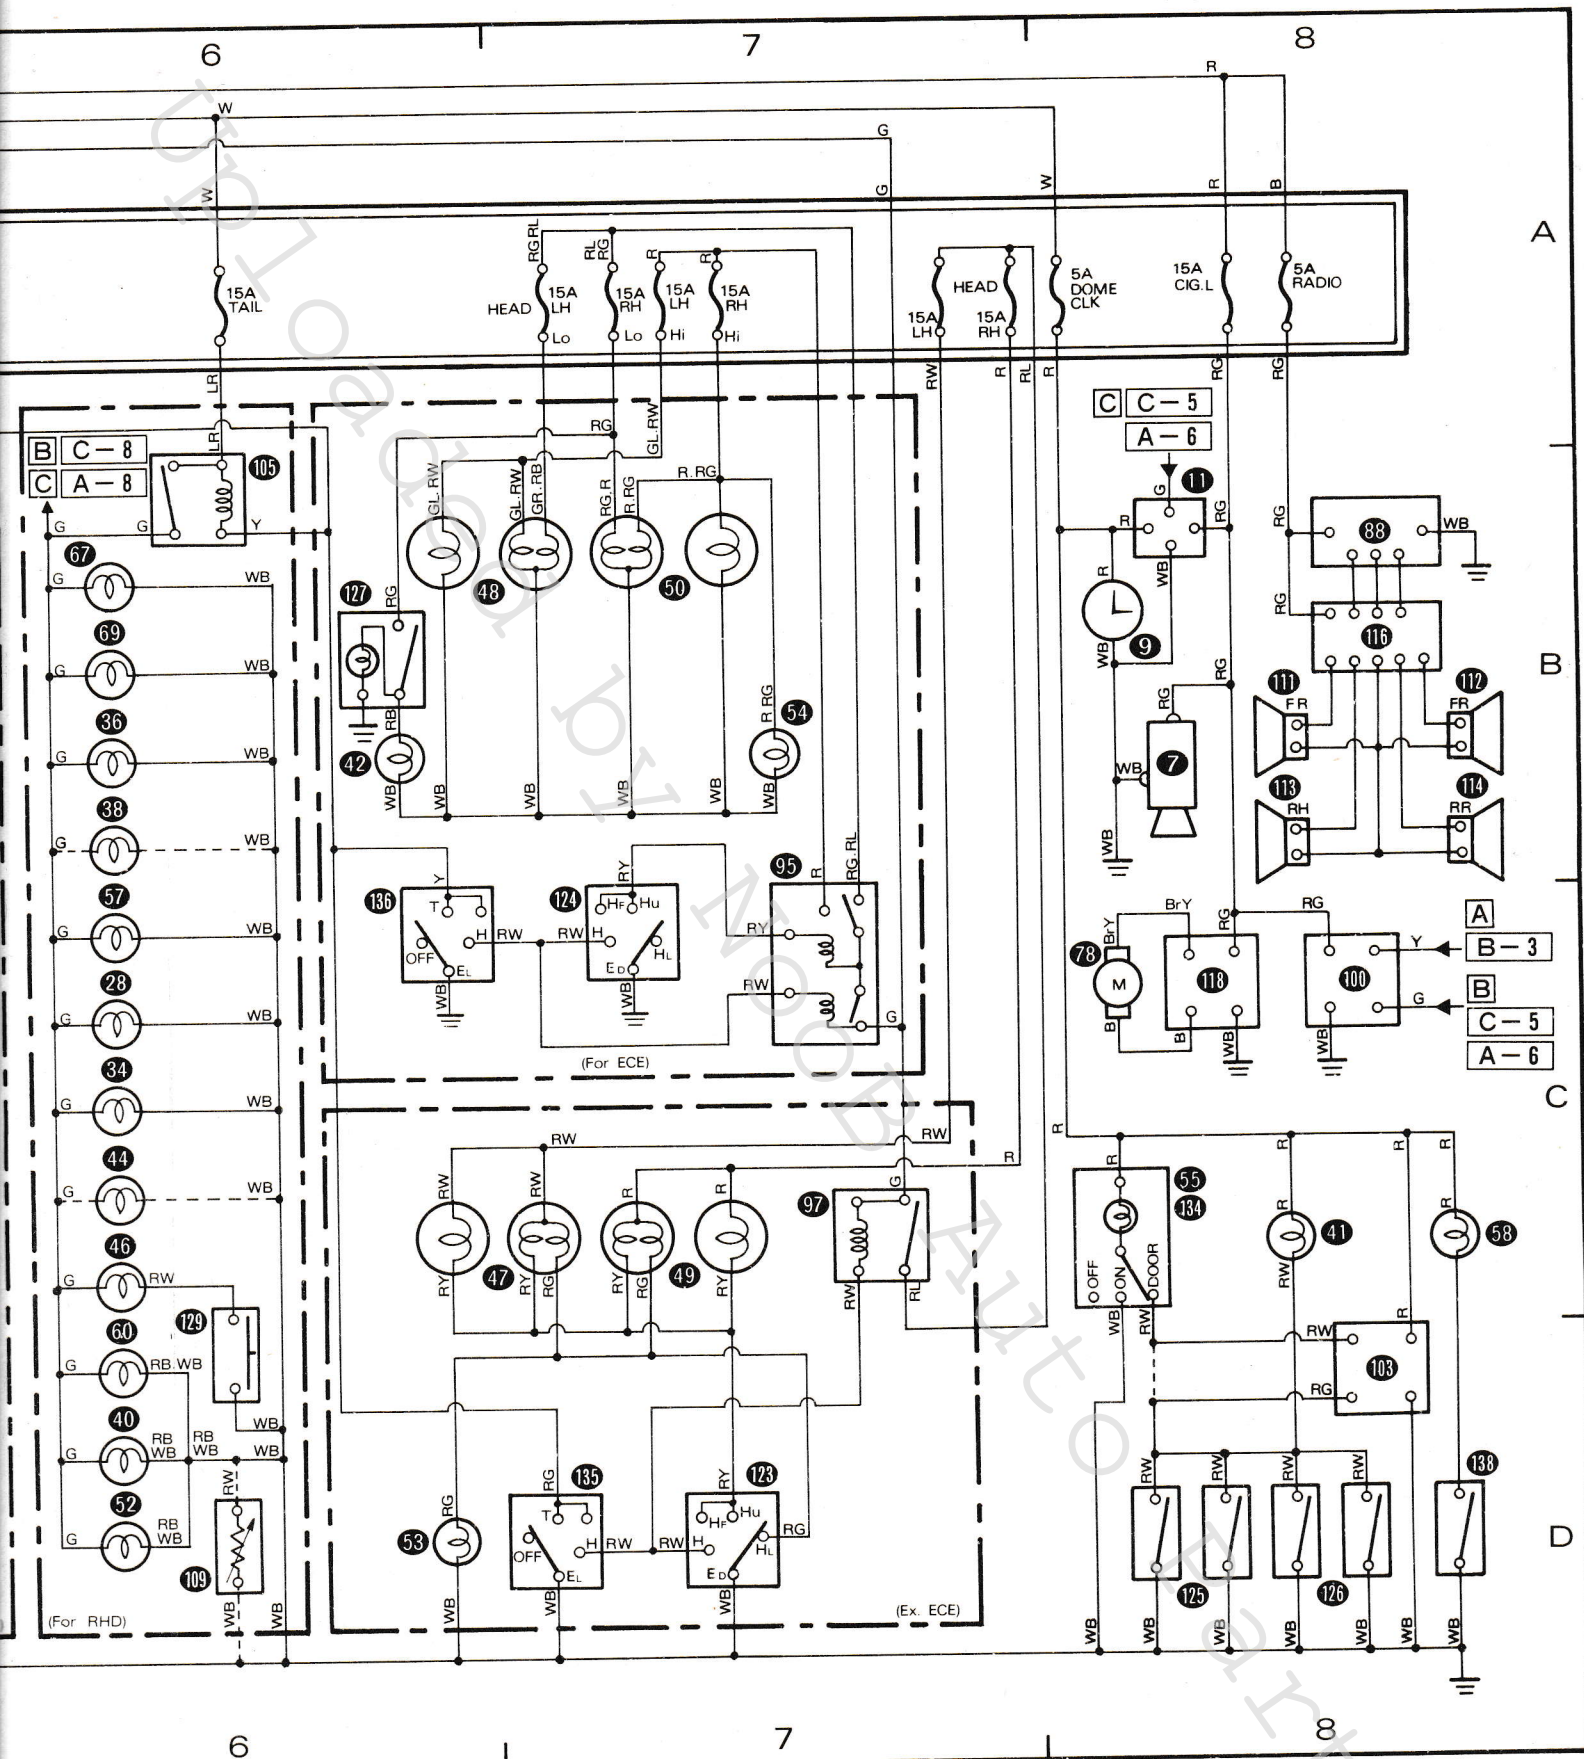

CRESSIDA


INDEX

CRESSIDA ELECTRICAL WIRING DIAGRAM - 1980 PRODUCTION VEHICLE

NUMBER	GRID LOCATION	COMPONENTS	NUMBER	GRID LOCATION	COMPONENTS
1	B-2	ALTERNATOR	77	D-5	POWER WINDOW, FRONT, RH
2	D-8	ANTENNA	78	D-5	POWER WINDOW, REAR, LH
3	C-1	BATTERY 12V	79	D-5	POWER WINDOW, REAR, RH
4	D-1	CHOKE HEATER COIL	80	B-1	STARTER
5	B-8	CIGARETTE LIGHTER	81	C-5	WASHER, FRONT
6	C-5	CIRCUIT BREAKER	82	C-5	WASHER, REAR
7	D-1	CONDENSER	83	C-4	WIPER, FRONT
			84	D-5	WIPER, REAR
8	B-8	DIGITAL CLOCK	85	B-3	NOISE FILTER
9	D-1	DISTRIBUTOR	86	C-8	RADIO
10	C-5	DOOR LOCK SOLENOID, FRONT, LH	87	C-3	REAR WINDOW DEFOGGER
11	C-5	DOOR LOCK SOLENOID, FRONT, RH	88	C-2	REGULATOR
12	C-5	DOOR LOCK SOLENOID, REAR, LH	89	D-6	RHEOSTAT
13	C-6	DOOR LOCK SOLENOID, REAR, RH			RELAYS:
14	D-2	EMISSION CONTROL COMPUTER (For ECE & Hong Kong)	90	C-3	A/C CUT
15	B-2	FUEL GAUGE	91	D-2	BULB CHECK (For Australia)
16	B-2	FUEL LEVEL SENDER	92	D-1	CHOKE CONTROL
17	A-2	FUSE BOX	93	B-3	DEFOGGER
18	B-1	FUSE 5A (For Australia)	94	B-6	DOOR LOCK
19	C-2	FUSE CHARGE 5A	95	B-4	FLASHER
20	B-3	FUSE COOLER 10A (For LHD)	96	B-7	FOG LIGHT, REAR (For England)
21	B-3	FUSE COOLER 15A (For RHD)	97	B-7	HEADLIGHT
22	B-3	FUSE DEFOG, 15A x 2 (For LHD)	98	C-5	HEADLIGHT CLEANER (For LHD)
23	B-8	FUSE DOME 5A	99	B-2	HEATER
24	A-5	FUSE HORN 10A	100	C-7	LIGHT REMINDER
25	B-6	FUSE PANEL 10A (For LHD)	101	C-4	RED INDICATOR LIGHT
26	B-1	FUSIBLE LINK	102	C-7	ROOM LIGHT CONTROL (For LHD)
27	D-3	HEATER RESISTOR	103	C-8	ROOM LIGHT CONTROL (For RHD)
28	B-5	HORN	104	B-6	TAIL LIGHT
29	C-3	IDLE-UP SOLENOID	105	B-4	WINDSHIELD WIPER (Intermittent)
30	C-1	IGNITION COIL	106	D-8	SPEAKER, FRONT
		LIGHTS:	107	C-8	SPEAKER, REAR, LH
31	C-6	A/T INDICATOR	108	C-8	SPEAKER, REAR, RH
32	D-3	BACK-UP, LH	109	C-2	SPEED SENSOR
33	D-3	BACK-UP, RH	110	C-8	STEREO
34	C-2	BRAKE WARNING			SWITCHES:
35	B-2	CHARGE WARNING	111	B-3	A/C
36	C-6	CIGARETTE LIGHTER	112	B-8	ANTENNA MOTOR
37	C-6	CLEARANCE, LH	113	D-3	BACK-UP LIGHT
38	C-6	CLEARANCE, RH	114	D-2	BRAKE WARNING LIGHT
39	D-6	CLOCK	115	B-3	DEFOGGER
40	C-7	DOOR COURTESY, LH	116	D-2	DIFFERENTIAL
41	C-7	DOOR COURTESY, RH	117	C-7	DIMMER
42	D-6	FOG, LH	118	D-7	DOOR COURTESY, FRONT, LH
43	D-7	FOG, RH	119	D-7	DOOR COURTESY, FRONT, RH
44	B-8	FOG, REAR (For England)	120	D-7	DOOR COURTESY, REAR, LH
45	B-2	FUEL WARNING	121	D-7	DOOR COURTESY, REAR, RH
46	C-6	GLOVE BOX	122	D-7	DOOR KEY (For LHD)
47	B-7	HEAD, LH	123	D-8	DOOR KEY (For RHD)
48	B-7	HEAD, RH	124	B-5	DOOR LOCK
49	D-6	HEATER CONTROL	125	D-6	FOG LIGHT
50	C-7	HIGH BEAM INDICATOR	126	B-8	FOG LIGHT, REAR (For England)
51	D-8	IGNITION KEY	127	B-2	FUEL WARNING LIGHT
52	C-7	INTERIOR	128	C-6	CLOVE BOX LIGHT
53	C-6	LICENSE PLATE	129	B-4	HAZARD
54	C-7	LUGGAUGE COMPARTMENT	130	D-3	HEATER BLOWER MOTOR
55	D-6	METER	131	B-5	HORN
56	C-2	OIL WARNING	132	A-1	IGNITION
57	C-2	P. K. B. WARNING	133	C-7	INTERIOR LIGHT
58	C-4	RED INDICATOR	134	B-7	LIGHT CONTROL
59	D-4	STOP, LH	135	B-5	LUGGAUGE COMPARTMENT LIGHT
60	D-4	STOP, RH	136	B-1	NEUTRAL START (For A/T)
61	C-6	TAIL, LH	137	C-2	OIL PRESSURE
62	C-6	TAIL, RH	138	C-2	P. K. B.
63	C-7	TRUNK ROOM	139	C-2	P. K. B. (For Australia)
64	C-4	TURN SIGNAL, FRONT, LH	140	C-6	POWER WINDOW, FRONT
65	C-4	TURN SIGNAL, FRONT, RH	141	C-5	POWER WINDOW, MASTER
66	D-4	TURN SIGNAL, INDICATOR, LH	142	D-6	POWER WINDOW, REAR, LH
67	D-4	TURN SIGNAL, INDICATOR, RH	143	C-6	POWER WINDOW, REAR, RH
68	D-4	TURN SIGNAL, REAR, LH	144	D-4	STOP LIGHT
69	D-4	TURN SIGNAL, REAR, RH	145	D-7	TRUNK ROOM LIGHT
70	D-4	TURN SIGNAL, SIDE, LH	146	B-4	TURN SIGNAL
71	D-4	TURN SIGNAL, SIDE, RH	147	B-4	WINDSHIELD WASHER
72	C-3	MAGNET CLUTCH	148	B-4	WINDSHIELD WIPER
73	B-8	MOTORS:	149	C-5	WASHER, REAR
74	B-5	ANTENNA	150	C-5	WIPER, REAR
75	B-3	HEADLIGHT CLEANER (For LHD)	151	B-2	TACHOMETER
76	D-5	HEATER BLOWER	152	C-3	THERMOSTAT
		POWER WINDOW, RONT, LH	153	D-2	V. S. V. (For TP)
			154	C-2	WATER TEMP GAUGE
			155	C-2	WATER TEMP SENDER

DIAGRAMME DE CABLAGE ELECTRIQUE

Nombre	Référence sur le plan	Composant
5	B-8	Allume-cigare
1	B-2	Alternateur
2	D-8	Antenne
3	C-1	Batterie 12V
30	C-1	Bobine allumage
4	D-1	Bobine chauffage d'arrêt
109	C-2	Capteur de vitesse
7	D-1	Condenseur
26	B-1	Connecteur fusible
6	C-5	Coupe-circuit
87	C-3	Dégivreur lunette arrière
9	D-1	Distributeur
72	C-3	Embrayage magnétique
155	C-2	Emetteur temp eau
85	B-3	Filtre anti-parasites
18	B-1	Fusible 5A (pour L'Aus)
19	C-2	Fusible CHARGE 5A
20	B-3	Fusible COOLER 10A
21	B-3	Fusible COOLER 15A
22	B-3	Fusible DEFOG, 15 x 2
23	B-8	Fusible DEFOG, 15 x 2
24	A-5	Fusible DOME 5A
25	B-6	Fusible HORN 10A
		Fusible PANEL 10A (p
107	C-8	Haut-parleur, arrière, L
108	C-8	Haut-parleur, arrière, R
106	D-8	Haut-parleur, avant
		Interrupteurs:
142	D-6	Actionnement de lev
		arrière, LH
143	C-6	Actionnement de lev
		arrière, RH
140	C-6	Actionnement de lev
141	C-5	Actionnement de lev
		maître
125	D-6	Anti-brouillard
		(pour la Grande-b
126	B-8	Anti-brouillard, arriè
		(pour la Grande-b
111	B-3	A/C (air conditionné
134	B-7	Commande d'éclaira
135	D-7	Coupures basse press
132	A-1	Dallumage
115	B-3	Dégivreur
136	B-1	Démarrage neutre (p
116	D-2	Différentiel
133	C-7	Eclairage intérieur, a
120	D-7	Eclairage intérieur, a
121	D-7	Eclairage intérieur, a
118	D-7	Eclairage intérieur, a
119	D-7	Eclairage intérieur, a
150	C-5	Essuie-glace, arrière
148	B-4	Essuie-glace pare-bri
117	C-7	Gradateur
131	B-5	Klaxon
127	B-2	Lampe avertisseur d'
114	D-2	Lampe avertisseur de
146	B-4	Lampe clignotant
145	D-7	Lampe éclairage de n
149	C-5	Lave-glace, arrière
147	B-4	Lave-glace pare-bris
128	C-6	Lumière boîte à gant
144	D-4	Lumière d'arrêt
112	B-8	Moteur antenne
130	D-3	Moteur ventilateur cl
122	D-7	Porte clef (pour LHD)
123	D-8	Porte clef (pour RHD)
124	B-5	Porte serrure
137	C-2	Pression huile
113	D-3	Projecteur arrière
138	C-2	Voyant avertisseur d'
139	C-2	Voyant avertisseur d'
		(pour l'Austra)
129	B-4	Voyant détresse
154	C-2	Jauge temp eau
28	B-5	Klaxon
		Lampes:
36	C-6	Allume-cigare
42	D-6	Anti-brouillard, LH
43	D-7	Anti-brouillard, RH
44	B-8	Anti-brouillard, arriè
		(pour la Grande-b
34	C-2	Avertisseur de freins
45	B-2	Avertisseur d'essence
56	C-2	Avertisseur d'huile
46	C-6	Boîte à gants
68	D-4	Clignotant, arrière, L
69	D-4	Clignotant, arrière, R

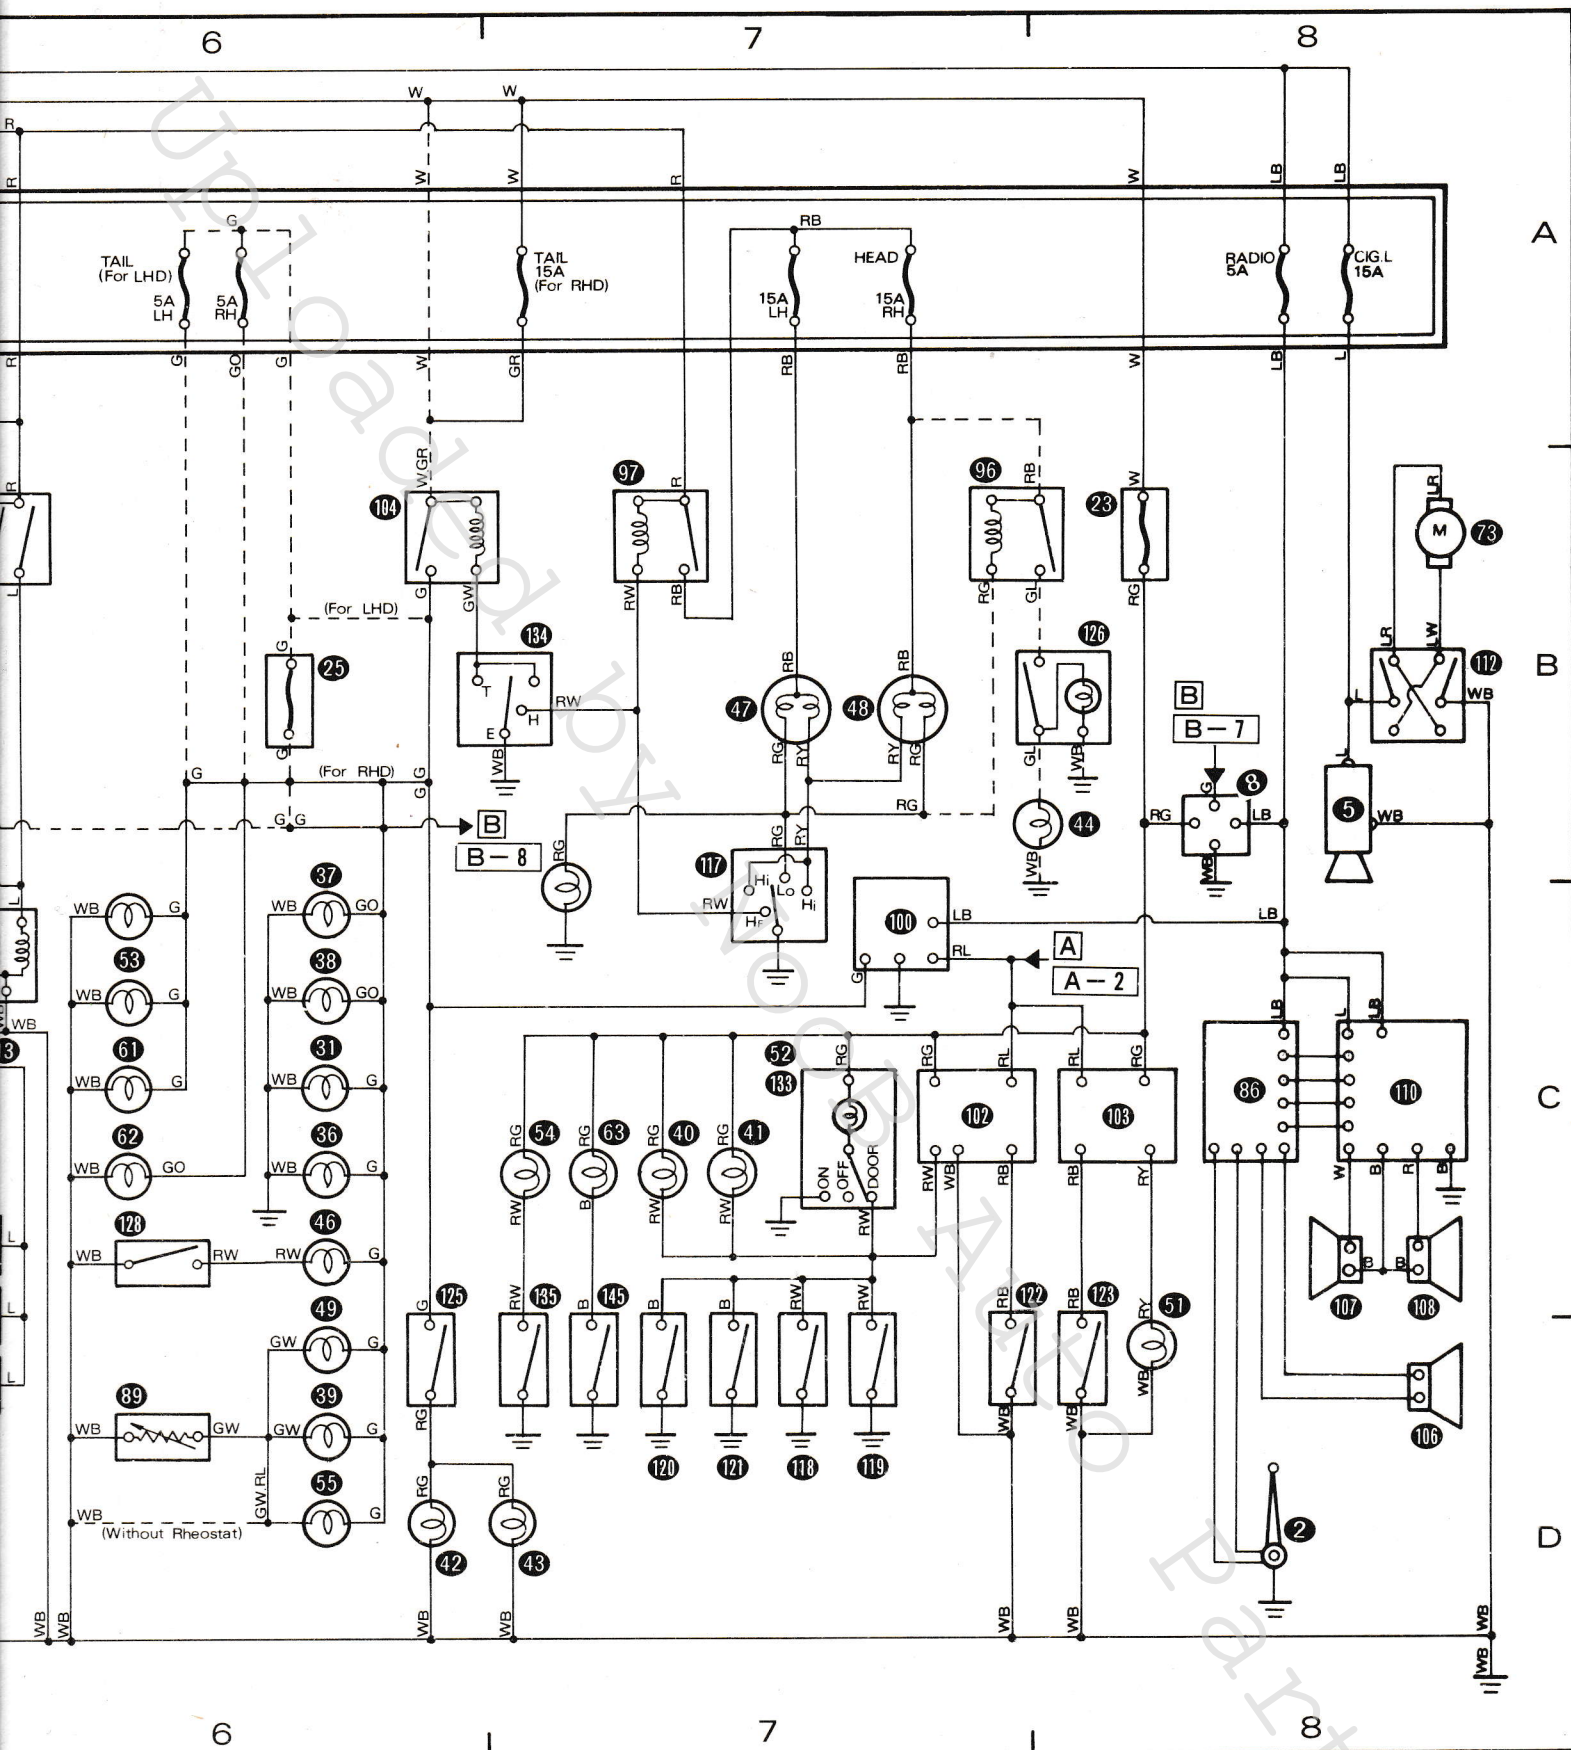

CROWN
(Except EFI & Diesel)

INDEX


CROWN (Except EFI & Diesel) ELECTRICAL WIRING DIAGRAM — 1980 PRODUCTION VEHICLE

DIAGRAMME DE CABLAGE ELECTRIQUE

NUMBER	GRID LOCATION	COMPONENTS	NUMBER	GRID LOCATION	COMPONENTS
1	D-2	A/C AMPLIFIER	113	C-1	PICK-UP COIL (For 4M Royal)
2	C-1	ALTERNATOR	114	C-2	POWER SERVO
3	C-1	ALTERNATOR (With IC Regulator)	115	B-8	RADIO
4	C-3	A/P BLOWER RESISTOR	116	C-1	REGULATOR
5	B-1	BATTERY	117	C-4	RHEOSTAT
6	D-1	CHOKER HEATER COIL	118	B-2	RELAYS:
7	C-8	CIGARETTE LIGHTER, FRONT	119	C-3	A/C CUT
8	C-8	CIGARETTE LIGHTER, REAR	120	D-6	BULB CHECK (For Australia)
9	B-8	CLOCK	121	D-1	CHARGE LIGHT
10	D-2	CONTROL PANEL	122	D-1	CHOKER CONTROL
11	B-7	DEFOGGER, REAR (For ECE & Australia)	123	B-5	DIMMER (For ECE & General OPT)
12	B-8	DIGITAL CLOCK (For Royal)	124	C-6	DOOR LOCK CONTROL
13	C-5	DISTRIBUTOR	125	C-5	FLASHER
14	D-7	DOOR AUTO LOCK SOLENOID	126	A-5	HEADLIGHT (For ECE & General)
15	D-6	DOOR LOCK SOLENOID	127	D-7	HEADLIGHT (For General)
16	D-7	DOOR LOCK SOLENOID (For Back Door)	128	C-7	HEADLIGHT CLEANER
17	B-1	FUEL CUT SOLENOID	129	C-5	HEADLIGHT FAILURE
18	B-5	FUEL GAUGE	130	C-3	HEADLIGHT FAILURE (For General)
19	B-5	FUEL SENSOR	131	B-2	HEADLIGHT MAIN
20	A-2	FUSE BOX	132	B-6	INTERMITTENT WIPER (For RHD Royal)
21	B-1	FUSE, CHARGE	133	D-7	LIGHT RETAINER
22	D-3	FUSE, HEAD LH 15A (For ECE & General OPT)	134	B-5	LIGHT RETAINER (For ECE & General OPT)
23	D-3	FUSE, HEAD LH 15A (For General)	135	B-2	MAGNET
24	D-5	FUSE, HEAD RH 15A (For ECE & General OPT)	137	B-7	MAIN (For Power)
25	D-3	FUSE, HEAD RH 15A (For General)	138	B-2	MAIN (For Rear Cooler)
26	C-5	FUSE, R/F FOG 5A (For ECE & General OPT)	139	C-6	POWER
27	A-1	FUSIBLE LINK	140	B-2	RATCHET
28	A-2	FUSIBLE LINK (For A/C)	141	C-4	REAR LIGHTS FAILURE
29	B-1	HEATER RESISTOR	142	B-4	REAR LIGHTS FAILURE (For General)
30	C-1	HEATER RESISTOR (For Auto)	143	C-8	ROOM LIGHT CONTROL (For LHD)
31	B-5	HORN	144	A-7	ROOM LIGHT CONTROL (For RHD)
32	C-2	IDLE UP V.S.V.	145	B-7	TAIL LIGHT (For ECE & General OPT)
33	B-1	IGNITER	146	B-3	TAIL LIGHT (For General)
34	C-1	IGNITION COIL	147	B-2	WARM UP (40°C)
35	C-2	INSIDE & AMBIENT THERMO SENSOR	148	C-2	WIPER MAIN
36	C-2	LIGHTS:	149	B-6	WIPER MAIN
37	C-2	A/C (Rear A/C Panel) (For Front Room)	150	B-5	SEAT BELT SOLENOID
38	C-2	A/P Hi (Rear A/C Panel) (For Front Room)	151	D-1	SOLENOID VALVE
39	C-4	A/T INDICATOR	152	B-8	(For W/V, B/L, HEAT, VENT, DVV, DVV)
40	B-5	BACK-UP	153	B-8	SPEAKER, FRONT, LH
41	C-5	BRAKE WARNING	154	B-8	SPEAKER, FRONT, RH
42	C-5	CHARGE WARNING	155	B-8	SPEAKER, REAR, LH
43	C-4	CIGARETTE LIGHTER	156	B-8	SPEAKER, REAR, RH
44	B-4	CLEARANCE, FRONT	157	C-6	SPEED SENSOR (For Super & Royal)
45	B-3	CLEARANCE, FRONT (For General)	158	D-8	SWITCHES:
46	C-4	CLOCK	159	B-5	ANTENNA MOTOR
47	B-8	DECK ROOM	160	D-6	BACK-UP LIGHT
48	B-8	DOOR COURTESY	161	B-5	BRAKE OIL LEVEL
49	B-3	FOG, FRONT (For General)	162	B-3	BULB CHECK (For ECE & General OPT)
50	C-4	FOG, REAR (For ECE & General OPT)	163	B-3	COURTESY (For General)
51	C-5	FUEL LEVEL WARNING	164	B-8	COURTESY (For General)
52	C-5	GLOVE BOX	165	B-7	DECK ROOM LIGHT
53	D-5	HEAD, LH (For ECE & General OPT)	166	R-5	DEFOGGER, REAR
54	D-3	HEAD, LH (For General)	167	C-3	DIMMER (For ECE & General OPT)
55	D-5	HEAD, RH (For ECE & General OPT)	168	C-8	DIMMER (For General)
56	D-3	HEAD, RH (For General)	169	B-8	DOOR LIGHT, FRONT
57	C-5	HEAD WARNING	170	C-8	DOOR LIGHT, REAR
58	C-4	HEATER CONTROL	171	C-7	DOOR KEY (For LHD)
59	C-4	HIGH BEAM INDICATOR (For General)	172	C-6	DOOR KEY (For RHD)
60	C-5	HIGH BEAM INDICATOR	173	C-5	DOOR LOCK
61	C-7	IGNITION KEY	174	B-3	FOG LIGHT, FRONT
62	B-4	INSPECTION	175	C-6	FOG LIGHT, REAR (For General)
63	B-8	INTERIOR	176	D-4	FUEL LEVEL WARNING LIGHT
64	D-4	LICENSE PLATE, LH	177	C-5	GLOVE BOX LIGHT
65	B-4	LICENSE PLATE, LH (For General)	178	C-5	HAZARD WARNING LIGHT
66	D-4	LICENSE PLATE, RH	179	B-5	HEATER BLOWER
67	B-4	LICENSE PLATE, RH (For General)	180	A-1	HORN
68	B-8	LUGGAGE ROOM	181	B-4	IGNITION
69	B-3	METER	182	D-5	INSPECTION LIGHT
70	B-5	METER	183	D-5	INTERIOR LIGHT
71	B-5	P.K.B. WARNING	184	B-5	LEAD
72	C-5	RADIO	185	B-3	LIGHT CONTROL
73	B-8	REAR PARCENER	186	B-8	(For ECE & General OPT)
74	B-8	REAR WARNING	187	C-2	LIGHT CONTROL (For General)
75	C-4	STOP, LH (For ECE & General OPT)	188	A-3	LUGGAGE ROOM LIGHT
76	C-4	STOP, LH (For General)	189	B-3	MAIN (Rear A/C Panel)
77	C-4	STOP, RH (For ECE & General OPT)	190	C-2	MODE (Rear A/C Panel)
78	C-4	STOP, RH (For General)	191	A-3	MODE (Rear A/C Panel)
79	C-4	TAIL, LH (For ECE & General OPT)	192	A-1	NEUTRAL START
80	D-4	TAIL, LH (For General)	193	B-6	O/D
81	C-4	TAIL, RH (For ECE & General OPT)	194	B-6	O/D MAIN (For ECE 5M-E Engine)
82	B-4	TAIL, RH (For General)	195	B-6	O/D OIL PRESSURE
83	B-4	TURN SIGNAL, FRONT, LH	196	B-6	O/D OIL PRESSURE (For ECE 5M-E Engine)
84	C-5	TURN SIGNAL, FRONT, RH	197	C-3	OIL PRESSURE
85	D-5	TURN SIGNAL, INDICATOR, LH	198	C-7	P.K.B.
86	D-5	TURN SIGNAL, INDICATOR, RH	199	C-7	POWER SEAT
87	D-5	TURN SIGNAL, REAR, LH	200	D-8	POWER WINDOW DOOR
88	D-5	TURN SIGNAL, REAR, RH	201	C-3	POWER WINDOW MASTER
89	D-5	TURN SIGNAL, SIDE, LH	202	B-2	PRESSURE
90	D-5	TURN SIGNAL, SIDE, RH	203	B-8	REAR PARCENER LIGHT
91	C-4	VANITY	204	D-8	REMOTE CONTROL SIDE MIRROR
92	C-4	VANITY	205	B-4	For Hong Kong
93	C-2	MAGNET CLUTCH	206	D-4	STOP LIGHT
94	D-3	MAGNET VALVE	207	C-4	TRUNK OPENER
95	D-8	MOTORS:	208	C-5	TRUNK OPENER MAIN
96	D-3	A/P BLOWER	209	D-6	TURN SIGNAL
97	C-7	HEADLIGHT CLEANER	210	C-4	VACUUM (For LS Engine)
98	B-1	HEATER	211	B-6	VANITY LIGHT
99	C-7	POWER SEAT	212	D-7	WASHER, FRONT
100	D-8	REMOTE CONTROL SIDE MIRROR	213	B-7	WASHER, FRONT (For RHD Royal)
101	C-8	STARTER	214	B-6	WASHER, REAR (For Wagon)
102	B-1	WASHER, FRONT	215	D-7	WIPER, FRONT
103	B-7	WASHER, FRONT (For RHD Royal)	216	B-7	WIPER, FRONT (For RHD Royal)
104	D-7	WASHER, REAR (For Wagon)	217	D-5	WIPER, REAR (For Wagon)
105	B-7	WIPER, FRONT	218	D-4	TACHOMETER
106	B-6	WIPER, FRONT (For RHD Royal)	219	B-2	TRUNK OPENER SOLENOID
107	C-7	WIPER, REAR (For RHD Royal)	220	B-2	THERMOSTAT (40°C)
108	B-7	WIPER, REAR (For Wagon)	221	C-2	THERMOSTAT (60°C)
109	D-3	NOISE FILTER	222	C-2	VOLUME (For A/C)
110	B-6	O/D COMPUTER (For ECE 5M-E Engine)	223	C-6	VPS COMPUTER (For Super & Royal)
111	B-6	O/D SOLENOID	224	B-5	VPS SOLENOID (For Super & Royal)
112	B-6	O/D SOLENOID (For ECE 5M-E Engine)	225	B-6	WATER TEMP GAUGE
					WATER TEMP SENDER


Nombre	Référence sur le plan	Composants
8	C-8	Allume-cigares
7	C-8	Allume-cigares
33	B-1	Allumeur
2	C-1	Alternateur
3	C-1	Alternateur régulateur C
1	D-2	Amplificateur
5	B-1	Batterie
34	B-1	Bobine allumage
6	D-1	Bobine chaise d'arrêt
113	C-1	Bobine repartir 4M Royal
156	B-6	Captur de vent pour ECE
157	C-6	Captur de vent pour Super
10	D-2	Commande de verrouillage de plan
27	A-1	Connecteur
28	A-2	Connecteur (pour A/C)
11	B-7	Dégivreur lun arrière (pour
13	C-1	Distributeur
925	C-2	Embrayage mécanique
21	B-1	Emission de son
109	D-3	Filtre anti-chaleur
21	B-1	Fusible, CHARGE
22	D-5	Fusible, HEAD 15A
23	D-3	Fusible, HEAD 15A (OPT)
24	D-5	Fusible, HEAD 15A
25	D-3	Fusible, HEAD 15A (OPT)
26	C-5	Fusible, HEAD 15A (OPT)
154	B-8	Haut-parleurs, LH
155	B-8	Haut-parleurs, RH
152	B-8	Haut-parleurs, LH
153	B-8	Haut-parleurs, RH
199	C-7	Interrupteur
161	B-5	Arrière des sièges
174	B-3	Anti-bruit, arrière (po
173	C-5	Anti-bruit, avant
181	B-4	Baladeur
170	C-5	Cil de poussoir LHD
171	C-7	Cil de poussoir RHD
204	D-8	Commande de distance de
184	B-5	Commande d'éclairage
185	B-3	Commande d'éclairage
186	B-3	Conducteur
180	A-1	Dallage
165	B-7	Dégivreur
192	B-7	Démarrage (pour a
186	B-8	Eclairage arrière
182	B-8	Eclairage avant
162	B-4	Eclairage avant
163	B-3	Eclairage avant (pour
189	B-3	Eclairage avant (pour
216	B-7	Essuie-glace arrière
214	B-6	Essuie-glace-brise, av
215	D-7	Essuie-glace-brise, av
166	B-5	Gradateur ECE et
167	C-3	Gradateur Général
179	B-5	Kiaxon
208	C-5	Lampe clignotant
203	B-8	Lampe clignotant arri
210	C-4	Lampe clignotant av
213	B-7	Lave-glace arrière
211	B-6	Lave-glace-brise, av
212	D-7	Lave-glace-brise, av
200	D-8	Lève-glace
164	B-8	Lumière arrière
176	D-4	Lumière à gants
205	B-6	Lumière avant
201	C-8	Maître des gants
206	D-4	Malle arrière
191	A-3	Mode (pour planche de
190	C-2	Mode (pour planche de
158	D-8	Moteur à essence
178	B-2	Moteur ventilateur chau
160	D-6	Niveau de frein
169	B-8	Porte, avant
168	C-8	Porte, avant
202	B-2	Pression
197	B-6	Pression d'huile
196	B-6	Pression d'huile vitesse
196	B-6	Pression d'huile vitesse
188	A-3	Principal leur planche
187	C-2	Principal leur planche
207	C-4	Principal d'ouverture de
194	B-6	Principal d'ouverture de
159	B-5	Projecteur
175	C-6	Signalisation de niveau
177	C-5	Signalisation des feux x
172	C-6	Verrouillage porte
209	D-6	Vide (pour LS moteur)
193	C-6	Vitesse multipliée
198	B-6	Voyant d'alarme de
177	C-5	Voyant d'alarme de
18	B-5	Jauge d'essence
224	B-5	Jauge temp eau
31	B-5	Kiaxon
36	C-2	Lampes:
43	C-4	A/C (pour planche de
50	C-4	Allume-cigares
41	B-3	Anti-bruit, arrière
79	B-5	Anti-bruit, avant
41	C-5	Avertisseur de freins
62	B-4	Avertisseur d'huile
38	C-2	Baladeur
52	C-5	Bas A/P leur planche
53	C-5	Boîte à gants
58	D-5	Clignotant, arrière, LH
59	D-5	Clignotant, arrière, RH
54	C-5	Clignotant, avant, LH
90	D-5	Clignotant, avant, RH
91	D-5	Clignotant, latéral, LH
96	D-5	Clignotant, latéral, RH
87	D-5	Clignotant, voyant, R
80	B-4	Combiné compteur
58	C-4	Commande de chauff

CROWN ELECTRICAL WIRING DIAGRAM — 1980 PRODUCT

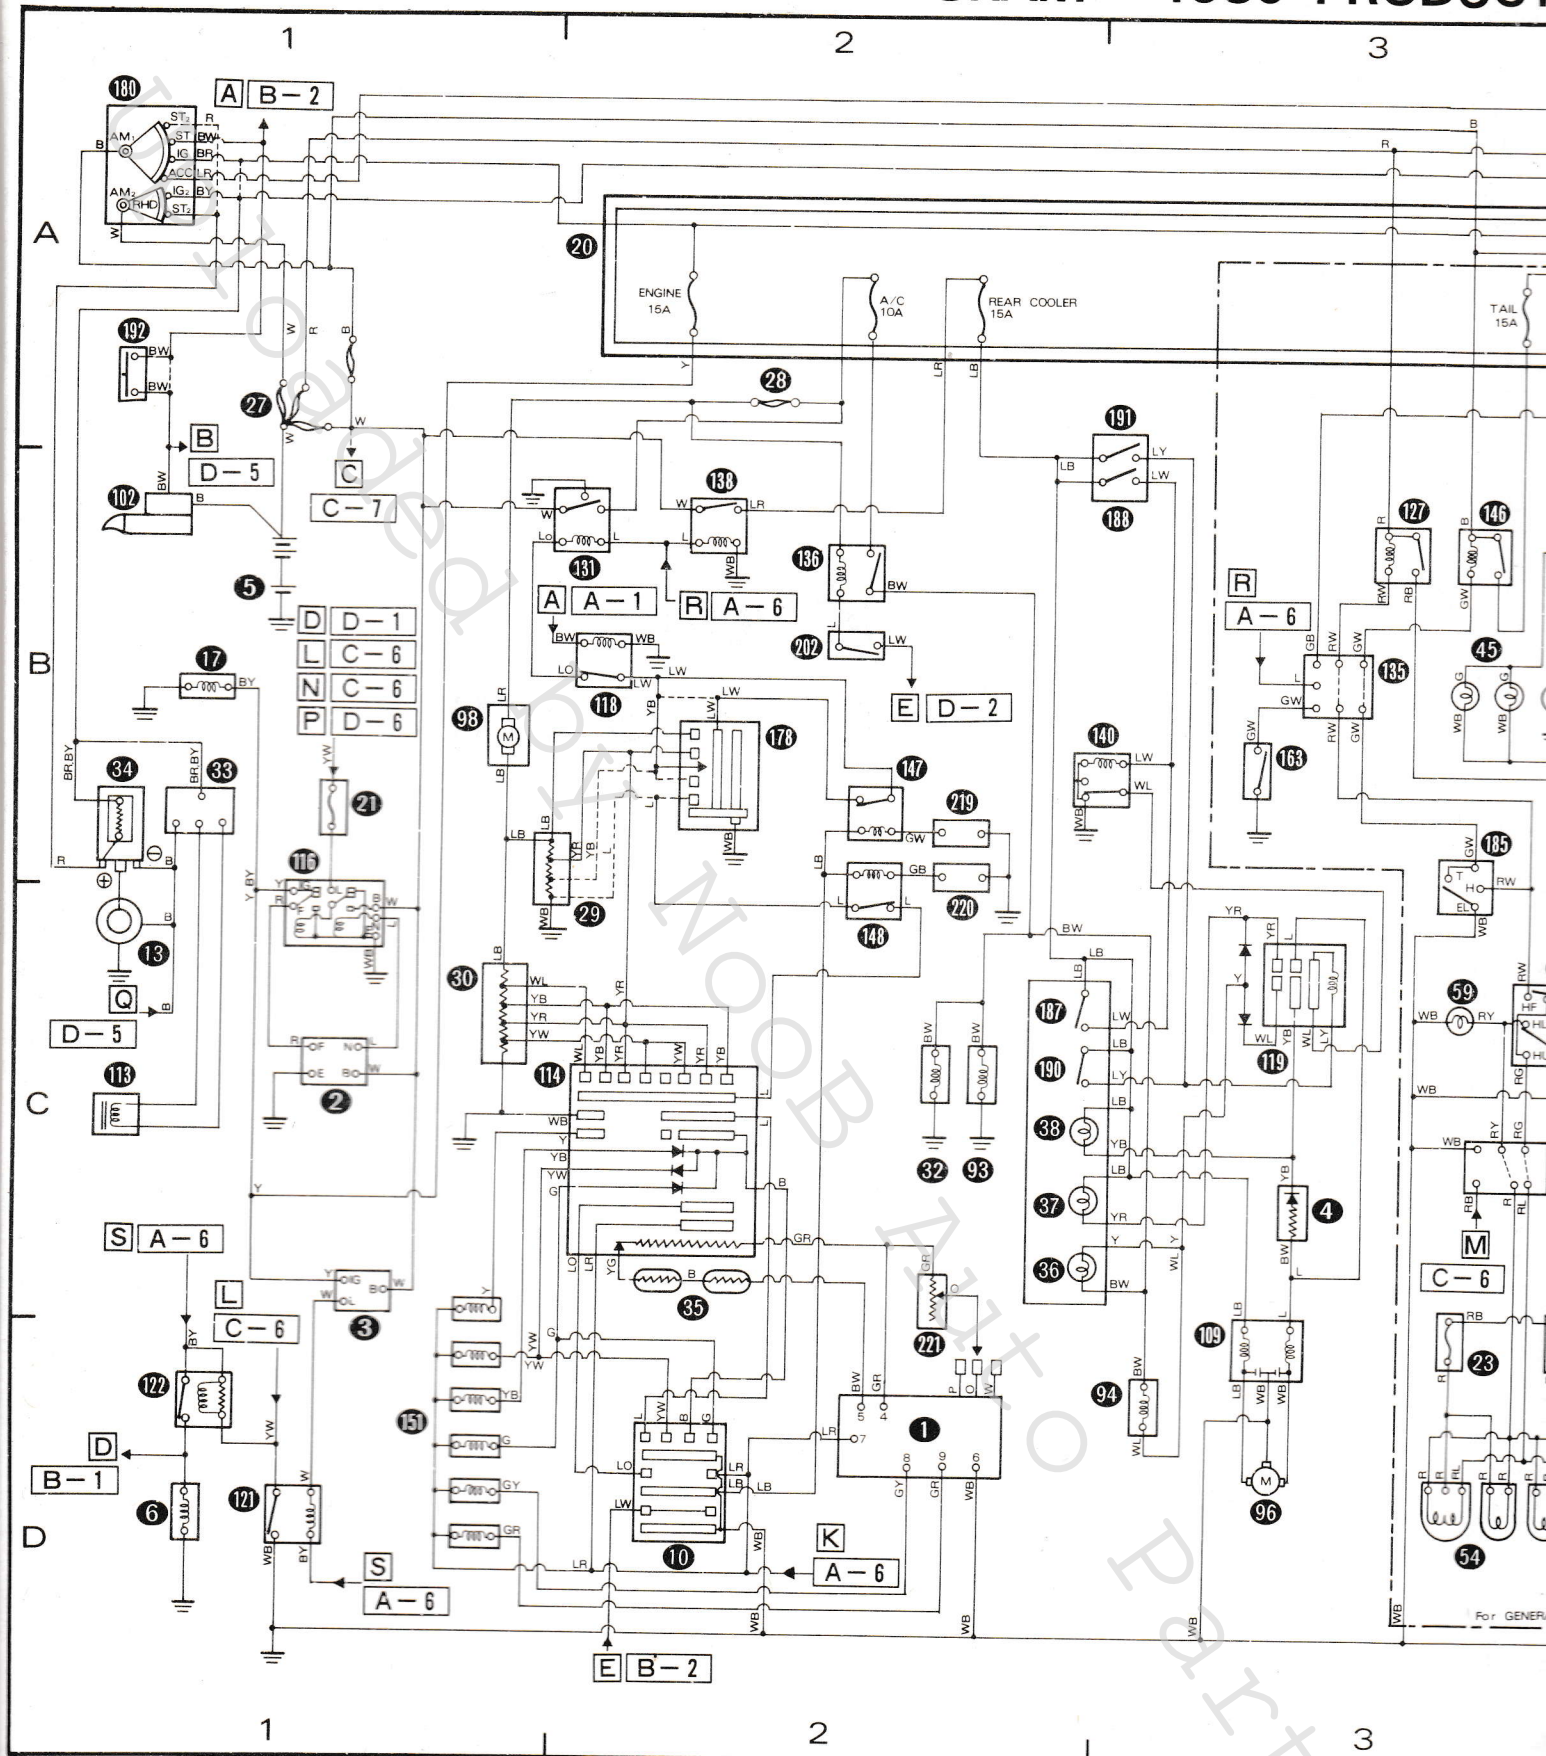

5



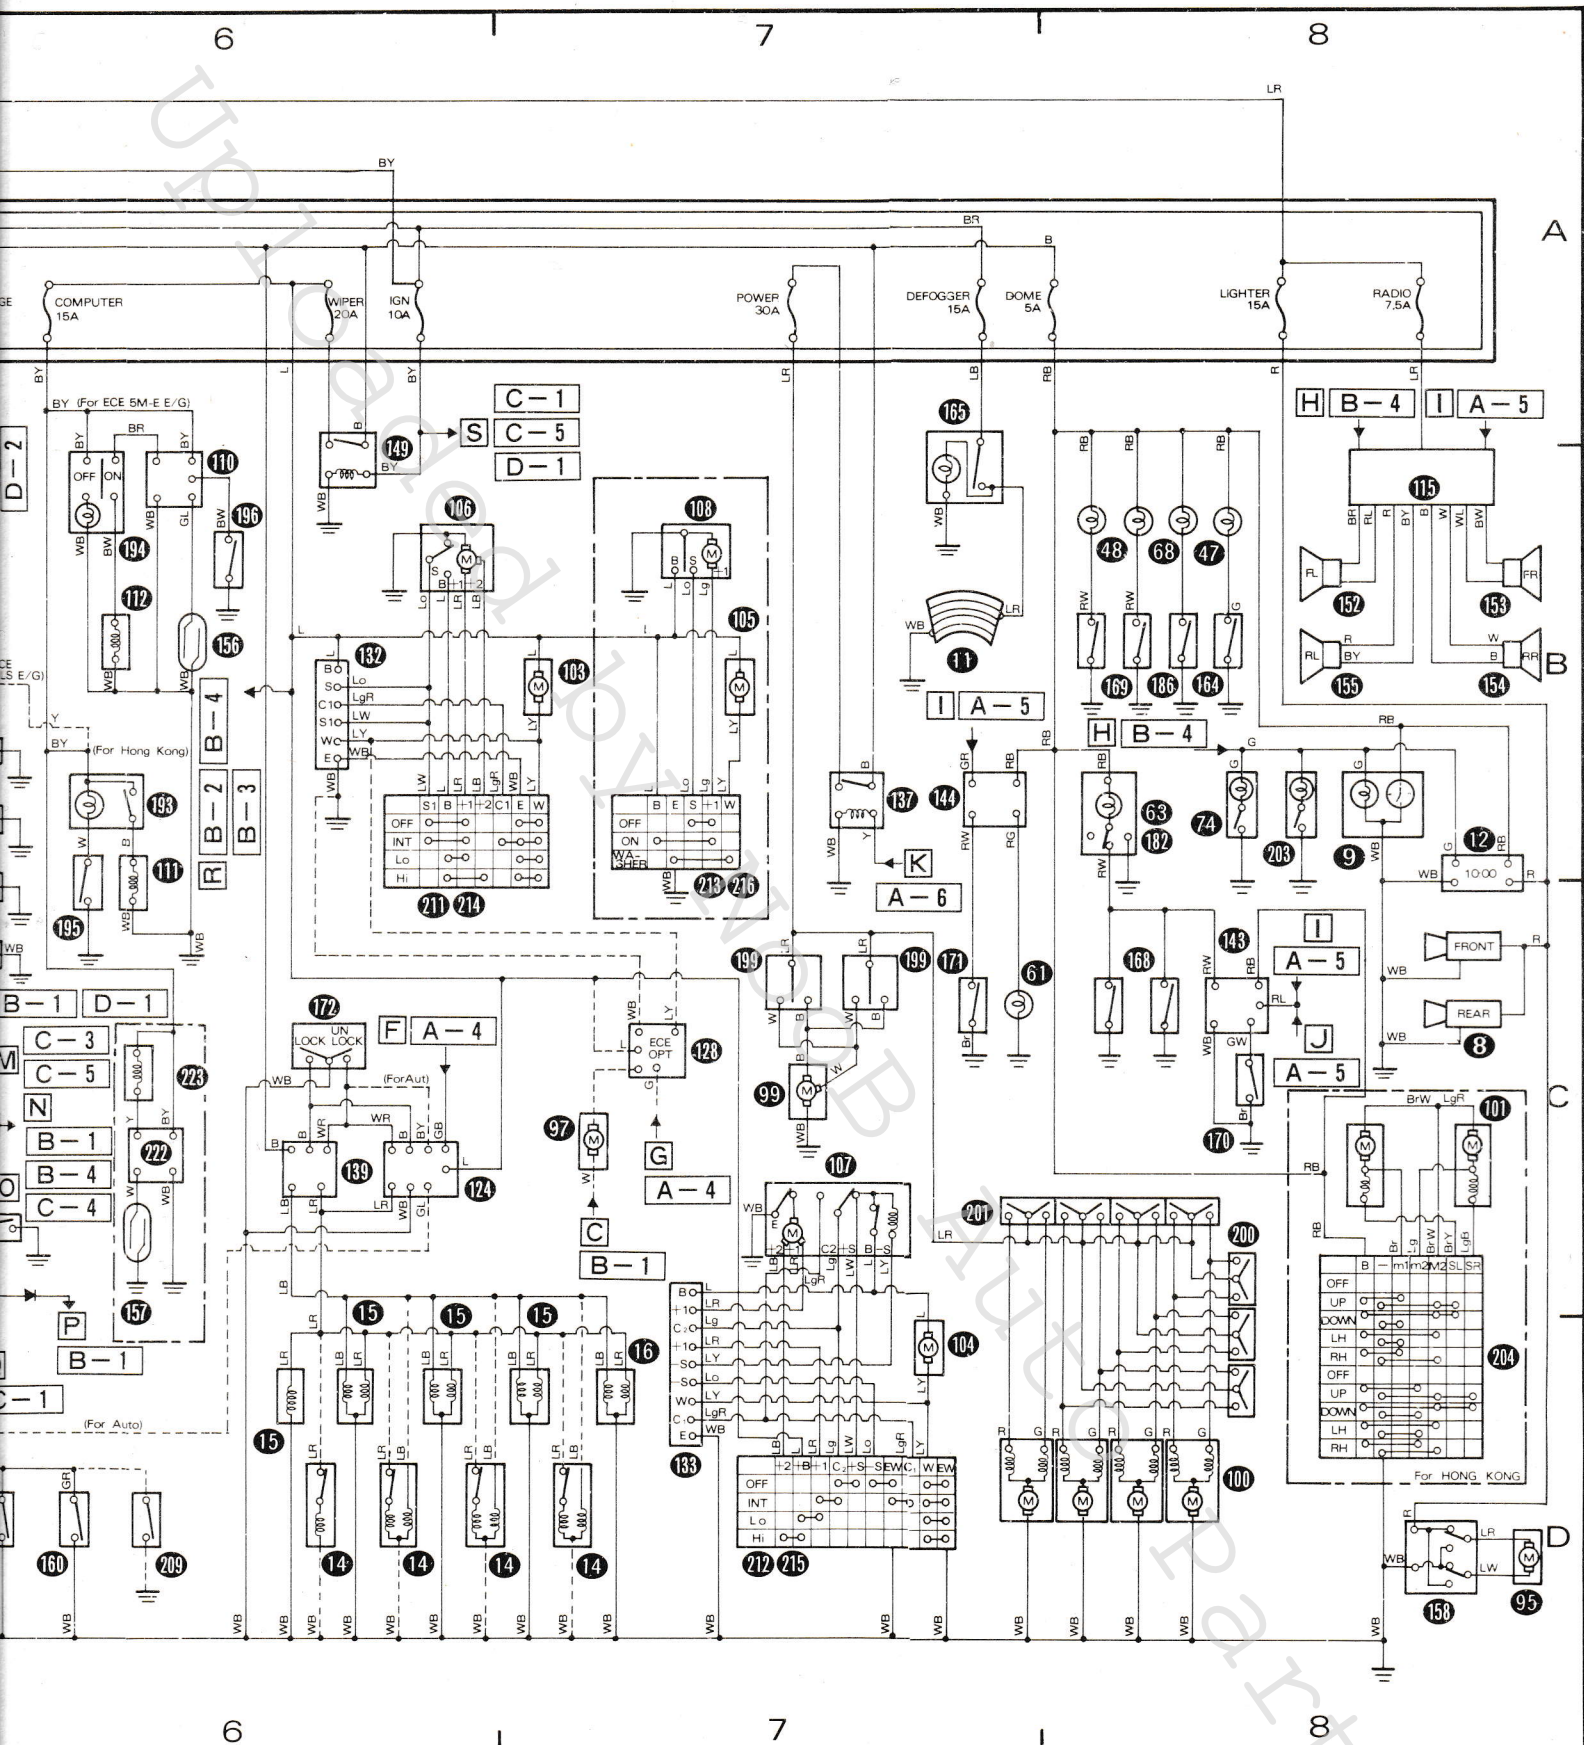

CROWN
(For EFI & Diesel)

INDEX


CROWN (For EFI & Diesel) ELECTRICAL WIRING DIAGRAM — 1980 PRODUCTION VEHICLE

NUMBER	GRID LOCATION	COMPONENTS	NUMBER	GRID LOCATION	COMPONENTS
1	B-1	BATTERY 12V	25	C-4	DIESEL SYSTEM:
2	C-2	EFI SYSTEM:	26	B-6	BATTERY 12V
3	D-2	AIR FLOW METER	27	C-6	DIODE
4	C-3	AIR VALVE	28	C-6	FUEL CUT SOLENOID
5	B-3	CIRCUIT OPENING RELAY	29	C-7	FUEL FILTER
6	B-4	CO CONTROL CONNECTOR	30	B-4	FUEL FILTER LIGHT
7	D-3	EFI COMPUTER	31	B-7	FUSIBLE LINK
8	C-2	FUEL PUMP	32	C-5	GLOW LIGHT
9	C-2	FUEL PUMP CHECK CONNECTOR	33	B-5	GLOW PLUG
10	B-2	FUEL PUMP FUSE 15A	34	B-6	GLOW PLUG RELAY
11	C-2	MAIN INJECTORS	35	A-4	GLOW PLUG TIMER
12	C-2	MAIN RELAY	36	B-5	IGNITION SWITCH
13	B-2	MAIN RELAY (For LHD)	37	C-6	NEUTRAL START SWITCH
14	C-3	RESISTOR	38	C-5	RESISTOR
15	C-3	START INJECTOR	39	C-5	STARTER MOTOR
16	B-3	START INJECTOR TIME SWITCH	40	B-7	STARTER RELAY
17	C-3	THROTTLE POSITION SENSOR	41	C-6	TIMING VOLT LIGHT
18	B-1	WATER THERMO SENSOR	42	D-8	WATER THERMO SENSOR (For Engine)
19	C-1	FUSIBLE LINK	43	B-7	DIESEL A/C SYSTEM:
20	C-1	IGNITER	44	C-8	A/C AMP
21	B-1	IGNITION COIL	45	B-8	A/C CUT RELAY
22	C-1	MOTORS:	46	B-8	A/C MICRO SWITCH
23	A-1	STARTER	47	B-8	FUSIBLE LINK
24	B-1	PICK-UP COIL	48	B-8	HEATER BLOWER MOTOR
		SWITCHES:	49	B-7	HEATER BLOWER RESISTOR
		IGNITION	50	B-7	HEATER BLOWER SWITCH
		NEUTRAL START	51	C-7	HEATER RELAY
			52	C-7	IDLE UP VSV
			53	B-7	MAGNET CLUTCH
				D-7	PRESSURE SWITCH
					THERMISTOR


DIAGRAMME DE CABLAGE ELECTRIQUE


Nombre	Repérage sur le plan	Composants
19	C-1	Allumeur
1	B-1	Batterie 12V
20	C-1	Bobine allumage
22	C-1	Bobine exploratrice
18	B-1	Connecteur fusible
23	A-1	Interrupteurs:
24	B-1	Allumage
		Démarrage neutre
21	B-1	Moteur:
		Démarrage
42	D-8	Système A/C Diesel:
52	B-7	Amplificateur de c
48	B-8	Commutateur de p
45	B-8	Commutateur de s
51	C-7	chauffage
50	C-7	Connecteur fusible
44	C-8	Embrayage magné
46	B-8	Commutateur de p
49	B-7	Mette au ralenti V
43	B-7	Microinterrupteur A/C
47	B-8	Moteur de ventilat
53	D-7	chauffage
		Relai de chauffage
		Relai de coupure A
		Résistance de venti
		réchauffeur
		Thermistor
25	C-4	Système Diesel:
32	C-5	Batterie 12V
35	A-4	Bougies incandesce
34	B-6	Commutateur d'all
		Commutateur d'all
		bougies incande

CROWN ELECTRICAL WIRING DIAGRAM — 1980 PRODUCT

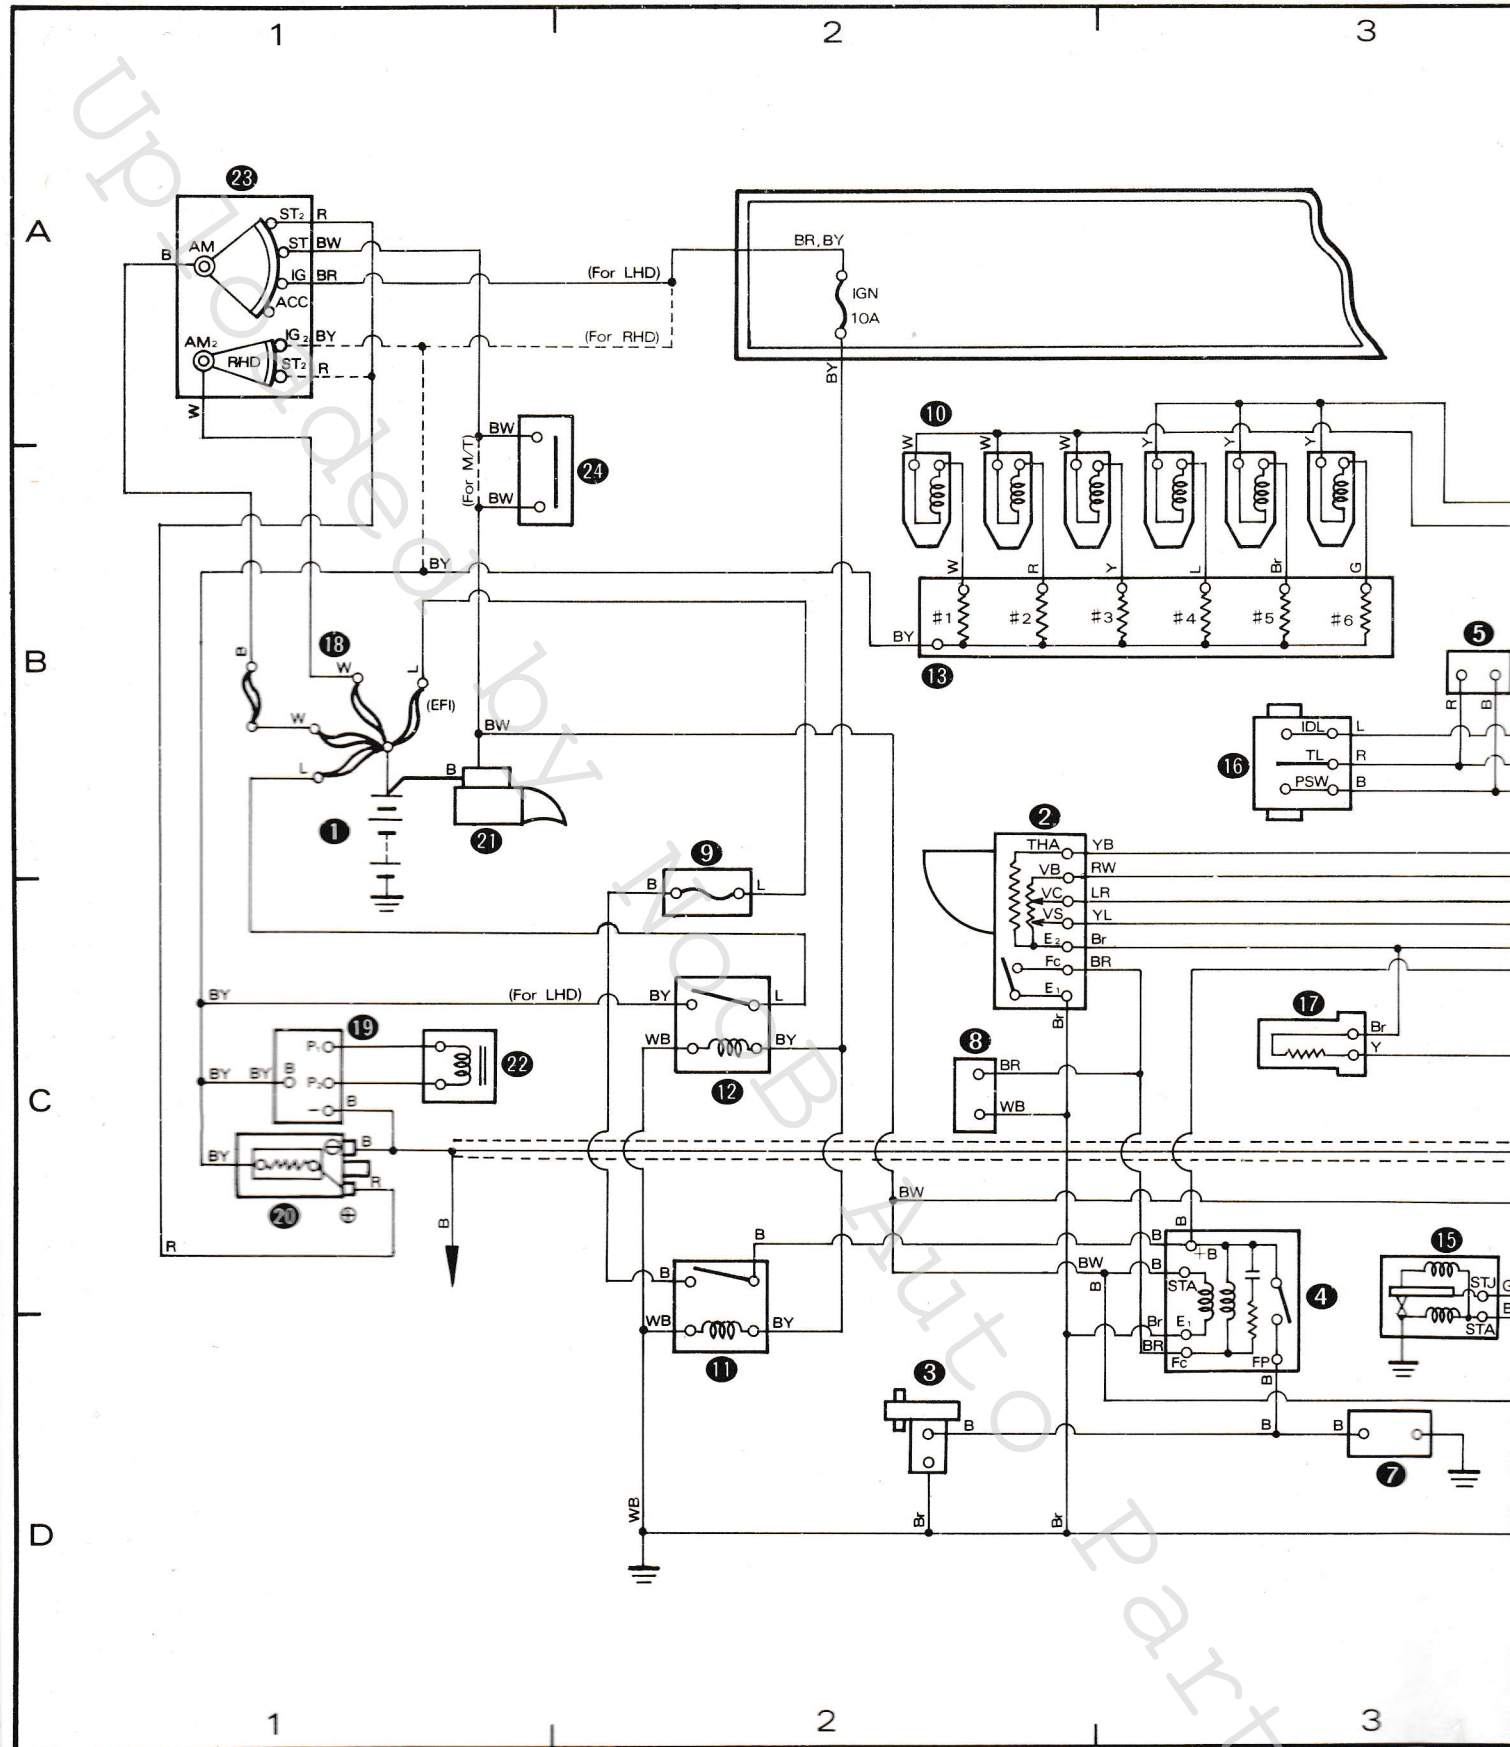

PRODUCTION VEHICLE (Fig.2)

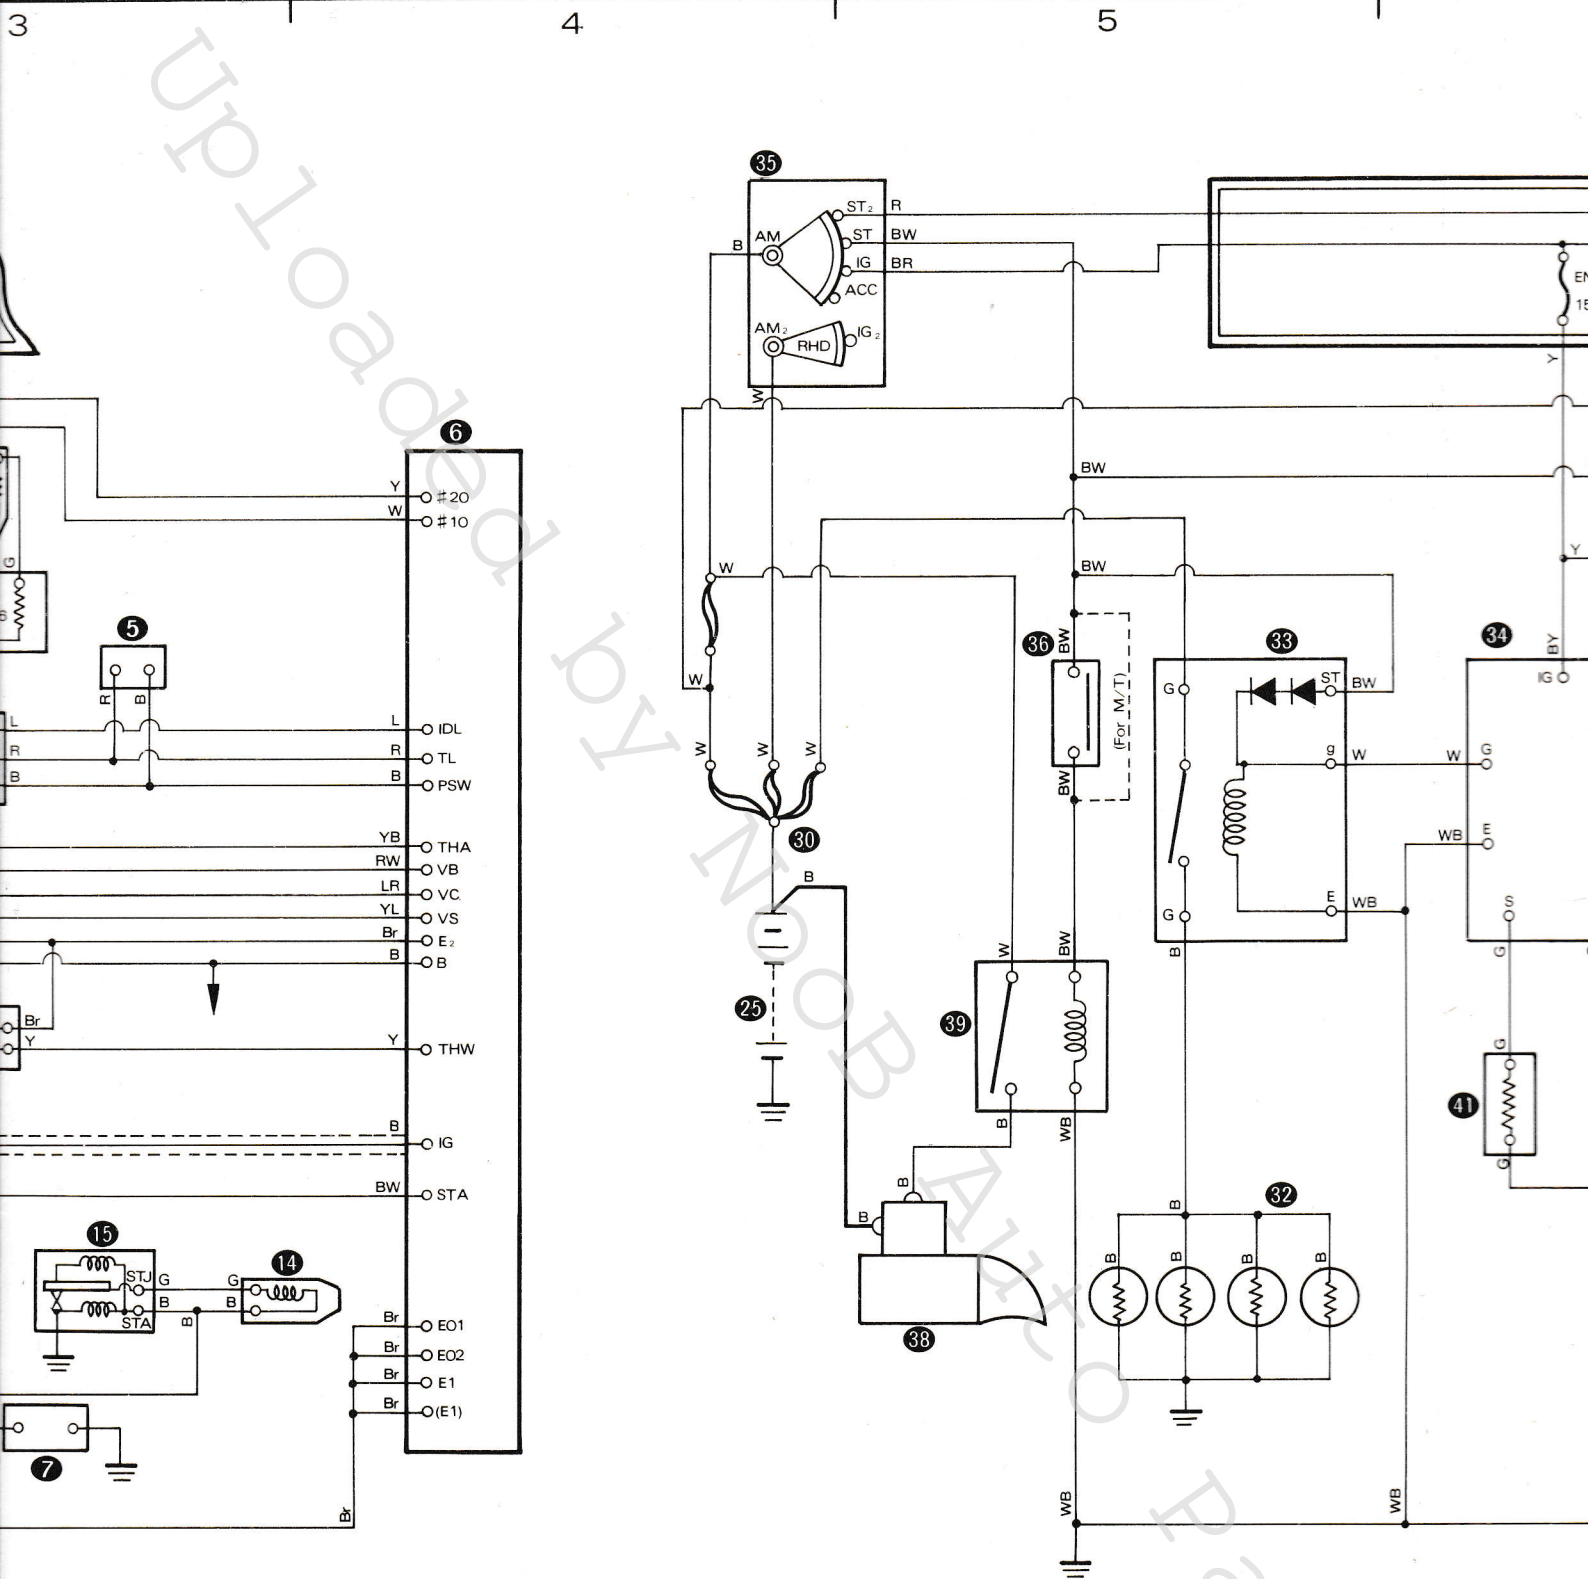

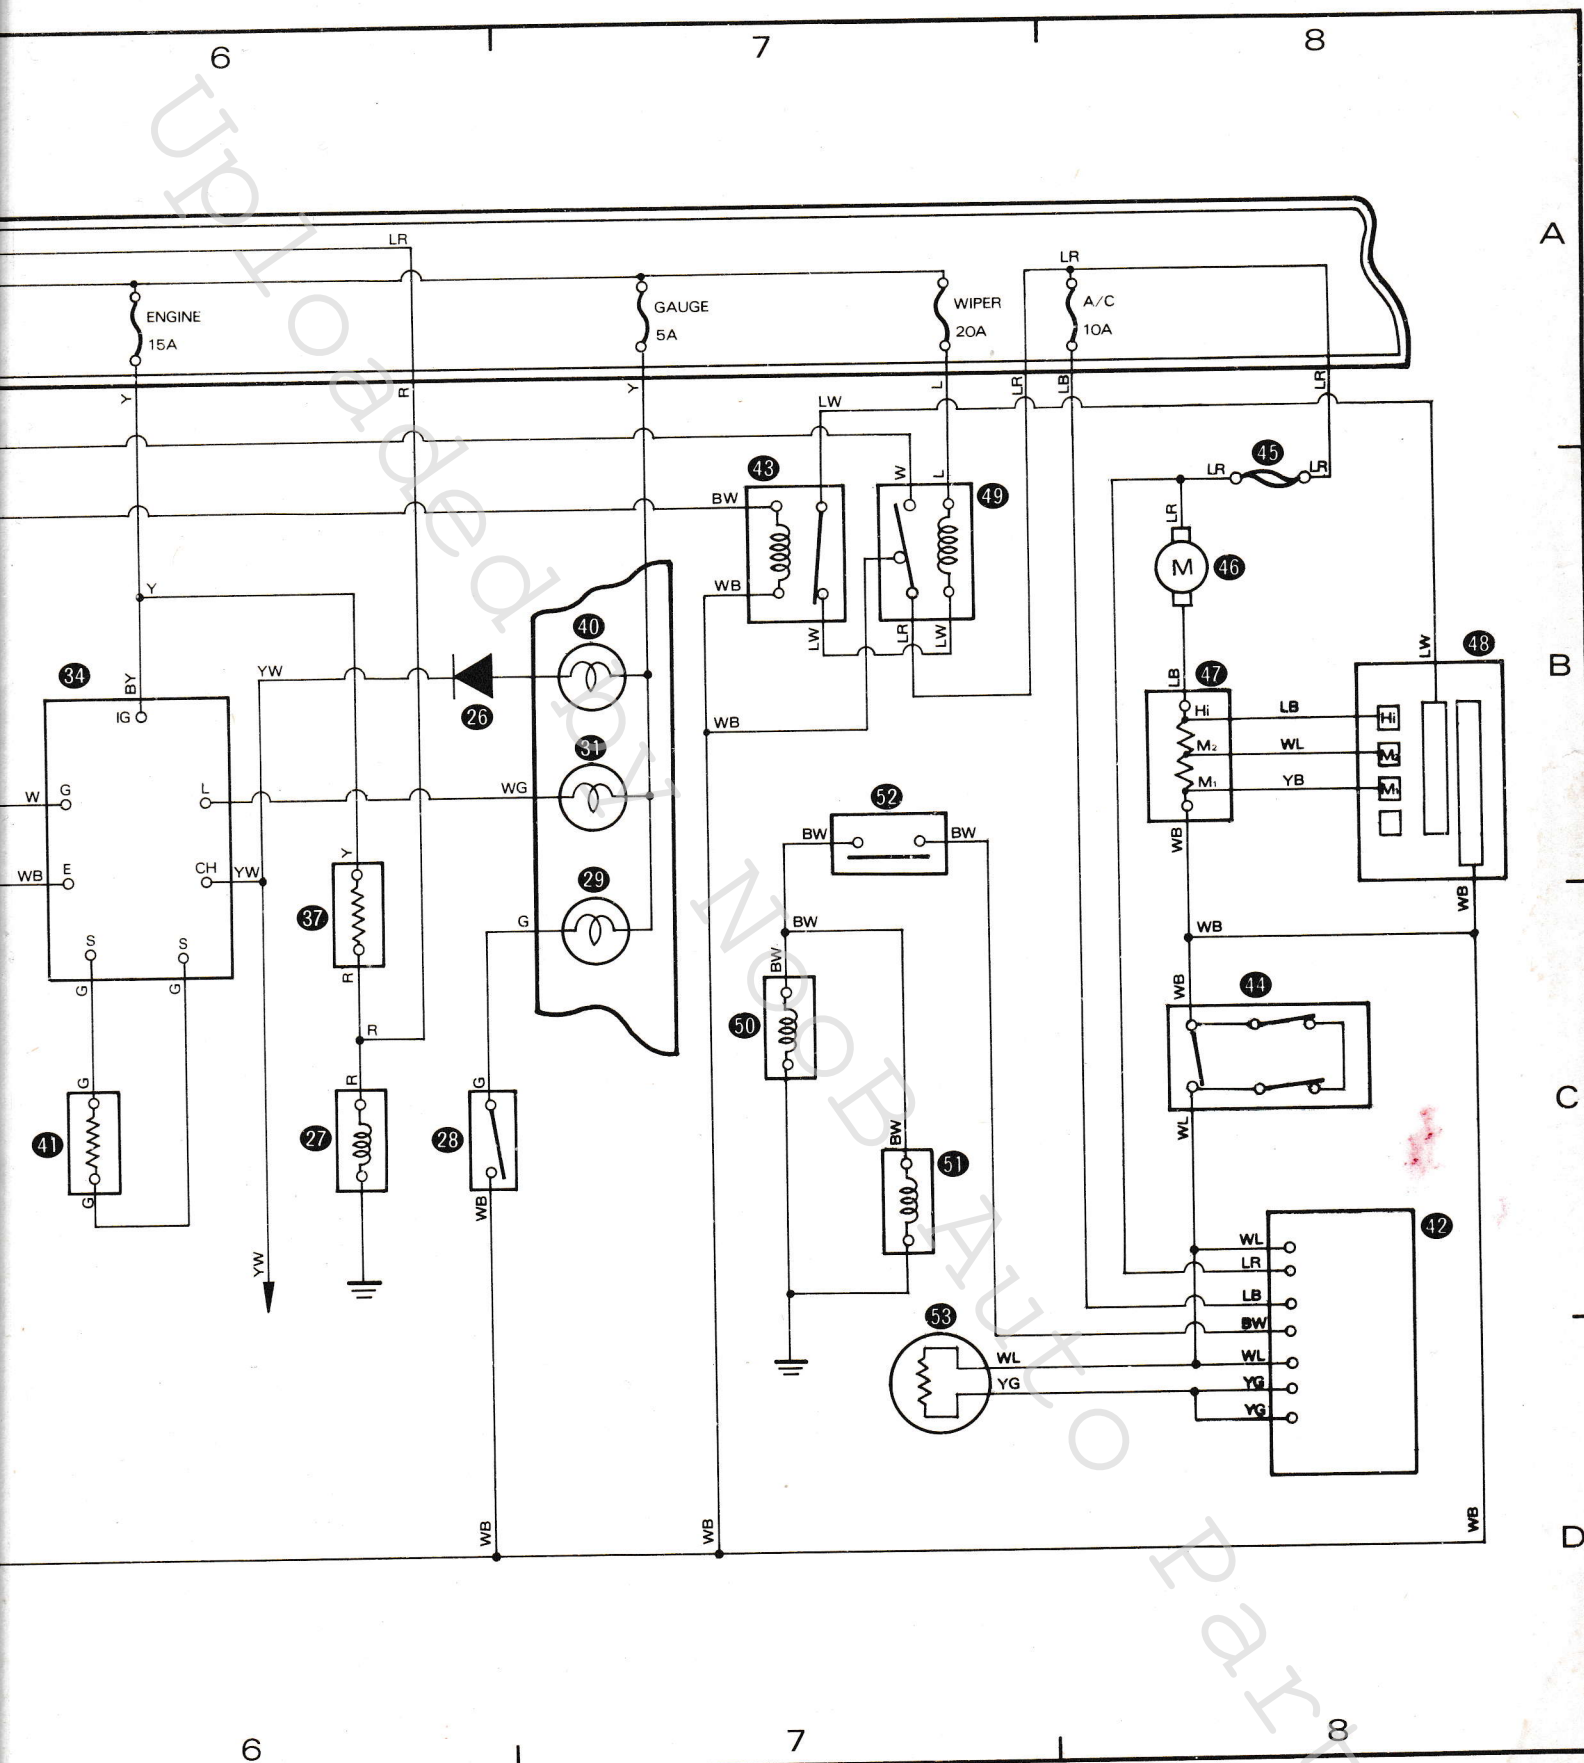

Prepared by

TOYOTA MOTOR SALES CO.,LTD.

Export-Technical Department

Haruhi Center

First Printing: April, 1980

Publication No. 98944

Printed in Japan

TOYOTA
SERVICE

PRINTED IN JAPAN ©